



Philips  
wireless speaker dock

**Bluetooth® and NFC**

for Android  
USB port for charging  
20W, rechargeable battery



**AS860**

## Stream your music and charge your Android phone

Dock to charge your Android phone and enjoy the sensational sound quality of the AS860 docking speaker. For added convenience, One-Touch with NFC enabled smartphones for Bluetooth pairing and easy music streaming.

### **Crystal clear sound**

- Wireless music streaming via Bluetooth
- High fidelity wireless Bluetooth®-aptX® music streaming
- Digital Sound Processing for lifelike, distortion-less music
- Bass Reflex Speaker System delivers a powerful, deeper bass
- Audio-in for easy portable music playback

### **Easy to use**

- Smartly designed FlexiDock to fit any Android phone
- Charge second mobile device via USB port


### **Advanced versatility**

- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Easy Bluetooth pairing Widget for Android phone
- Built-in rechargeable battery for even better portability

# PHILIPS

# Highlights

## NFC technology

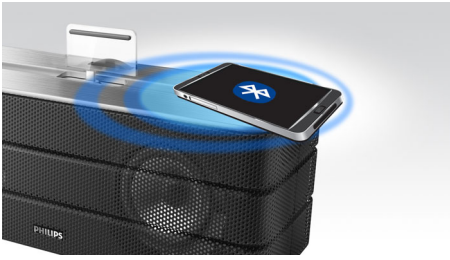


Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

## FlexiDock

The improved version of Philips FlexiDock features a micro USB connector, perfect for any Android powered phone. The docking mechanism is a great fit for any Android phone, thanks to the smooth and rounded edge design of the connector. It offers maximum adjustability. Simply slide the connector left or right, or rotate it to fit any location or orientation of the Micro USB port on your phone. This extreme flexibility is the first of its kind, catering to Android powered phones that are made by different manufacturers with no standardized position and orientation for the micro USB connector.

## Wireless music streaming

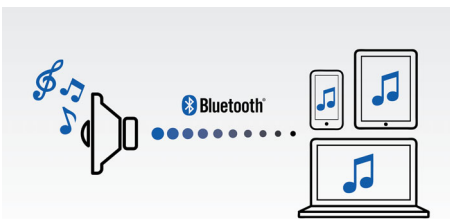

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as

smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.


## Bluetooth®-aptX® streaming

With advanced technology, sound streamed via Bluetooth® is brought to the next level. Standard Bluetooth® audio uses SBC codec that is built for basic audio transmission, leaving listeners sometimes disappointed and dissatisfied. The Philips speaker, however, is armed with high fidelity Bluetooth®-aptX® wireless technology - giving you rich, powerful and crystal clear sound. Compatible with both latest Android™ smartphones, tablets and other devices, Philips now delivers the audio quality you have come to expect. Wireless music never sounded this good.

## Easy Bluetooth pairing Widget

Available for download from Google Play, the Philips Bluetooth Audio Connect widget allows you to connect and pair your mobile device to any Philips Bluetooth audio device easily. Tap the widget to automatically add, pair and connect to any Philips Bluetooth audio device. Once paired, you can also rename and change the icons. This widget allows you to have several Philips audio devices, making it easy for you to switch between different Bluetooth devices easily. Simply tap to select your desired Philips audio device and start streaming.

## Digital Sound Processing

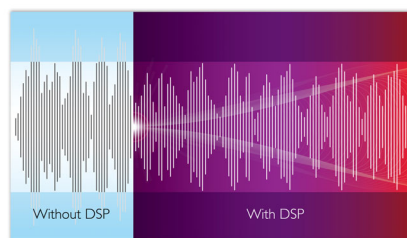

Advanced sound processing technology enhances the reproduction of your music so that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine

silence. Philips' proprietary Digital Sound Processing technology optimizes the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

## Bass Reflex Speaker System

Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.



# Specifications

## Compatibility

- micro USB connector: for charging all Android phones
- music streaming via Bluetooth: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPod touch 3rd gen. or later, Android phones and tablets, other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

## Sound

- Output power (RMS): 20W
- Sound System: Stereo
- Volume Control: Volume Control up/down

## Loudspeakers

- Speaker drivers: 2 x 3" full range woofers

## Connectivity

- Bluetooth version: 2.1

- Bluetooth profiles: A2DP, AVRCP, SPP
- Bluetooth range: line of sight, 10M or 30FT
- NFC: for Bluetooth pairing
- Support Bluetooth aptX: streaming
- Audio in (3.5mm)

## Dimensions

- Product dimensions (WxDxH): 325 x 115 x 117 mm
- Weight incl. Packaging: 2.5 kg
- Product weight: 2 kg
- Packaging dimensions (WxDxH): 358 x 166 x 196 mm

## Power

- Power supply: 100-240VAC, 50/60Hz, Battery
- Battery type: Li-ion (built-in)
- Operating time on battery: 8 hr



Issue date 2014-05-30

Version: 3.0.5

12 NC: 8670 001 03621  
EAN: 87 12581 69049 6

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)