




Philips  
Portable MP3-CD Player  
with 100-second Magic  
ESP™ and Dynamic Bass  
Boost

MP3-CD playback

EXP2542

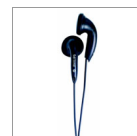

## Enjoy skip-free MP3 music

Get into your groove with the eXp2542 MP3-CD players and enjoy 10 hours of skip-free music on one MP3-CD. A classic favourite, it comes with LCD display and is a great choice for easy and hassle-free music enjoyment on the go

### **Play your CDs and MP3-CDs**

- Enjoy over 10 hours of music on one MP3-CD
- Play CD, CD-R and CD-RW discs

### **Jogproof**

- 100-second Magic ESP™

### **Enhanced bass performance**

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Specifications

## Sound

- D/A converter: 1-bit
- Frequency response: 20 - 20 000 Hz
- Signal to noise ratio: > 85dB
- Sound Enhancement: Dynamic Bass Boost
- Output Power: 2 x 4mW RMS
- Volume Control: digital

## Audio Playback

- Playback Media: MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: Hold, Next/Previous Album Search, Next/Previous Track Search, Repeat Play, Shuffle Play
- Electronic Skip Protection(CD): 45 seconds
- Magic ESP (MP3-CD): 100 seconds
- MP3 bit rates: 32 - 320 kbps
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 4.0 mm, 4.5V, centre +
- Headphone: 3.5 mm

## Convenience

- Display Type: LCD
- Indications: album number, battery status, Cd functions, DBB, ESP, time, track

## Accessories

- Headphones: AY3806 earphones
- Included accessories: User Manual

## Dimensions

- Master carton dimensions: 198 x 165 x 318 mm
- Master carton weight: 2.45 kg
- Master carton quantity: 6
- Packaging dimensions (W x H x D): 152 x 63 x 155 mm
- Packaging type: D-box
- Product dimensions (WxDxH): 140x140x27.5mm
- Product weight: 0.38 kg

## Power

- Battery Playing Time MP3-CD: 30
- Battery Playing Time CD: 20
- Battery type: AA, LR6, UM3

# Highlights

## Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Issue date 2014-02-06

Version: 2.0.9

12 NC: 8670 000 27815  
EAN: 87 12581 32029 4

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)