



Philips  
Wireless speaker

**Bluetooth®**

30 W Output Power  
20 hours play time  
Built-in power-bank function



TAS6305



## Party day and night

Keep the party going for longer with the waterproof Bluetooth speaker that gives you 20 hours play time. Strong bass keeps everyone moving. You can charge your smart device via the USB port thanks to the speaker's high-capacity battery.

### **20 hours play time. Tough and IPX7 waterproof.**

- Waterproof and ready to go
- 20 hours play time. Built-in power-bank function
- Charge smart devices via USB port
- Audio-in. Connect to almost any source

### **Play what you love**

- 2x 2.25" full-range drivers. Vibrant sound
- Two passive radiators for strong bass
- Anti-clipping function. Play it loud without distortion
- Bluetooth 5.0. Up to 20 m wireless range
- Play it loud. Pair for stereo

### **Take the party anywhere**

- Multi-color LED lights blaze to the beat
- Dimensions: 230x100x100 mm
- Pair with an identical speaker for stereo sound

# PHILIPS

Wireless speaker  
Bluetooth® 30 W Output Power, 20 hours play time, Built-in power-bank function

## Specifications

### Compatibility

- Smartphone/tablet APP control
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above

### Sound

- Output power (RMS): 30W
- Output power (MAX): 60W
- Frequency response: 100 Hz - 20 KHz
- Sound System: Stereo

### Loudspeakers

- Number of sound channels: 2
- Driver configuration: Full range
- Number of full range drivers: 2
- Full range driver diameter: 57mm
- Passive radiators: 2

### Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 20m or 66ft
- Bluetooth version: 5.0
- USB charging: 5V, 2A
- Audio Connections: 3.5mm Line in
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker scenario: Stereo
- Multiple speaker technology: TWS
- USB: Type-C

### Convenience

- Water resistance: IPX7
- Ease of Installation: Automatic pairing
- Volume control: Digital up/down
- Automatic power off
- Handsfree calling
- Call Management: Answer/End Call
- Built-in microphone
- Display screen: No
- Light Effect

### Power

- Power LED indicator: Blue
- Battery type: Lithium-ion (built-in)
- Battery Capacity: 4400mAh, 7.4V
- Operating time on battery: 20 hr
- Charging time: 6 hr
- Power bank: Yes, integrated

### Accessories

- 3.5mm audio cable
- Cable: USB charging cable
- Included accessories: Quick install guide, Warranty Card, World Wide Warranty leaflet

### Design and finishing

- Color: Black

### Product dimensions

- Product dimensions (W x H x D): 23 x 10 x 10 cm
- Product dimensions (W x H x D): 9.1 x 3.9 x 3.9 inch
- Weight: 1.764 lb
- Weight: 0.8 kg

### Packaging dimensions

- Packaging dimensions (W x H x D): 28.8 x 13 x 13 cm
- Packaging dimensions (W x H x D): 11.3 x 5.1 x 5.1 inch
- Gross weight: 2.205 lb
- Gross weight: 1 kg
- Nett weight: 0.8 kg
- Nett weight: 1.764 lb
- Number of products included: 1
- Packaging type: Box
- Tare weight: 0.2 kg
- Tare weight: 0.441 lb
- EAN: 48 95229 10222 4

TAS6305/00

## Highlights

### Waterproof and ready to go




This portable Bluetooth speaker is IPX7-rated—which means it can withstand total immersion in water up to 1 m deep for up to 30 minutes. You can party in the shower, by the pool, or even in the pool! The wireless range is 20 m.

### 20 hours play time



The 4400 mAh rechargeable Li-ion battery gives you 20 hours of play time and you can charge your smart device via the speaker's USB port. A full charge of the battery takes 6 hours.

### Play it loud. Pair for stereo

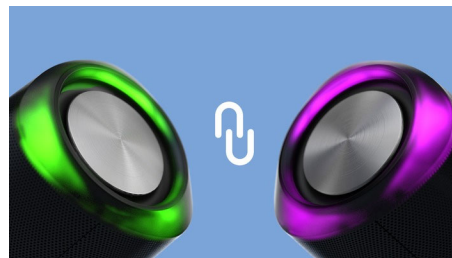

Twin passive radiators deliver strong bass and sound stays clear even at high volume. Want to make the party even bigger? Pair with an identical speaker for stereo sound. LED lights at each end of the speaker flash to the tunes.

### Audio-in for easy connection

Want to connect to an external audio source like a turntable or MP3 player? The audio-in socket at the back of the speaker lets you connect to almost any electronic device.



Issue date 2022-05-09

Version: 10.1.2

12 NC: 8670 001 62843  
EAN: 48 95229 10222 4

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)