

PHILIPS

CD Soundmachine

DAB

CD

AZB500



Enjoy music wherever you go

Bring big sound out with you for music on the go with this portable stereo system equipped with DAB, FM radio and multi-type CD playback

Easy to use

- 20-track CD programmable
- CD Shuffle/Repeat for personalised music enjoyment
- Audio-in for easy portable music playback

Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

The ultimate listening experience

- Play CD, CD-R and CD-RW discs
- DAB+, DAB and FM for full radio experience

Highlights

DAB+, DAB and FM


DAB+/DAB (Digital Audio Broadcasting) digital radio is, on top of FM analogue transmission, a new way of broadcasting radio via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear and crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can find. With DAB+ or DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no retuning on the move.

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD Shuffle/Repeat

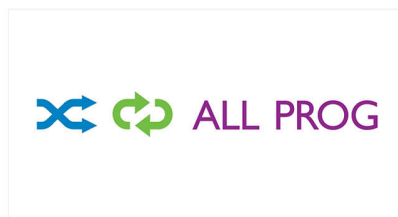

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favourite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.



Sound

Sound Enhancement: Dynamic Bass Boost
Sound System: Stereo
Speaker diameter: 3"
Volume Control: rotary

Loudspeakers

Built-in speakers: 2

Connectivity

3.5 mm stereo line in: (AUDIO IN)

Tuner/Reception/Transmission

Tuner Bands: FM Stereo
RDS: Programme Type, Radio Text, Station Name
Antenna type: Telescopic
DAB/DAB+: Info display, Menu, Smart scan

Convenience

Display Type: LCD

Power

Battery type: LR14
Battery voltage: 1.5 V
Mains power: 220 V - 240 V
Number of batteries: 6

Accessories

User Manual: multi-lingual
Warranty: Warranty leaflet

Dimensions

Packaging Depth: 158 mm
Product depth: 133 mm
Weight incl. Packaging: 2.4 kg
Packaging Height: 275 mm
Packaging Width: 326 mm
Weight: 2 kg
Product width: 300 mm
Product height: 240 mm

Audio Playback

Disc Playback Modes: Fast Forward/Reverse, Next/Previous Track Search, Repeat Play, Shuffle Play
Playback Media: CD, CD-R, CD-RW
Loader Type: Top
Programmable Tracks: 20

