

Philips
5.1 Home theatre

DVD

HTS3538



Powerful surround sound

from compact speakers

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speaker drivers offering 600 W of powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

Great listening experience

- 600 W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound
- Dolby Digital for ultimate movie experience

Designed to enhance your cinema at home

- Modern design to complement your home environment

Simply enjoy all your entertainment

- Audio-in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- DivX Ultra Certified for enhanced DivX video playback

PHILIPS


Highlights

600 W RMS power



600 W RMS power delivers great sound for movies and music

Dolby Digital

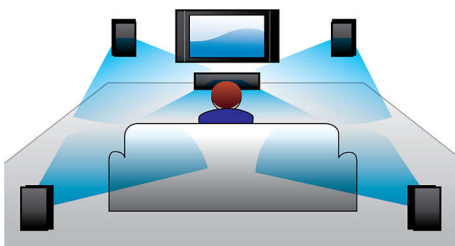

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

Plays it all



Play virtually any disc and any media devices you want - whether they are DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus in one convenient file format.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution—ensuring more details and more true-to-life pictures.

Audio in



Audio-in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio-in jack to enjoy your music with the superior sound quality of the Philips home cinema system.



Specifications

Sound

- Sound Enhancement: Dolby Digital Prologic II, Night Mode
- Sound System: Dolby Digital 5.1
- Subwoofer output power: 100 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Centre speaker output power: 100 W
- Tallboy speaker output power: 2 x 100 W
- Satellite speaker output power: 2 x 100 W
- Total Power RMS @ 30% THD: 600 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Centre speaker drivers: 1 x 2.5" woofers
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20–150 Hz
- Centre speaker impedance: 4 ohm
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Centre speaker freq. range: 150–20k Hz
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Subwoofer impedance: 4 ohm
- Drivers per Tallboy speaker: 1 x 2.5" woofer
- Tallboy speaker freq range: 150–20k Hz
- Tallboy speaker impedance: 4 ohm

Connectivity

- Front Connections: Music iLINK, USB
- Rear Connections: AUX IN 1, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital optical in, HDMI 1.4 output (ARC), Fixed FM Antenna

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40

Outer Carton

- EAN: 87 12581 64902 9
- Length: 90.5 cm
- Number of consumer packages: 1
- Width: 37.7 cm
- Gross weight: 13.21 kg
- Height: 26.1 cm
- Net weight: 11.08 kg
- Tare weight: 2.13 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passsthrough, System standby

Power

- Power consumption: 75 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: $\leq 0.9\text{ W}$

Packaging dimensions

- Height: 26.1 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 90.5 cm
- Depth: 37.7 cm
- Number of products included: 1
- EAN: 87 12581 64902 9
- Gross weight: 13.21 kg
- Net weight: 11.08 kg
- Tare weight: 2.13 kg

Product dimensions

- Height: 5.8 cm
- Width: 36 cm
- Depth: 33.5 cm
- Weight: 2.66 kg

Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Weight incl. Packaging: 12 kg
- Main Unit Weight: 2.4 kg
- Packaging (W x H x D): 905 x 261 x 377 mm
- Centre Speaker (W x H x D): 85 x 160 x 95 mm
- Centre Speaker Weight: 0.3 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 85 x 160 x 95 mm
- Subwoofer (W x H x D): 160 x 265 x 265 mm
- Front Speaker Weight: 2.6 kg
- Subwoofer Weight: 2.6 kg
- Front Speaker cable length: 3 m
- Rear Tallboy Speaker (W x H x D): 240 x 1007 x 240 mm
- Rear Speaker Weight: 1.6 kg
- Rear Speaker cable length: 7 m
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320 kbps

File Format

- Audio: mp3, wma
- Video: avi, DivX, mpeg, mpg
- Picture: JPEG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD,

Specifications

DVD +R/+RW, DVD -R/-RW, SVCD, VCD

music playback, Zoom

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Rotate, Slideshow with

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4



Issue date 2024-05-02

Version: 6.1.4

EAN: 87 12581 64902 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com