




Philips  
wireless speaker dock

**Bluetooth®**

for Android  
USB port for charging  
10W, Battery or AC operated

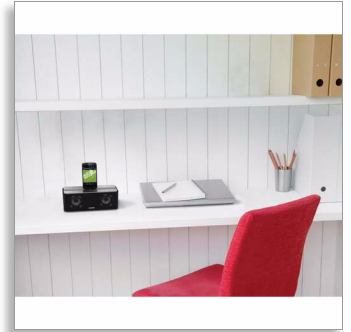

AS360

## Stream your music and charge your Android phone

This speaker, AS360, delivers superb sound in great style. Stream music from your phone wirelessly over Bluetooth for effortless enjoyment, dock it for a fast charge or charge a second device using USB.

### Crystal clear sound

- Wireless music streaming via Bluetooth
- High fidelity wireless Bluetooth®-aptX® music streaming
- Bass Reflex Speaker System delivers a powerful, deeper bass
- Audio-in for easy portable music playback

### Easy to use

- Smartly designed FlexiDock to fit any Android phone
- Charge second mobile device via USB port

### Advanced versatility

- Easy Bluetooth pairing Widget for Android phones
- Battery or AC power option for music enjoyment anywhere


**PHILIPS**

## Highlights

### FlexiDock

The improved version of Philips FlexiDock features a micro USB connector, perfect for any Android phone. The docking mechanism is a great fit for any Android phone, thanks to the smooth and rounded edge design of the connector. It offers maximum adjustability. Simply slide the connector left or right, or rotate it to fit any location or orientation of the Micro USB port on your phone. This extreme flexibility is the first of its kind, catering to Android phones that are made by different manufacturers with no standardised position and orientation for the micro USB connector.

### Wireless music streaming

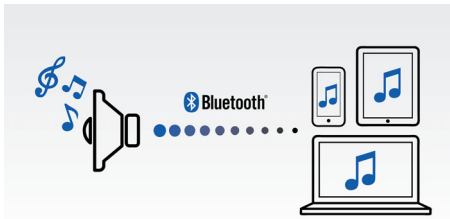

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

### Bluetooth®-aptX® streaming

With advanced technology, sound streamed via Bluetooth® is brought to the next level. Standard Bluetooth® audio uses an SBC codec that is built for basic audio transmission, leaving listeners sometimes disappointed and dissatisfied. The Philips speaker, however, is armed with high fidelity Bluetooth®-aptX® wireless technology — giving you rich, powerful and crystal clear sound. Compatible with the latest Android™ smartphones, tablets and other devices, Philips now delivers the audio quality you have come to expect. Wireless music never sounded this good.

### Easy Bluetooth pairing Widget

Available for download from Google Play, the Philips Bluetooth Audio Connect widget allows you to connect and pair your mobile device to any Philips Bluetooth audio device easily. Tap the widget to automatically add, pair and connect to any Philips Bluetooth audio device. Once paired, you can also rename and change the icons. This widget allows you to have several Philips audio devices, making it easy for you to switch between different Bluetooth devices easily. Simply tap to select your desired Philips audio device and start streaming.

### Bass Reflex Speaker System

Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

### AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## Specifications

### Android device compatibility

- Android version 2.1 or above
- Bluetooth version 2.1 or above
- Micro USB
- Check out: [www.philips.com/FlexiDock](http://www.philips.com/FlexiDock) for more details and the latest compatibility information

### DockStudio App for Android

- App name: DockStudio, Free download from Android Market
- Compatibility: Philips docking speaker for Android
- Music playback: Songbird Android App
- Bluetooth connection: between Android phone and docking speaker. Fully automatic connection when docked
- Internet radio: Tuneln with over 7000 stations
- Clock: Analogue display, Digital display
- Alarm: Multiple alarms, Sleep timer, Wake up to music, Wake up to nature sounds, Wake up to photos

### Sound

- Output power (RMS): 4 W
- Sound System: Stereo
- Volume Control: Volume Control up/down

### Audio Playback

- Cradle playback mode: Play and Pause, Next and Previous track, Charging Android phone

### Loudspeakers

- Neodymium magnet system

### Convenience

- Clock/Version: Digital

### Connectivity

- Bluetooth version: 2.1
- Bluetooth profiles: A2DP, AVRCP, SPP
- Bluetooth range: line of sight, 10 m or 30 ft

### Dimensions

- Product dimensions (WxDxH): 171 x 67 x 171 mm
- Weight: 0.75 kg
- Weight incl. Packaging: 1.03 kg

### Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2014-07-18

Version: 1.0.4

12 NC: 8670 001 03618  
EAN: 08 71258 16904 72

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)