

Philips  
5.1 3D Blu-ray Home  
theatre

### Crystal Clear Sound

Wireless rear speakers  
Built-in Wi-Fi, Bluetooth and NFC  
1000 W

HTB5580



## 1000 W Powerful cinematic surround sound

with wireless rear speaker

Enrich music and films with this Philips home theatre. With a 15-mm soft-dome, horn-loaded tweeter, audio has never sounded more distortion-free. With a powerful 3 x stronger "Ribbed" Bass Reflex system for ultra-lifelike low notes.

#### Great listening experience

- 1000 W RMS power delivers great sound for movies and music
- Crystal Clear Sound for super clarity and realism
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Powerful speakers with double basspipes for great sound

#### Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Built-in Wi-Fi to enjoy your connected media wirelessly
- Bluetooth wireless music streaming from your music devices
- Karaoke for endless singing entertainment at home

#### Designed to enhance your cinema at home

- Unleash your Miracast™- certified device content on your TV
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Wireless rear speakers for fewer wires across your room

# PHILIPS

# Highlights

## Crystal Clear Sound



Crystal Clear Sound for super clarity and realism


## 1000 W RMS power

1000 W RMS power delivers great sound for movies and music

## Full HD 3D Blu-ray

Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images creates the full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Built-in Wi-Fi

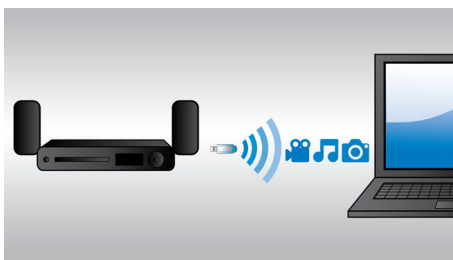

Thanks to built-in Wi-Fi, by simply connecting your home theatre directly to your home

network, you can experience a rich selection of popular online services. You can enjoy some of the best websites offering movies, pictures, infotainment and other online content tailored to fit your TV screen.

## Dolby TrueHD and DTS-HD


Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## Miracast™



Miracast™ is a peer-to-peer wireless screencasting standard formed via Wi-Fi Direct connections. Simplified user interface like mirroring the portable device's screen to a bigger screen on a Miracast™ certified device, not limited by pre-built codecs for decoding.


## NFC technology

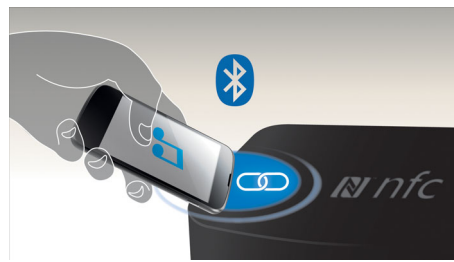

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled

smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## Wireless rear speakers

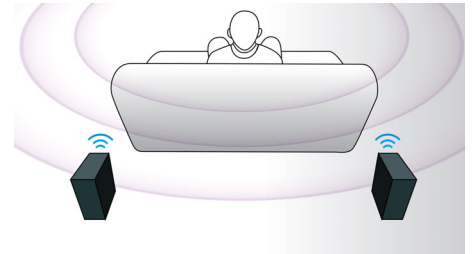

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections. \*\*The wireless connection is between the main unit and the rear speakers only. Rear speakers are both connected to wireless receiver modules.

## Double Bass Sound



Powerful speakers with a bass-reflex system and double bass pipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

## 5.1 3D Blu-ray Home theatre

Crystal Clear Sound Wireless rear speakers, Built-in Wi-Fi, Bluetooth and NFC, 1000 W

# Specifications

### Sound

- Total Power RMS @ 10% THD: 1000 W
- Sound System: Dolby Digital Plus, Dolby True HD, Dolby Digital 5.1, DTS-HD Master Audio Essential
- Sound Enhancement: Auto Volume Leveller, Dolby Digital Prologic II, Double Bass Sound, FullSound, Night Mode, Treble and Bass Control
- Centre speaker output power: 166 W
- Satellite speaker output power: 4 x 166 W
- Subwoofer output power: 166 W

### Loudspeakers

- Centre speaker freq. range: 150–20,000 Hz
- Centre speaker impedance: 3 ohm
- Loudspeaker types: 4 x Tallboy speakers, 1 x Centre speaker
- Satellite speaker freq range: 150–20,000 Hz
- Satellite speaker impedance: 3 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 8" woofer
- Subwoofer freq range: 20–150 Hz
- Subwoofer impedance: 3 ohm

### Connectivity

- Front Connections: Audio in, Microphone In, USB
- Rear Connections: Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), Easy-Fit Speaker Jacks
- Integrated Connections: Bluetooth, Wi-Fi, Miracast, NFC, Wireless rear audio

### Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Deep colour
- Ease of Use: DLNA

### Tuner/Reception/Transmission

- Tuner Bands: FM

### Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

### File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, DivX, mkv, mp4, mpeg, mpg

### Audio Playback

- Compression format: AAC, MP3, WAV, WMA, Dolby Digital, DTS, FLAC
- MP3 bit rates: 8 - 320 kbps

### Video Playback

- Compression formats: AVCHD, MPEG1, MPEG2, MPEG4, DivX Plus HD

### Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

### Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan

### Karaoke Playback

- Standard functions: Mic volume control

### Power

- Power consumption: 160 W
- Power supply: 110 - 127 V/220 - 240 V, 50/60 Hz
- Standby power consumption: < 0.5 W

### Sustainability

- Packaging: Electronic User Manual

### Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, VDE to 2-pin Flat Adapter, World Wide Warranty leaflet, HDMI cable, User Manual, Wireless rear audio receiver

### Dimensions

- Main Unit (W x H x D): 435 x 58 x 291 mm
- Centre Speaker (W x H x D): 314 x 103 x 83 mm
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 1178 x 101 mm
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 100 x 1178 x 101 mm
- Rear Speaker cable length: 6 m
- Subwoofer (W x H x D): 228 x 293 x 310 mm
- Subwoofer cable length: 3 m

### Packaging dimensions

- EAN: 87 12581 71538 0
- Packaging dimensions (W x H x D): 95.4 x 49.4 x 37.6 cm
- Gross weight: 26.94 kg
- Net weight: 24.39 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.55 kg
- Type of shelf placement: Laying

### Outer Carton

- EAN: 87 12581 71538 0
- Gross weight: 26.94 kg
- Outer carton (L x W x H): 95.4 x 37.6 x 49.4 cm
- Net weight: 24.39 kg
- Number of consumer packages: 1
- Tare weight: 2.55 kg

### Product dimensions

- Product dimensions (W x H x D): 43.5 x 5.8 x 28 cm
- Weight: 2.67 kg



Issue date 2016-04-18

Version: 3.0.3

12 NC: 8670 001 13142  
EAN: 87 12581 71538 0

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To check whether Video on Demand is available in your country, please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).  
\* DivX, DivX Certified and associated logos are trademarks of DivX Networks, Inc. and are used under licence.  
\* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.