

PHILIPS

wireless portable
speaker

ShoqBox

Bluetooth®

Waterproof, shockproof

Multi-coloured lights

SB300B



Shocking beats, blazing lights

Get ready to unleash the beats! Philips ShoqBox SB300 cranks out explosive, pumping bass through twin bass radiators. Amp up the energy with lights that pulse to the beat. Rugged, shockproof and waterproof — take the party anywhere.

Simple to use

- Audio input for easy connection to almost any device
- Wireless music streaming via Bluetooth
- Built-in microphone for hands-free calls

Shockingly big beats


- Explosive beats blast through twin bass radiators
- Powerful sound from front-firing speaker

Start the party anywhere

- Light it up! Multi-coloured lights blaze to the beat
- Built outdoor tough — rugged, shockproof, water resistant
- Built-in rechargeable battery keeps the party pumping

Highlights

Explosive beats

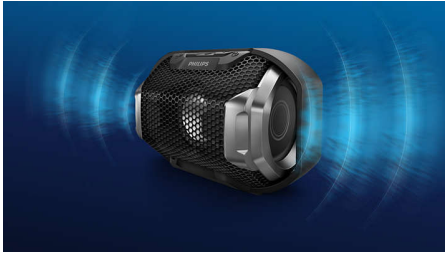


With its 38.1-mm (1.5") full-range front firing speaker driver and large twin bass radiators at the sides of the speaker for extra bass boost and extension, the ShoqBox SB300 packs power with impressive precision.

Blazing lights



Step into the light and feel the power of pounding beats and blazing lights. Multiple colours pulse to the rhythm of the beat, bringing your music to life and adding another dimension to the party. Or if you'd rather dance in the dark, that's fine too — just flip a switch and it's lights out.

Outdoor toughness

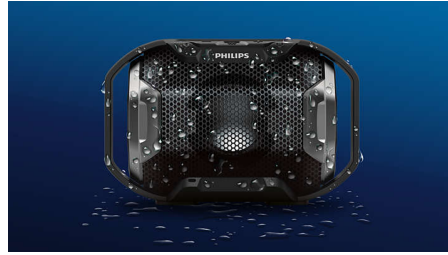

Built durable and tough enough for any adventure. Take it to the streets or into the wilderness. This speaker can handle it. Meeting strict IPX7 standards for water resistance you can even take it underwater, up to 1-meter deep for 30 minutes. And if you drop the speaker while dropping the beat, don't worry, it's shockproof.

Built-in rechargeable battery

Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of tangled power cords and the inconvenient search for an electrical socket. Enjoy great music with the freedom of portability now.

Bluetooth wireless

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Hands-free calls

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

Specifications

Sound

Output power (RMS): 4 W

Sound System: Stereo

Speakers: 1 x 38.1-mm (1.5") full range driver and 2 passive radiators

Design and finishing

Colour: Black

Connectivity

Bluetooth profiles: A2DP, AVRCP, HFP

Bluetooth range: Line of sight, 20 m or 66 ft

Audio in (3.5 mm)

Convenience

Water resistance: IPX7

Built-in microphone: for speaker conference

Shock resistant

Compatibility

Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above

iPod touch: 3rd generation or later

iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3

iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S

other Bluetooth-enabled device

work with: Bluetooth 4.0 or below

Power

Battery type: built-in Li-ion

Operating time on battery: 8 hour(s)

Accessories

Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

Dimensions

Weight incl. Packaging: 0.35 kg

Product dimensions (WxDxH): 117 x 74 x 77 (7.2" x 3.2" x 3.4") mm

Packaging dimensions (WxDxH): 143 x 91 x 90 mm (9.2" x 3.7" x 3.8")

Product weight: 0.23 kg

