

Philips
Mini Hi-Fi System

Bluetooth® and NFC

FXD18



Mega sound goes wireless

Stream music wirelessly over Bluetooth® from any smart device, with NFC technology for instant pairing. A dual amplifier offers better sound quality and 300W RMS total output power gives music a solid punch.

Powerful sound you can hear and feel

- MAX Sound for instant power boost
- Dual amplifier for better sound performance
- 300W RMS total output power

Multiple source MP3 music

- Stream music wirelessly via Bluetooth™ from your smartphone
- Enjoy MP3 music directly from your portable USB devices
- Audio-in for portable music playback

Convenient and easy to use

- Karaoke for endless singing entertainment
- One-Touch with NFC-enabled smartphones for Bluetooth pairing

Enjoy your favorite movies and music

- HDMI 1080p upscales to high definition for sharper pictures
- Play DVD, DivX®, (S)VCD, MP3-CD, CD(RW) and Picture CD

PHILIPS

Highlights

Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Enjoy MP3 music directly

Enjoy MP3 music directly from your portable USB devices

Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.




HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

NFC technology

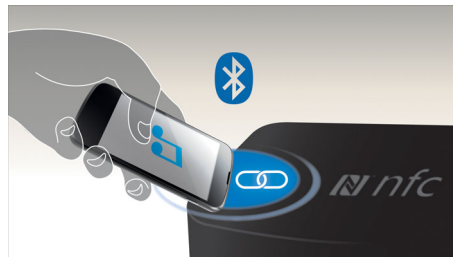

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

Specifications

Sound

- Total Sound Power (RMS): 300 W
- Sound Enhancement: MAX Sound

Loudspeakers

- Main Speaker: 2" tweeter, 2 way, Bass Reflex Speaker System, 5.25" woofer
- Number of Loudspeakers: 2

Audio Playback

- Number of Discs: 1
- Loader Type: Tray
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Disc Playback Modes: Repeat/one/disk/program, Shuffle Play, Fast Forward/Backward, Next/Previous Track Search, Repeat Play, 20-Track Programmable
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle, Stop

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Station presets: 40

Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Display Type: VFD display

Connectivity

- Audio Connections: RCA Aux in
- Bluetooth profiles: A2DP
- Audio in (3.5mm)
- NFC technology

Accessories

- Remote control: 21key
- Included accessories: User Manual, Quick start guide, Guarantee booklet

Dimensions

- Set dimensions (W x H x D): 467 x 140 x 320 mm
- Speaker Width: 205 mm
- Speaker Height: 309 mm
- Speaker Depth: 145 mm
- Packaging dimensions (W x H x D): 516 x 374 x 370 mm
- Net Weight: 7.5 kg

Power

- Power supply: 110-240V

Video Playback

- Disc Playback Modes: A-B Repeat, Disc Menu, Fast Backward, Fast Forward, Pause
- Number of Discs: 1
- Playback Media: DivX, DVD



Issue date 2016-12-14

Version: 2.0.3

12 NC: 8670 001 13955
EAN: 87 12581 71880 0

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com