FWD197/98



Quick start guide

- 1 Connect
- 2 Setup
- 3 Enjoy



What's in the box











Remote control

Composite video cable (yellow)


MP3 link cable

Quick start guide


User manual

1

Connect

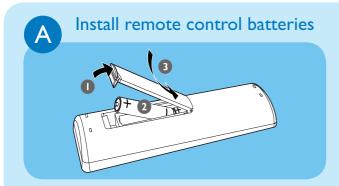


- 1 Open the battery compartment.
- 2 Insert 2 AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

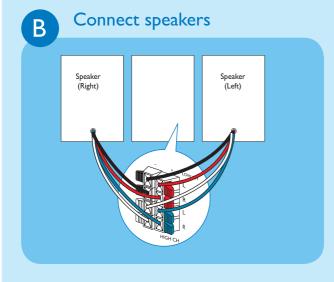


- Note
 - Ensure that the colors of the speaker wires and terminals are matched.
- 1 Hold down the socket flap.
- Insert the stripped part of the wire completely.
- Insert the right speaker wires to "HIGH CH R/LOW CH R", left speaker wires to "HIGH CH L/LOW CH L".
- Insert the red/blue wires to "+", black/grey wires to "-".
- 3 Release the socket flap.

1 Connect

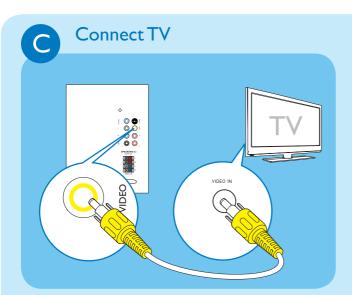

- 1 Connect the supplied composite video cable to:
 - the **VIDEO** socket on this unit.
 - the video input socket on the TV.

Connect power

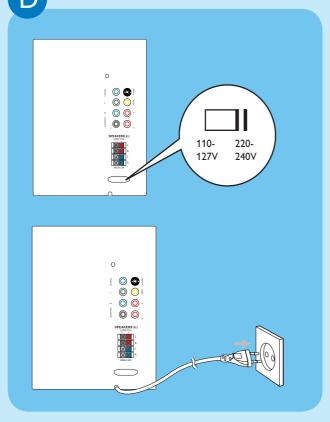

Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC power cord, ensure you have completed all other connections.
- 1 Switch the voltage selector to the local power line voltage.
- 2 Connect the AC power cord to the wall socket.

Tip


• See the User Manual for how to connect other devices to this system.

2 Setup



Set the clock

- 1 In standby mode, press and hold OSD/ DISPLAY on the remote control.
- → The hour digits are displayed and begin to blink.
- 2 Press **VOL** +/- on the remote control to set the hours.
- 3 Press OSD/DISPLAY.
- → The minute digits are displayed and begin to blink.
- 4 Press **VOL** +/- to set the minutes.
- 5 Press OSD/DISPLAY to confirm the time.

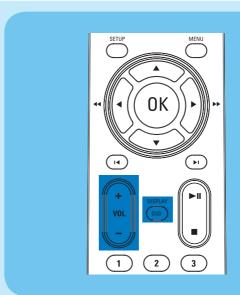

3

Enjoy



Play disc


- 1 Press **DISC** to select the disc source.
- 2 Press OPEN/CLOSE ≜ to open the disc compartment.
- 3 Insert a disc with the printed side facing up, then close the disc compartment.
- → Play starts automatically.
- To pause/resume play, press ▶ ■
- To stop play, press ■.



Play from USB

- 1 Insert the USB plug of a USB device into the USB socket.
- 2 Press **USB** to select the USB source.
- → Play starts automatically.
- To pause/resume play, press ▶■■.
- To stop play, press ■.



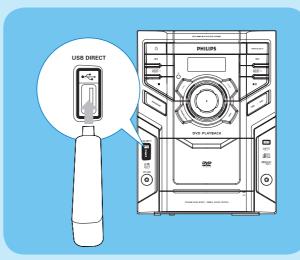

3 Enjoy




Program and tune to radio stations



- For optimal FM reception, fully extend and adjust the position of the FM antenna.
- For optimal MW reception, adjust the position of the main unit.
- 1 In tuner mode, press and hold **PROG** for 2 seconds to activate automatic program mode.
- ► [AUTO] (auto) is displayed and begins to blink.
- All available stations are programmed in the order of waveband reception strength.
- The first programmed radio station is broadcast automatically.
- In tuner mode, press

 In

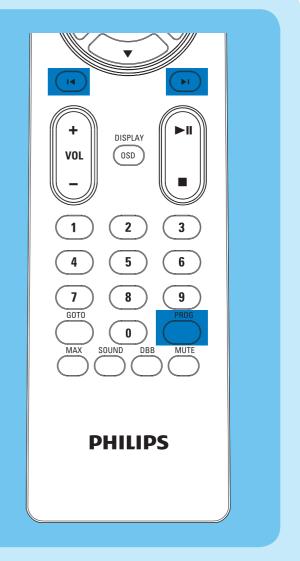



• Detailed features and additional functions are described in the user manual.



© Royal Philips Electronics N.V. 2009 All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

