




Philips  
docking speaker

for iPod/iPhone/iPad

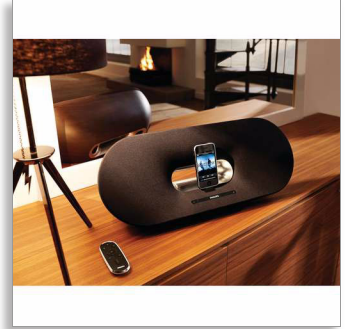

DS9000

# Experience true fidelity

Obsessed with sound

Philips docking speaker is the gateway to everything you hold precious about music. Built with premium components & natural wood, it unleashes full fidelity from iPod/iPhone/iPad, offering an authentic sound experience true to the original.

## Peerless sound quality

- Audiophile-quality drivers for authentic sound reproduction
- Passive crossover for full audible spectrum reproduction
- Pure digital processing technology for best sound clarity
- Precisely tuned bass pipes for deep, tight bass reproduction
- Smooth-edged enclosure to limit sound diffraction

## Exquisite design and finishing

- Premium design in natural wood, fabric and metal
- Sensually curved back for elegance and precise sound
- Sustainable wood source to preserve ecological balance

## Advanced intuitive control


- Proximity sensor to activate backlit control panel
- Dock any iPod/iPhone, even in its case
- Free DockStudio app for internet radio & other cool feature



# PHILIPS

# Highlights

## Passive crossover

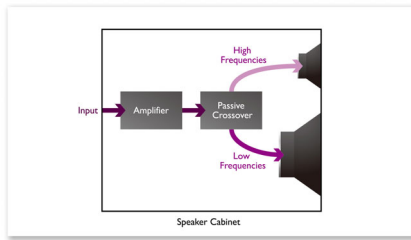

Passive crossover design lets you hear every note clearly so your music comes out amazingly pure, natural and complete. Through complex engineering, each part of the full audible spectrum of sound frequencies is separated and sent to the appropriate drivers. Signals beyond a driver's frequency response are never sent, so sound quality is vastly improved and distortion level greatly reduced. Together with premium electronic components, passive crossover delivers audio that is coherent, uncompromised and faithful to the original.

## Pure digital sound



Advanced pure digital sound processing technology offers vastly superior sound performance compared to the conventional analog audio processing technology that is found in docking players that use the analog audio output from an iPod/iPhone. By collecting the iPod's/iPhone's digital audio output and employing digital processing at each stage of the circuit, a much higher Signal-to-Noise ratio is produced. The result is unsurpassed sound clarity that is in perfect balance.

## Curved back for better sound

The clean lines and sensuality of the curved back cover not only looks fabulous – it also creates a

more effective structure for acoustics. Carefully designed, the curve increases the stiffness of the speaker cabinet, dramatically reducing internal resonance and resulting in more precise and natural sound reproduction. You get to enjoy both lovely looking speakers and sensational sound.

## Proximity sensor



Most top-grade audiophile appliances allow the display to be turned off – for absolute enjoyment of music, and for power to be focused on sound reproduction. With the proximity sensor feature, you can enjoy that too. Walk away and the illuminated functional keys automatically dim. When your hand draws near, the functional keys light up so you can control your music without fuss.

## DockStudio app on App Store



The free app adds an array of exclusive cool features to your docking speaker. You can check the weather, tell the time and even use your favorite images as wallpaper. DockStudio also lets you listen to thousands of Internet radio stations worldwide. More updates on skin styles and new functions on the way.

# Specifications

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

## iPod/iPhone/iPad App

- Compatibility: iOS 4.3 to iOS 10.3

## iPod compatibility

- Compatible with: iPod, iPod mini, iPod with color display, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod classic, iPod touch, iPod touch 2nd generation, iPod touch 2nd gen 8/16/32GB, iPod 5th generation

## iPod/iPhone App

- Free download from App store
- App name: DockStudio
- Playback: album/track navigation, playback controls
- Sound settings: 5 band equalizer, DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- Clock: analog display, digital display
- Alarm: multiple alarms, sleep timer, wake up to music, wake up to nature sounds, wake up to photo

## Audio playback

- Docking playback modes: next and previous track, play and pause

## Sound

- Sound system: stereo
- Volume control: up/down
- Output power: 2 x 50 W RMS

## Loudspeakers

- Speaker drivers: 2 x 1" tweeters, 2 x 4" woofers
- Loudspeaker enhancement: bass reflex speaker system

## Connectivity

- Aux in

## Convenience

- Charging device: iPhone, iPod

## Power

- Power supply: 100 - 240V AC, 50/60Hz

## Accessories

- Cables/Connection: 3.5 mm stereo line in cable, power cord
- Remote control
- Others: Quick start guide
- Warranty: Warranty Certificate, World Wide Guarantee booklet

## Dimensions

- Gross weight: 9.6 kg
- Packaging width: 619 mm
- Packaging height: 276 mm
- Packaging depth: 276 mm
- Weight: 6.5 kg
- Main unit depth: 216 mm
- Main unit height: 214 mm
- Main unit width: 562 mm



Issue date 2017-12-30

Version: 12.0.6

12 NC: 8670 000 61833  
EAN: 87 12581 53614 5

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)