

Philips  
2.1 Home theater

Crystal Clear Sound

HTS3260



# Obsessed with sound

True-to-life sound in perfect style

Enjoy your movies, music and TV experience in great surround sound

## **Superior listening experience**

- Crystal Clear Sound for superbly clear and detailed sound
- Dolby Virtual Speaker for realistic surround sound
- 300W RMS power delivers great sound for movies and music

## **Designed to enhance your living space**

- Sleek high gloss finishing with unique touch controls
- Compact design that fits anywhere

## **Connect and enjoy all your entertainment**

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Sharper high definition pictures with HDMI 1080p
- MP3 Link plays music from portable media players

# PHILIPS


# Highlights

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.


## Crystal Clear Sound

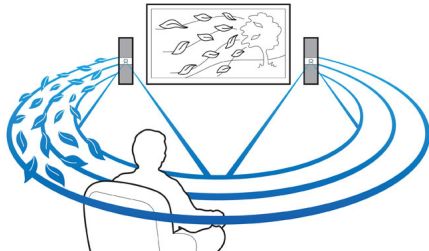

With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail, the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source - whether it's an action movie, a musical or a live performance - faithfully, precisely and without any distortion. Philips home theaters with

Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

## Dolby Virtual Speaker

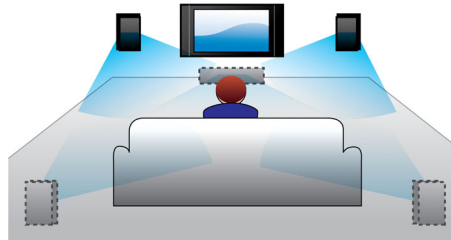

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## 300W RMS power




300W RMS power delivers great sound for movies and music

## Sharper HD pictures



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## MP3 Link

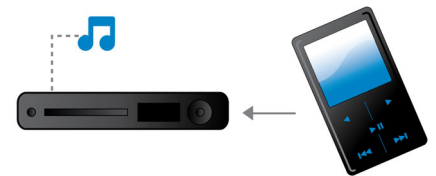

MP3 Link allows playback of MP3 files, directly from your portable media player, on your home theater system. Simply connect your portable MP3 player to the built-in MP3 Link jack and enjoy your MP3 music in the superior sound quality delivered by the Philips home theatre system. MP3 Link brings your portable music into the comfort of your living room.

# Specifications

## Accessories

- Included accessories: Remote Control, FM antenna, User Manual, Quick start guide, World Wide Warranty leaflet, Batteries for remote control, CVBS video cable, Power cord

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 112 kbps - 320 kbps
- Playback Media: Audio CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW, MP3-CD, USB flash drive, DVD+R/-R DL

## Connectivity

- Front / Side connections: USB, MP3 Line-in
- Rear Connections: AUX in, Click-Fit Stereo Connectors, Composite video (CVBS) output, FM Antenna, HDMI 1.4 output (3D Blu-ray), LAN

## Dimensions

- Front Speaker Depth: 114 mm
- Front Speaker Height: 311 mm
- Front Speaker Width: 114 mm
- Packaging dimensions (W x H x D): 570 x 335 x 400 mm
- Set dimensions (W x H x D): 360 x 58 x 351 mm
- Subwoofer dimensions (W x H x D): 123 x 309 x 369 mm

## Loudspeakers

- Satellite speaker freq range: 150-20000 Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 40 - 150 Hz
- Subwoofer impedance: 4 ohm
- Subwoofer type: Passive

## Power

- Power consumption: 55 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.9 W

## Sound

- Frequency response: 20-20000 Hz
- Signal to noise ratio: > 65 dB
- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Prologic II, Stereo, Dolby Digital 5.1, Dolby True HD, Dolby Virtual speaker, DTS HD, Dolby Digital Plus
- Total Power (RMS): 300 W
- Equalizer settings: Action, Classic, Concert, Drama, Jazz, Rock, Sports

## Still Picture Playback

- Picture Compression Format: JPEG, HD JPEG, GIF
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive

## Tuner/Reception/Transmission

- Tuner Bands: FM

## Video Playback

- Compression formats: avi, DivX Ultra, MPEG1, MPEG2, MPEG4, MKV
- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, USB flash drive, Video CD/SVCD, BD Video, BD-R/RE 2.0



Issue date 2014-02-13

Version: 11.10.6

12 NC: 8670 000 66004  
EAN: 87 12581 55570 2

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)