

Philips  
5.1 Home theater

Blu-ray



HTS3541



## Powerful surround sound

from compact speakers

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speaker drivers offering powerful surround sound and in Full HD 1080p with Blu-ray Disc playback.

### Great listening experience

- Exposed speaker drivers for powerful surround sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 300W RMS power delivers great sound for movies and music

### Designed to enhance your living space

- Modern design to complement your home environment

### Connect and enjoy all your entertainment

- Plays Blu-ray Discs, DVD, VCD, CD and USB devices
- HDMI for high definition movies and picture quality
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- Access your favorite YouTube videos & Picasa photos easily

# PHILIPS


# Highlights

## 300W RMS power



300W RMS power delivers great sound for movies and music

## Dolby TrueHD and DTS-HD

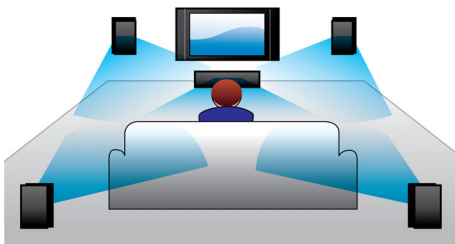

Dolby TrueHD and DTS-HD Master Audio deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

## Play it all



Play virtually any disc and any media format you want - whether they be Blu-ray Discs, DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

## Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital

multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



# Specifications

## Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick Start Guide (On box), Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

## Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB, WMV HD, WMV SD

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv

## Connectivity

- Front / Side connections: Microphone In, Music iLINK, USB
- Rear Connections: AUX IN 1, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Jacks, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC)

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC), Content Type, Deep color

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.40 kg

- Center Speaker (W x H x D): 159 x 84.5 x 80 mm
- Center Speaker Weight: 0.35 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 159 x 80 mm
- Front Speaker Weight: 0.35 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 84.5 x 159 x 80 mm
- Rear Speaker Weight: 0.35 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 160 x 265 x 265 mm
- Subwoofer Weight: 2.5 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 520 x 310 x 377 mm
- Weight incl. Packaging: 9 kg

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 2.5" woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150 - 20k Hz
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 60 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.9 W

## Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dolby Digital Prologic II, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Center speaker output power: 50 W
- Satellite speaker output power: 4 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2015-09-03

Version: 4.3.6

12 NC: 8670 000 77438  
EAN: 87 12581 60596 4

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To upgrade for access to YouTube and Picasa, visit  
[www.philips.com/support](http://www.philips.com/support)

\*\*Only for models that are Wi-Fi ready, for details, please refer to the  
product specification.