

# PHILIPS

True Wireless  
Headphones

Fidelio

Exquisite natural sound

Noise Cancelling Pro+

Superior call quality

Timeless Fidelio design



T2

## Crafted for everyday adventures

Beautiful to look at. Incredible to listen to. These premium true wireless earbuds give you our most spacious and detailed in-ear sound, and our smartest noise control. Music to calls, films to podcasts: they'll take you places.

### Seamless in every way

- Philips Headphones app. Customise your experience
- Google Assistant. Google Fast Pair
- Advanced multipoint connectivity. Wireless charging

### Philips Fidelio. Crafted for listeners.

- Exquisite. Philips sound signature for Fidelio
- Immersion that adapts to you. Noise Cancelling Pro+
- Superior call quality. Every word is loud and clear
- Timeless Fidelio design
- 2 way design. Balanced-armature and dynamic drivers

### Exquisite natural sound on the go

- Superb sound for streaming on the go
- AAC and LDAC codecs supported
- More music. Up to 36 hours with the wireless charging case

# Highlights

## Philips sound signature



From the taut, controlled bass to the warm mids and sparkling highs, these superb earbuds bring you exquisite natural sound with precise instrument separation. Balanced-armature and graphene-coated dynamic drivers paint more detail than ever. You'll hear the tracks your favourite artists made—just the way they made them.

## Noise Cancelling Pro+



Adaptive noise cancelling quickly adjusts to your environment to suppress outside noise, including wind, in real time. Music to calls, you can immerse yourself wherever you are without lifting a finger. If you do want to adjust the level of transparency or wind-noise reduction, simply use the Philips Headphones app.

## Superior call quality



You can happily make calls from the busiest, noisiest locations. Beamforming mics focus on the sound of your voice while advanced AI algorithms stop background noise from ruining

the call. If it's really windy, the bone-conduction sensor will reliably pick up your voice, so you'll still be heard.

## Timeless Fidelio design



Every element of your Fidelio earbuds is carefully considered. The polished ceramic housing of each earbud blends beauty with durability, and an IPX4 rating means they don't mind rain. Soft Muirhead leather accents the buds and the curved, compact charging case, which is made from anodised aluminium.

## Superb sound for streaming




AAC and LDAC codecs are supported for a superb sound on any streaming service and the music pauses if you take an earbud out. Advanced Bluetooth multipoint seamlessly switches back and forth between two devices: listen to music on your laptop, take a call on your phone and go back to your music automatically.

## 36 hours play time with case




Listen for up to 36 hours with ANC on, or 40 hours with ANC off. You get up to 9 hours of play time from a full charge, and a quick ten-minute charge of the earbuds in their case will get you another hour and a half. You can recharge the case by placing it on any wireless Qi charger.

## Philips Headphones app

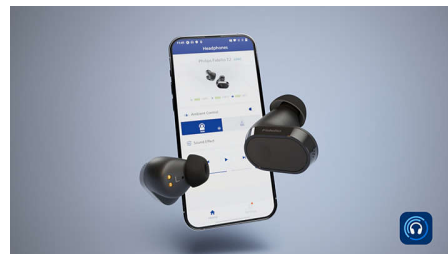

For music and podcasts, four presets and a custom multi-band equalizer let you find your preferred sound. You can also use the app to turn adaptive noise cancelling off and take control yourself.

## Google Assistant

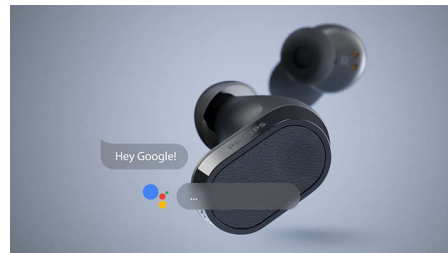

The Google Assistant is fully integrated, so you can simply say "Hey Google" and then ask it anything. Google Fast Pair lets you pair to a compatible Android device with a single tap: if you lose your headphones, you can call them and they'll ring!

# Specifications

## Sound

Frequency range: 7–40,000 Hz  
Speaker diameter: 9.2 mm + BA driver  
Impedance: 16 Ohm  
Maximum power input: 5 mW  
Sensitivity: 100 dB (1 KHz -10 dBFs)  
Driver type: Graphene coated, Balanced  
Armature  
Hi-Res Audio

## Connectivity

Bluetooth version: 5.3  
Wireless  
Bluetooth profiles: A2DP, AVRCP, HFP  
Maximum range: Up to 10 m  
Multipoint connection  
Supported codec: LDAC, AAC, SBC  
Type of wireless transmission: Bluetooth

## Outer Carton

Length: 35.00 cm  
Number of consumer packages: 24  
Width: 26.00 cm  
Gross weight: 5.60 kg  
Height: 27.50 cm  
GTIN: 1 48 95229 13173 3  
Net weight: 2.35 kg  
Tare weight: 3.25 kg

## Convenience

Automatic power off: 60 minutes  
Water resistance: IPX4  
Philips Headphones app support  
Mono mode for TWS  
Firmware updates possible  
Type of controls: Touch  
Google Fast Pair  
Google Hotwords  
Capacitive sensor

## Inner Carton

Length: 16.2 cm  
Number of consumer packages: 3  
Width: 11.8 cm  
Height: 12.2 cm  
Net weight: 0.29 kg  
Gross weight: 0.63 kg  
Tare weight: 0.34 kg  
GTIN: 2 48 95229 13173 0

## Power

Rechargeable  
Number of batteries: 3 pcs  
Charging time: 2 hour(s)  
Wireless charging: WPC Qi standard  
Music play time (ANC on): 36 hour(s)  
Music play time (ANC off): 40 hour(s)  
Fast charging time: 10 mins for 1.5 hr  
Battery type (Charging case): Lithium Polymer (built-in)  
Battery type (Earbud): Lithium Polymer (built-in)  
Battery weight (Total): 11.5 g  
Battery capacity (Case): 650 mAh  
Battery capacity (Earbud): 75 mAh  
Battery life standby time: 200 hr

## Packaging dimensions

Height: 13 cm  
Packaging type: Carton  
Type of shelf placement: Hanging  
Width: 11 cm  
Depth: 5 cm  
Number of products included: 1  
EAN: 48 95229 13173 6  
Gross weight: 0.159 kg  
Net weight: 0.098 kg  
Tare weight: 0.061 kg

## Accessories

Quick Start Guide  
Eartips: 5 pairs  
Charging case  
Charging cable: USB-C cable, 200 mm

## Design

Colour: Black  
Ear coupling material: Silicone  
Ear fitting: In-ear  
In-ear fitting type: Silicone ear-tip

## Telecommunication

Microphone for call: 2 AI mics  
Wind noise reduction  
Voice Pick-Up (VPU) sensor

## Dimensions

Charging case dimension (W x D x H): 2.96 x 6.45 x 4.27 cm  
Earbud dimension (W x D x H): 2.16 x 2.65 x 2.65 cm  
Total weight: 0.076 kg

## UPC

UPC: 8 40063 20322 8

## ANC features

ANC technology: Hybrid, ANC Pro+  
Awareness mode  
Adaptive ANC  
Microphone for ANC: 4 mic  
ANC (Active Noise Cancelling)

## Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant  
Voice assistant activation: Multi-Function touch  
Voice assistant support

