

Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

CMP200



---

EN User manual

**PHILIPS**

# 1. Important

---

## Safety

- Read and understand all instructions before you use the apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
  - This unit is designed for negative ground (earth) 12 V DC operation only.
  - Use only the supplied mounting hardware for a safe and secure installation.
  - Do not connect any active speakers (with built-in amplifier) to the speaker terminals of the unit. Doing so may damage the active speakers.
  - To ensure safe driving, adjust the volume to a safe and comfortable level.
  - To avoid short circuit, do not expose the apparatus to rain or water.
  - Never expose the apparatus to direct sunlight, naked flames or heat.
  - Clean the apparatus with soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.
- 

## Notice

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

2009 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

# Your car power amplifier

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).


## Introduction

With the amplifier, you can enjoy high quality sound performance with powerful bass and beats.


## What's in the box


Check and identify the contents of your package:

- ① Amplifier
- ② Screw\_4x14mm (x4)
- ③ Fuse (x2)
- ④ Hi input connector (x1)

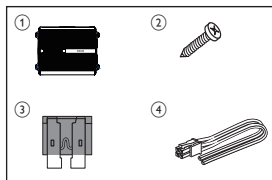

## Overview of the main unit

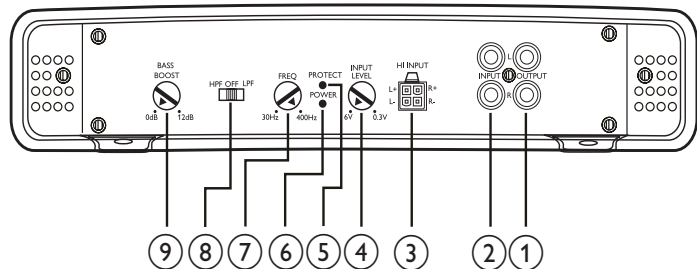

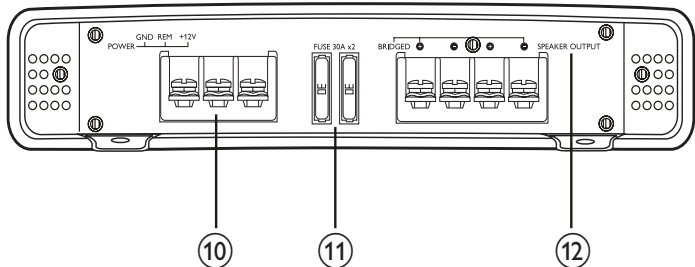

### ① OUTPUT L/R

- Connect additional amplifier for additional speakers.

### ② INPUT L/R

- Connect car audio with RCA cable.

### ③ HI INPUT

- Connect car audio with the supplied high input connector.

### ④ INPUT LEVEL

- Adjust input level (0.3V to 6V).

### ⑤ PROTECT

- Light in red when the PROTECTOR is activated.

### ⑥ POWER

- Light in blue when power is turned on.

### ⑦ FREQ

- Adjust frequency of HPF or LPF from 30Hz to 400Hz.

### ⑧ HPF/OFF/LPF

- Select High-pass-filter (HPF), Low-pass-filter(LPF) or OFF (flat) mode.

### ⑨ BASS BOOST

- Boost the frequencies at around 40Hz to a maximum of 12dB.

### ⑩ POWER (GND/REM/+12V)

- Connect +12V DC power cable, ground wire and remote wire.

### ⑪ Fuse

### ⑫ SPEAKER OUTPUT

- Connect to speakers or subwoofers.

## 2. Installation


### Installation

You can mount the amplifier either under a seat or on the rear tray.

#### Note

- To avoid interference, do not place the amplifier too close to the car audio or antenna.
- The supplied mounting screws are 14mm long. Make sure that the mounting board is thicker than 14mm.

- 1 Place the unit on the location for installation.
- 2 Mark the positions of the four screw holes.
- 3 Drill the holes with driller of approximately 3mm in diameter.
- 4 Mount the unit with the supplied screws.

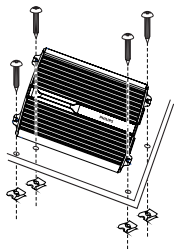


# Connect speakers


## Note

- Use speakers with an impedance of 2 to 8 ohm (4 to 8 ohm when used as a bridged amplifier).
- Match the "left", "right", "+" and "-" terminals correctly. Revised polarity may degrade sound quality.


## Option 1: Mono bridged mode: connect 1 speaker

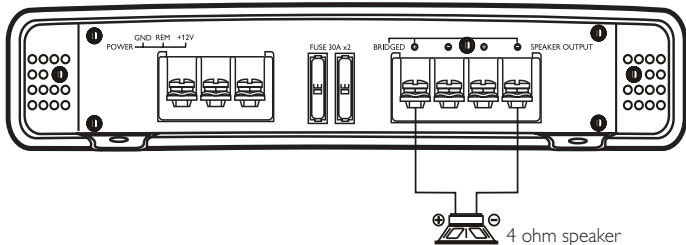

## Option 2: Stereo mode: connect 2 speakers

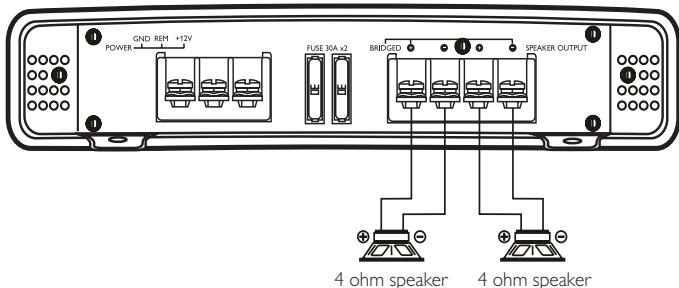


## Option 3: Tri-mode: connect 3 speakers

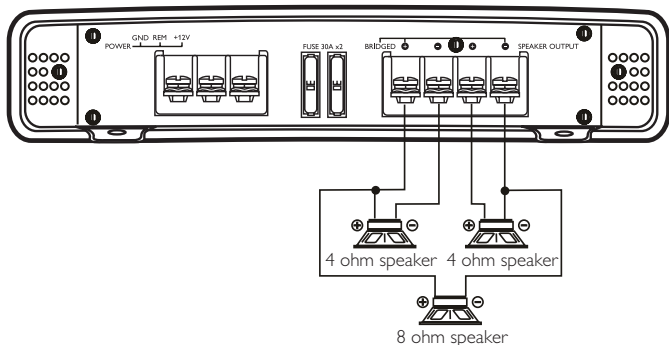

Tip

- Make the terminal connection as illustrated below:

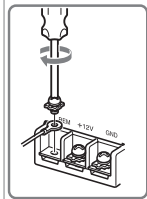


---

## Connect car audio


### Option 1: High level input connection

Connect the amplifier to your car audio with the supplied High level input connector.

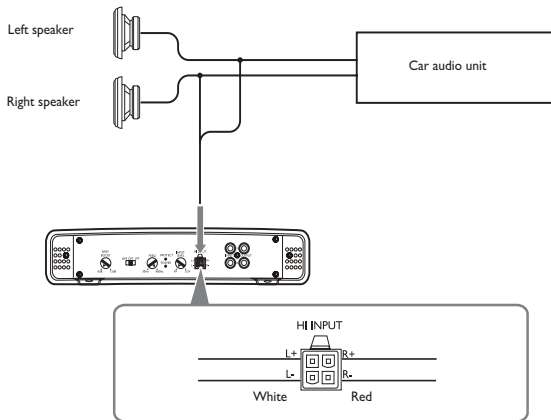


## Option 2: Line input connection

Connect the amplifier to the car audio with a RCA cable (not supplied).

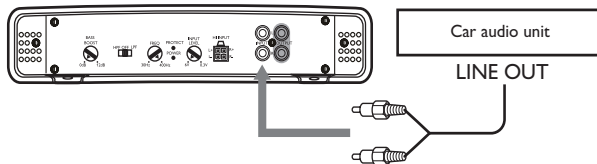

## Option 3: Line output connection


Connect the amplifier to another amplifier.

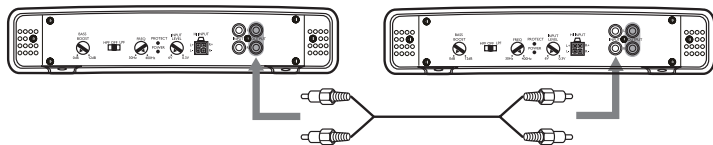



# Connect power

- 1 Make the power connection as illustrated below:
  - Connect the ground wire from the car to the **GND** socket.
  - Connect the remote wire from the car audio to the **REM** socket.  
✓ With this connection, you can turn on/off the amplifier with the car audio.
  - Connect the power wire from the car battery to the **+12V** socket.

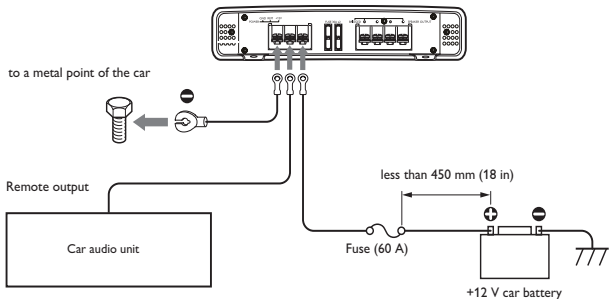

Tip

- If your car audio does not have remote output, connect the remote input terminal (REM) to the accessory power supply.

## 3. Use your power amplifier

### Select crossover frequency

You can select crossover frequency mode as below:

<b>HPF</b> (high-pass-filter) mode	Select this mode when mid-range speakers and tweeters are connected for high frequency output.
<b>LPF</b> (Low-pass-filter) mode	Select this mode when woofer and subwoofer is connected for low frequency output.
<b>OFF</b> (flat) mode	Select this mode when tri-mode speaker connection is used.

1 Slide **HPF/OFF/LPF** to the selected position.



## Adjust frequency

You can adjust frequency of HPF or LPF from 30Hz to 400Hz.



### Note

- When the **HPF/OFF/LPF** switch is set at **OFF** position, the frequency adjustment does not work.

1 Rotate **FREQ** to select frequency.

## Adjust input level

You can adjust the input voltage from 0.3V to 6V.

1 Rotate **INPUT LEVEL** to adjust input voltage.



## Adjust bass boost

You can punch extra bass for 0 to 12dB.

1 Rotate **BASS BOOST** to punch for extra bass.



---

## About the protector indicator

The amplifier has a built-in protection circuit to protect the transistors and speakers when:

- The unit is overheated. Or
- A DC current is generated. Or
- The battery voltage is over low or over high. Or
- The speaker terminals are short circuited.

PROTECT



When the PROTECTOR indicator lights up in red, the unit shuts down automatically. If this happens, please:


- 1 Take out the disc or tape and turn off the car audio.
- 2 Check the cause of the malfunction (see above).
- 3 If the amplifier has overheated, wait until the unit cools down before use.

---

## Replace fuse

If there is no power, the fuse may be damaged and need to be replaced.

- 1 Pull out the damaged fuse.
- 2 Replace the fuse with the supplied fuses or to buy two fuse that matches the voltage of the damaged fuse (60A).

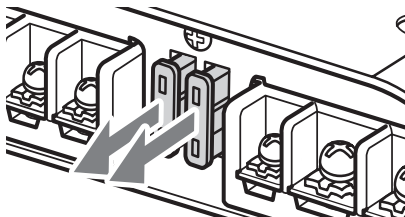

If the fuse gets damaged immediately after it has been replaced, there may be an internal malfunction. In such case, consult your Philips dealer.

## 4. Product information



### Note

- Product information is subject to change without prior notice.

<b>Power Output (RMS)</b>	
- 4 ohm	125W × 2
- 4 ohm (bridged)	380W × 1
- 2 ohm	190W × 2
<b>Total harmonic distortion</b>	0.01%
<b>Signal to noise ratio</b>	106dB
<b>Channel separation</b>	50dB
<b>Frequency response</b>	5-100kHz
<b>Input sensitivity</b>	300mV-6V
<b>Input impedance</b>	22k ohm
<b>Fuse rating</b>	30A × 2
<b>Dimensions (DxWxH)</b>	54.4 × 336.5 × 240.2mm

## 5. Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.philips.com/welcome](http://www.philips.com/welcome)). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

### **Power indicator does not light up.**

- The connected car audio is not turned on.
- The fuse is blown. Replace the fuse with a new one.

### **The sound is too low.**

- The input level is not set correctly (see 'Adjust input level').

### **The sound is interrupted or stopped suddenly.**

- The thermal protector is activated. Reduce the volume.
- The ventilation outlet is blocked. Remove any obstructions from the outlet.

### **Alternate noise is heard.**

- The power connecting wires are installed too close to the RCA pin cords.
- The ground wire is not securely connected to a metal point of the car.
- Negative speaker wires touch the car chassis.

### **The protector indicator lights up in red.**

- The speaker terminals are short circuited. Check the speaker connections.
- The amplifier is overheated. Cool down the amplifier before use.
- The amplifier is overloaded.

### **The unit becomes abnormally hot.**

- Place the amplifier in a well ventilated location.
- Use speakers with suitable impedance: 2-8 ohm (stereo), 4-8 ohm (bridged).

Name of the Parts	Hazardous/toxic Substance					
	Pb, Lead	Hg, Mercury	Cd, cadmium	Chromium 6+	PBB	PBDE
Housing	○	○	○	○	○	○
Loudspeakers	○	○	○	○	○	○
PWBs	X	○	○	○	○	○
Accessories (Remote control & cables)	X	○	○	○	○	○

- : Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.
- X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



Environmental Protection Use Period

This logo refers to the period ( 10 years ) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

