



Philips  
Soundbar 3.1 with wireless  
subwoofer

400W max. Wireless subwoofer

Dolby Atmos®  
DTS Play-Fi compatible  
Connects with voice assistants



TAB8805

## Powerfully cinematic sound

Make more of movie night with this powerful soundbar with wireless subwoofer. The immersive 3D audio of Dolby Atmos puts you right in the middle of the scene. Play-Fi compatibility makes it easy to create a true surround-sound setup.

### The sound you want for the content you love

- Smart soundbar. Powerfully cinematic
- 3.1 channels. 300W RMS. 400W max (10% THD)
- Dedicated center channel for crystal-clear dialogue
- Dolby Atmos. Heighten the excitement

### Unpack. Connect. Enjoy.

- Play-Fi. From multi-room audio to surround sound
- HDMI eARC. Enjoy the latest surround-sound formats
- 4K pass-through. Dual HDMI inputs
- Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in

### Easy control. Distinctive looks.

- Easily connect to your favorite sources
- Connects to your favorite voice assistant-enabled devices
- Distinctive geometric design. Easy placement


# PHILIPS

Soundbar 3.1 with wireless subwoofer  
400W max. Wireless subwoofer Dolby Atmos®, DTS Play-Fi compatible, Connects with voice assistants

TAB8805/10

# Highlights

## Powerfully cinematic

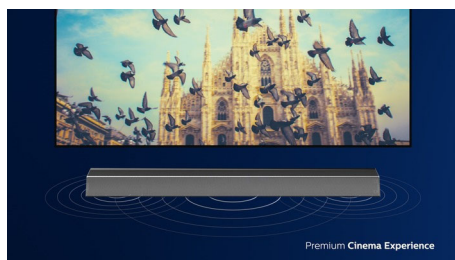

This soundbar brings 300W of rich sound to everything you watch, and every track you love. 3.1 channels fill any room with spellbinding soundtracks, thunderous effects, and crystal-clear dialogue. The wireless subwoofer adds impact to every explosion and every beat.


## Dolby Atmos



Increase the drama no matter what you watch. This Dolby Atmos-compatible soundbar reproduces depth as well as height, creating

virtual three-dimensional surround sound that flows above and around you.

## Play-Fi. Multi-room and more

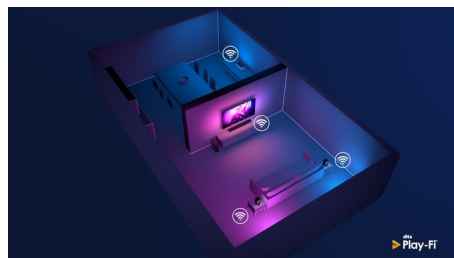

Easy Play-Fi compatibility will make this soundbar the star of your multi-room set-up. You can sync Play-Fi-compatible speakers for multi-room audio, or even create a true surround-sound system—all via the Philips Sound app, or the Play-Fi app.

## All your favorite sources


For music, Spotify Connect lets you stream Spotify's best-quality signal over Wi-Fi. You can also stream hi-res playlists from your mobile device via Apple AirPlay 2 or Bluetooth. For movies and gaming, 4K pass-through lets you connect 4K HDR video sources with no loss of resolution.

## HDMI eARC

Lose nothing from the mix when you're immersed in the drama. This soundbar is

compatible with HDMI eARC, a high-speed connection that lets you experience the full effect of advanced audio formats like Dolby Atmos. The soundbar also has dual HDMI inputs.

## Connect with voice assistants

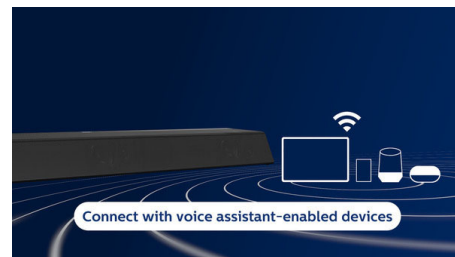

Ask Alexa-enabled devices, or any speaker that works with the Google Assistant, to play music through the soundbar. Prefer Siri? This soundbar works with Apple AirPlay 2, so you can ask her too. Turn the music up. Skip tracks. All completely hands-free.

## Low profile. Easy placement

The distinctive geometric design has a low profile, making this soundbar easy to place under or alongside your TV. The included wall brackets keep your options open, and the powerful wireless subwoofer looks great freestanding.

COMPATIBLE WITH  
Dolby Vision

Dolby Atmos

dts play-fi

Spotify

Works with  
Apple AirPlay

HDMI™

works with  
Ok Google

WORKS WITH  
alexa

# Specifications

## Loudspeakers

- Number of sound channels: 3.1
- Center drivers: 1 full range, 1 tweeter
- Front drivers: 2 full range (L+R), 2 tweeters (L+R)
- Soundbar freq range: 160 - 20k Hz
- Soundbar impedance: 8 ohm x 2 + 4 ohm
- Subwoofer type: Active, Wireless subwoofer
- External subwoofer enclosure: Bass reflex
- Number of woofers: 1
- Woofer diameter: 6.5"
- Subwoofer freq range: 40 - 160 Hz
- Subwoofer impedance: 3 ohm

## Connectivity

- USB playback
- HDMI IN x 2
- HDMI Out (eARC/ARC) x 1
- EasyLink (HDMI-CEC)
- HDMI content protection: HDCP 1.4/2.3
- Bluetooth: Receiver
- Optical input x 1
- Aux in: 3.5mm
- WiFi: IEEE 802.11 a/b/g/n/ac, 2.4GHz/5GHz
- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC
- Multiple speaker connection
- Multiple speaker technology: DTS Play-Fi Multi-room
- Smart Home: Works with OK Google, Works with Alexa, Works with Apple AirPlay 2, Built-in Chromecast, Spotify Connect
- Wireless speaker connection: Subwoofer
- DLNA Standard: No

## Sound

- Sound Enhancement: Treble, Mid and Bass Control, Subwoofer volume control
- Equalizer settings: Movie, Music, Voice, Sports, Custom
- Speaker system output power: 400W max / 300W RMS (10 % THD)
- Total harmonic distortion: 10%

## Video

- 3D pass-through
- Video Enhancement: 4K Video Pass-through, Dolby Vision, HDR10, HDR10+, HLG

## Supported Audio Formats

- HDMI IN1/IN2: Dolby Atmos, Dolby Digital,

- Dolby Digital plus, Dolby TrueHD, LPCM 2ch, Dolby MAT
- HDMI ARC/eARC: Dolby Atmos, Dolby Digital, Dolby Digital plus, Dolby TrueHD, LPCM 2ch, Dolby MAT
- Optical: Dolby Digital, LPCM 2ch
- Play-Fi: AIFF, FLAC, MP3, WAV, MPEG4 AAC, MPEG4 M4A
- USB: MP3, WAV, FLAC
- Bluetooth: SBC

## Design

- Color: Dark grey
- Wall mountable

## Convenience

- Remote Control
- Night mode: No

## Compatibility

- Smartphone/tablet APP control

## Power

- Auto standby
- Main unit power supply: 100-240V AC, 50/60 Hz
- Main unit standby power: < 0.5 W
- Subwoofer power supply: 100-240V AC, 50/60 Hz
- Subwoofer standby power: < 0.5 W

## Dimensions

- Main Unit (W x H x D): 1061 x 60 x 110 mm
- Main Unit Weight: 3 kg
- Subwoofer (W x H x D): 150 x 412 x 310 mm
- Subwoofer Weight: 5.8 kg

## Accessories


- Included accessories: Remote Control, 1 x CR2025 Battery, Power cord, Wall mount bracket, Quick start guide, World Wide Warranty leaflet

## Packaging dimensions

- Packaging type: Box
- Number of products included: 1
- Packaging dimensions (W x H x D): 115 x 18.5 x 43.5 cm
- Gross weight: 11.5 kg
- Nett weight: 9 kg
- Tare weight: 2.5 kg
- EAN: 48 95229 10997 1
- Type of shelf placement: Laying

## Outer Carton

- Number of consumer packagings: 2
- Outer carton (L x W x H): 117.5 x 58.5 x 21 cm
- Gross weight: 24.8 kg
- Nett weight: 18 kg
- Tare weight: 6.8 kg
- GTIN: 1 48 95229 10997 8

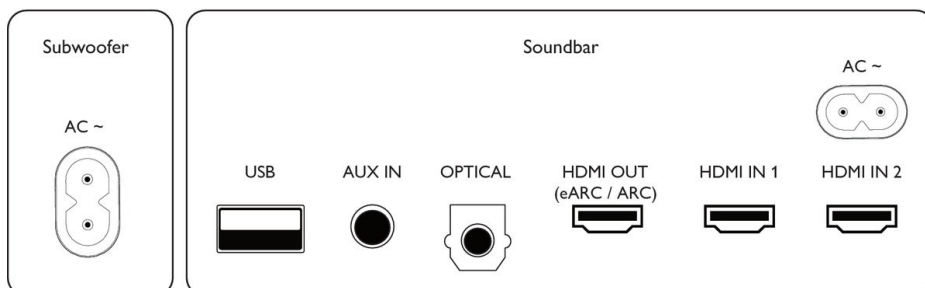

Issue date 2022-11-02

Version: 7.1.2

12 NC: 8670 001 66231  
EAN: 48 95229 10997 1

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

