


Philips
DVD player

DivX playback

DVP3010

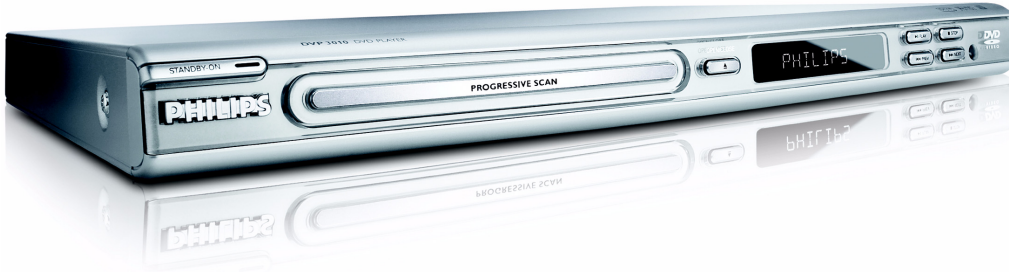

See, hear, play everything

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Great audio and video performance

- Progressive Scan component video for optimized image quality
- RGB on Scart single connection for high-quality video
- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input

Play it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD, DivX
- Picture CD (JPEG) with music (MP3) playback
- Music: CD, MP3-CD, CD-R/RW & Windows Media™ Audio

Fits everywhere, goes anywhere

- Compact design
- Ultra-slim design

PHILIPS

Highlights

Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

RGB on Scart connectivity

RGB on Scart is a cable connection that provides easy connectivity for high quality video output.

12-bit/108MHz video processing

12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every

detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

192kHz/24 bit audio DAC

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Multi-format Movies with DivX

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Picture CD with MP3 Playback

Picture CD is a CD-R or CD-RW disc on which you can store your MP3 and digital pictures. When inserting a Picture CD in the DVD player, a screen menu will pop up, showing your JPEG's and/or MP3 files on the disc. Just select the music and pictures files you wish to enjoy and press play or OK. You can watch your pictures on TV with your music playing simultaneously.

Music: Windows Media™ Audio

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Ultra-slim design

The attractive enclosure has a very low profile.



Specifications

Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 12 bit, 108 MHz
- Picture enhancement: 3/2 - 2/2 motion pull down, Progressive scan, Smart Picture Setting

Sound

- D/A converter: 192kHz/24-bit
- Signal to noise ratio: 95 dB
- Distortion and Noise (1kHz): 80 dB
- Crosstalk (1kHz): 90 dB
- Dynamic Range (1kHz): 85 dB
- Sound System: Dolby Digital
- Sound Enhancement: 3D Virtual Surround, Night Mode, Smart Sound

Video Playback

- Compression formats: MPEG1, MPEG2, MPEG4, DivX 3.11, DivX 4.x, DivX 5.x, XviD
- Playback Media: CD, CD-R, CD-R/CD-RW, Video CD/SVCD, DVD+R, DVD+RW, DVD-R, DVD-RW (Video mode), DVD-Video
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: PCM, MP3, Windows Media™ Audio
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- MP3 bit rates: 32 - 256 kbps

Still Picture Playback

- Playback Media: DVD+R/+RW, Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate,

Slideshow with MP3 playback, Zoom

Connectivity

- Other connections: Scart, ComponentVideo out Progressive, Composite video (CVBS) out, Analog audio Left/Right out, Digital coaxial out

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: Danish, Dutch, English, Finnish, French, German, Italian, Norwegian, Portuguese, Spanish, Swedish, Turkish, Polish

Power

- Power supply: 50Hz, 220-240V
- Power consumption: 10 W
- Standby power consumption: < 0.8 W

Accessories

- Batteries: 2 x AA
- Cables: None
- Remote control: 3141 017 90221
- User Manual: Eng, Ger, Fre, Spa, Ita, Gre, Por, Fin, Swe, Dan, Nor, Pol, Tur, Rus
- Warranty Card

Dimensions

- Set dimensions (W x H x D): 360 x 37 x 265 mm
- Set weight: 1.98 kg
- Packaging dimensions (W x H x D): 415 x 82 x 352 mm
- Weight incl. Packaging: 2.98 kg



Issue date 2014-02-05

Version: 6.0.8

12 NC: 8622 810 12054
EAN: 87 10895 85269 2

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com