

Philips
Classic micro sound
system

• Tape

MCM207



Obsessed with sound

Relax with great music

Good sound is yours to have with the Philips classic micro music system. Playback your favorite MP3/WMA music using the USB Direct or MP3 link. Elegantly designed with wood-finished speakers for a classic look that won't go out of style.

Enjoy your music from multiple sources

- MP3 Link for portable music playback
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- Autostop cassette deck

Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- 10W RMS total output power

Easy to use

- Motorized CD loader for convenience access
- Wake up and sleep timer functions



asimpleswitch.com



asimpleswitch.com

PHILIPS

Highlights

Digital Sound Control




Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

10W RMS

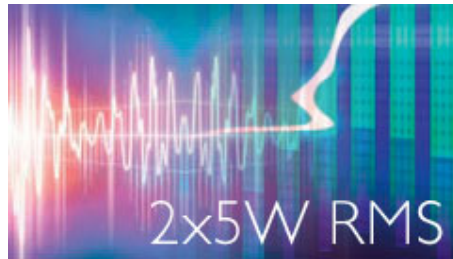

This Philips music system has 10W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

Motorized CD loader

A motorized sliding front door adds even more panache to the already sleek design of this system. The stylish yet functional door housing the disc slides up and down vertically in a smooth motion at the touch of a button whenever you feel like changing your music selection. Just sit back and enjoy the dynamic sound performance while watching the disc play through the transparent window.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality

delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.



Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



Specifications

Sound

- Output power: 2 x 5 W RMS / 2 x 10 W music power
- Sound enhancement: digital sound control 4 modes, Dynamic Bass Boost

Loudspeakers

- Speaker drivers: 3.5" woofer
- Speaker types: bass reflex speaker system

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Others: ID3-tag support
- Cassette deck technology: mechanical
- Cassette Playback Modes: electronic speed control
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop

Audio recording

- Recording media: tape
- Tape recording enhancement: automatic recording level, CD synchro start recording

Tuner/Reception/Transmission

- Tuner bands: FM stereo, MW
- Station presets: 30
- Antenna: FM fixed pigtail antenna, MW antenna
- Tuner enhancement: auto digital tuning, auto scan

Connectivity

- Audio/Video output: Headphone (3.5mm)

- MP3 Link: 3.5mm stereo line in
- USB: USB host

Convenience

- Alarms: CD alarm, radio alarm, USB alarm
- Clock: on main display, sleep timer
- Loader type: motorised, tray
- Display type: LCD display

Accessories

- Cables/Connection: AC-DC adapter
- Remote control
- Others: Quick start guide
- User Manual: multi-languages
- Warranty: World Wide Guarantee booklet

Dimensions

- Gross weight: 5.1 kg
- Main speaker dimensions (W x D): 146 x 140 mm
- Main speaker height: 232 mm
- Main unit depth: 227 mm
- Packaging width: 370 mm
- Main unit height: 232 mm
- Packaging height: 275 mm
- Main unit width: 152 mm
- Packaging depth: 330 mm

Power

- Power supply: 50/60 Hz
- Power supply: 110 - 240 V

Green

- Eco Power standby: 1 W



Issue date 2013-05-13

Version: 2.0.4

12 NC: 8670 000 50601
EAN: 87 12581 47062 3

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com