




Philips  
Sleek micro sound system

- dock for iPhone/iPod

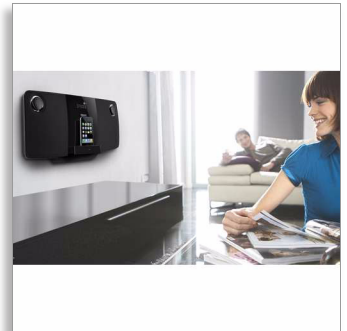

DCM278



# Obsessed with sound

Sound that fits your home

Playback your iPhone/iPod music in superb sound while recharging it with the Philips sleek micro music system. The flat, compact design is also wall-mountable to complement any interior. USB Direct for added playback options.

## Enjoy your music from multiple sources

- Play and charge your iPod/iPhone simultaneously
- USB Direct for MP3/WMA music playback
- Digital tuning with preset stations for extra convenience
- Play MP3/WMA-CD, CD and CD-RW

## Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- 10W RMS total output power

## Design that blends into your interior

- Wall-mountable option for flexible placement
- Motorized sliding front door adding style and elegance

**PHILIPS**

Sleek micro sound system  
dock for iPhone/iPod

DCM278/12

# Highlights

## Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

## Dynamic Bass Boost




Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## 10W RMS



This Philips music system has 10W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

## Play & charge your iPod/iPhone

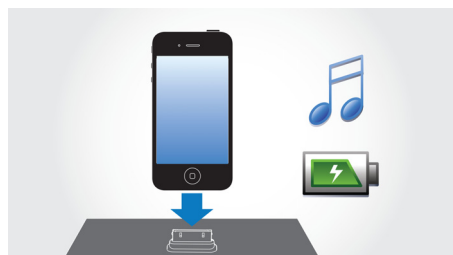

Enjoy your favorite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favorite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

## Wall-mountable



The perfect combination of a slim and versatile design, your Philips audio system is cleverly designed to blend into your living space. The base of the audio system is a stand so the system can sit securely and nicely on any shelf or cabinet. When wall mounted you have all the same flexibility of the freestanding stand.

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

## Digital tuning with presets



Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

# Specifications

## Sound

- Sound enhancement: digital sound control 4 modes, Dynamic Bass Boost
- Volume control: up/down
- Output power: 2 x 5 W RMS

## Loudspeakers

- No. of built-in speakers: 2
- Speaker drivers: 4" woofer
- Speaker types: bass reflex speaker system

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Others: ID3-tag support
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop
- Docking playback modes: fast forward and backward, next and previous track, play and pause

## Tuner/Reception/Transmission

- Tuner bands: FM stereo
- Station presets: 20
- Antenna: FM antenna
- RDS: program type, RDS clock set, station name
- Tuner enhancement: auto digital tuning, auto scan

## Connectivity

- Audio/Video output: Headphone (3.5mm)
- MP3 Link: 3.5mm stereo line in

## Convenience

- Alarms: CD alarm, radio alarm, USB alarm, iPod alarm

- Loader type: front, motorised
- Clock: on main display, sleep timer
- Charging device: iPhone, iPod
- Display type: LCD display

## Accessories

- Cables/Connection: MP3 Link cable
- Remote control
- Others: Quick start guide
- User Manual: multi-languages
- Warranty: World Wide Guarantee booklet

## Dimensions

- Packaging depth: 159 mm
- Gross weight: 5.4 kg
- Main unit depth: 102 mm
- Packaging height: 310 mm
- Main unit height: 238 mm
- Packaging width: 614 mm
- Main unit width: 542 mm

## Power

- Power supply: 220 - 240 V
- Power supply: 50 Hz

## Green

- Eco Power standby: 1 W

## iPod compatibility

- Compatible with: iPod, iPod classic, iPod mini, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod touch, iPod touch 2nd generation, iPod with color display, iPod 5th generation

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS



Issue date 2013-05-10

Version: 5.0.5

12 NC: 8670 000 55664  
EAN: 87 12581 50074 0

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)