



Philips  
Blu-ray SoundStage home  
theatre

2.1 CH Integrated subwoofer  
Bluetooth® and NFC  
HDMI ARC  
Blu-ray Disc playback

HTB4150B



## Everything you need to boost your TV's sound

### The best TV companion

Pump up your home entertainment experience with this TV SoundStage. Place the TV on top, connect one cable and start enjoying your movies and music. What's more? NFC for one-touch Bluetooth® pairing.

#### **Connect and enjoy all your entertainment**

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI for high definition movies and picture quality

#### **Designed for simplicity**

- Perfect match with your TV, just place it on top
- Touch panel for intuitive playback and volume control


#### **Richer sound for watching TV and movies**

- Virtual Surround Sound for a realistic movie experience
- Integrated subwoofer for powerful bass
- Dolby Digital and DTS for great surround sound

# PHILIPS

# Highlights

## Dolby Digital and DTS

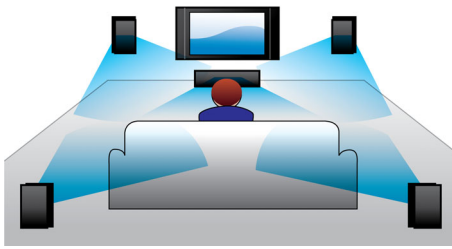

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images creates the full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed


surround sound for an unbelievably real audio experience.

## HDMI for HD movies




HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution—ensuring more details and more true-to-life pictures.

## Bluetooth wireless streaming

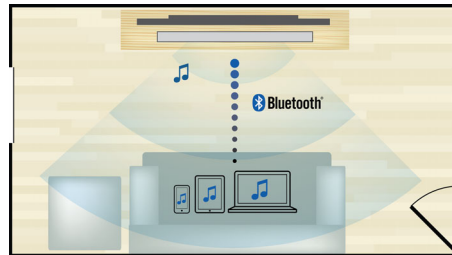


Bluetooth wireless music streaming from your music devices

## NFC technology

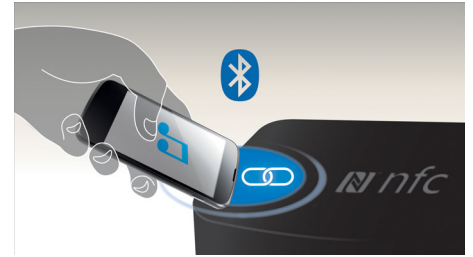

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## Virtual Surround Sound

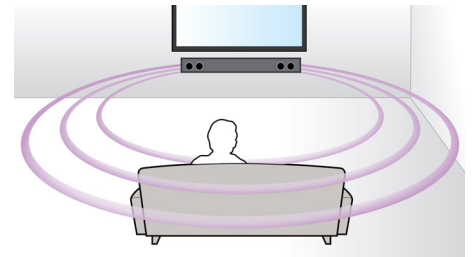

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

# Specifications

## Accessories

- Included accessories: 2 x AAA Batteries, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, Power cord, User Manual

## Audio Playback

- Compression format: AAC, FLAC, MP3, Ogg Vorbis, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, DivX, mkv, mp4, mpeg, mpg, wmv

## Connectivity

- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna
- Front/Side connections: Audio in, USB
- Integrated Connections: Bluetooth, NFC
- iPod/iPhone: via Bluetooth, via 3.5 mm Audio In

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 Mylar tweeter, 1 woofer
- Tweeter Impedance: 8 ohm
- Subwoofer type: Integrated Subwoofer

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 40 W
- Standby power consumption: < 0.5 W
- Power supply: 50/60 Hz, 110-240V

## Sound

- Sound Enhancement: Virtual Surround Sound, Treble, Mid and Bass Control, Night Mode
- Sound System: Dolby True HD, DTS Digital Surround
- Subwoofer output power: 40 W
- Speaker output power: 20 W x 2
- Total Power RMS @ 10% THD: 80 W

## Tuner/Reception/Transmission

- Number of Pre-set Channels: 40
- Tuner Bands: FM
- RDS: Station Name

## Dimensions

- Main Unit (W x H x D): 701 x 70 x 317 mm
- Main Unit Weight: 6.8 kg
- Packaging (W x H x D): 840 x 135 x 176 mm
- Weight incl. Packaging: 11 kg

## Packaging dimensions

- EAN: 87 12581 69985 7
- Packaging dimensions (W x H x D): 80 x 14.4 x 37.2 cm
- Gross weight: 9.13 kg
- Net weight: 7.115 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.015 kg
- Type of shelf placement: Laying

## Outer Carton

- EAN: 87 12581 69985 7
- Gross weight: 9.13 kg
- Outer carton (L x W x H): 80 x 37.2 x 14.4 cm
- Net weight: 7.115 kg
- Number of consumer packages: 1
- Tare weight: 2.015 kg

## Product dimensions

- Product dimensions (W x H x D): 70.06 x 7.8 x 31 cm
- Weight: 6.82 kg



Issue date 2016-04-17

Version: 6.4.6

12 NC: 8670 001 07635  
EAN: 08 71258 16998 57

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To check whether Video on Demand is available in your country, please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).  
\* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.  
\* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.