

Philips
Zenit cinema speakers

5.1 CH wireless rear and sub
Bluetooth® and NFC
HDMI 4K-2K



CSS5530G

Embrace the look and feel of Zen

Free from wires and clutter

Embrace pure simplicity with Philips Zenit cinema speakers and enjoy natural, balanced sound from a design featuring modern, authentic materials. Smart cable management and wireless rear speakers ensure an uncluttered, sublime experience.

Designed to enhance your living space

- Real wood finish for modern home décor
- Wireless rear speakers and subwoofer for hassle free set-up
- Smart cable management for organized cables across your room

Great listening experience

- MTM speakers allow loud and truly reproduced sound
- Subwoofer base reflector radiates sound smoothly
- Dolby Digital and Pro Logic II surround sound

Simply enjoy all your entertainment

- HDMI 4K2K pass-through for ultra HD content enjoyment
- Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI ARC to access all the sound from your TV

PHILIPS

Highlights

Wireless rear speakers and sub

Wireless rear speakers and subwoofer for hassle free set-up

Smart cable management

Smart cable management for organized cables across your room


MTM speakers

Midwoofer-tweeter-midwoofer (MTM) configuration in all main and satellite speakers allow loud and truly reproduced sound regardless of listening position. You can always enjoy crystal clear sound without distortion no matter when you are sitting.

Subwoofer base reflector


Dome shaped base reflector enhances a stronger and deeper base by radiating sound smoothly in 360 degree direction. The design also prevents damping effect when the subwoofer is being placed on carpet.

Bluetooth wireless streaming

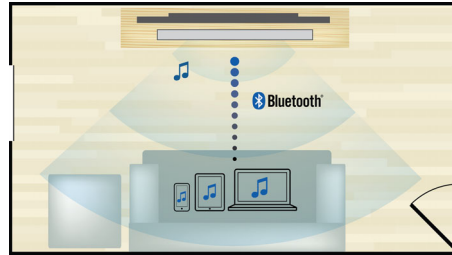

Bluetooth wireless music streaming from your music devices


NFC technology

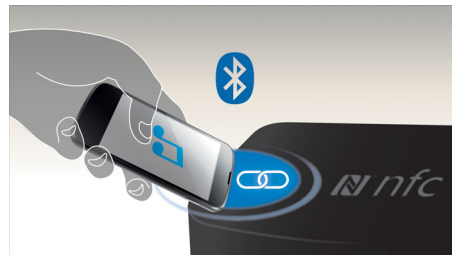

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a

speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

Dolby Digital and Pro Logic II

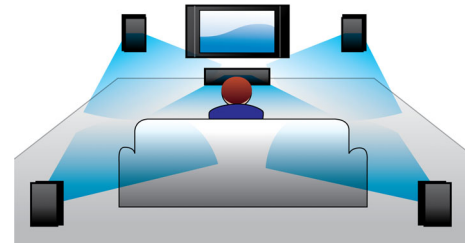

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

HDMI ARC

HDMI ARC to access all the sound from your TV

Specifications

Sound

- Sound Enhancement: Crystal Clear sound, Dolby Digital 5.1, Dolby Digital Prologic II
- Sound System: Dolby Digital 5.1, Dolby pro-logic 2
- Total Power RMS @ 10% THD: 420 W
- Center speaker output power: 40 W
- Satellite speaker output power: 40 W
- Subwoofer output power: 220 W

Loudspeakers

- System: 5.1 system
- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers, 1 x Subwoofer
- Drivers per Center speaker: 2 racetrack full range woofers, 1 x 1" tweeter
- Center speaker freq range: 80Hz – 18k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 2 x 2.5" full range woofers, 1 x 1" tweeter
- Satellite speaker freq range: 120Hz - 18k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 45 - 150 Hz
- Subwoofer impedance: 3 ohm

Connectivity

- Rear Connections: Digital optical in, Audio in 3.5 mm jack, Easy-Fit Speaker Jacks, HDMI in (x1), HDMI out (4K passthrough, ARC), USB audio (5V, 500mA DC)
- Wireless connections: Bluetooth 4.1, NFC, Wireless rear speakers, Wireless subwoofer

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough
- HDMI Features: Support 4K passthrough (30fps), Audio Return Channel (ARC), Content Type

Power

- Centre speaker Power supply: 100-240V AC, 50/60Hz, Via power adaptor
- Subwoofer Power supply: 220-240V AC, 50/60Hz
- Wireless box Power supply: 110-240V AC, 50/

60Hz

- Standby power consumption: <0.5 W

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

Dimensions

- Subwoofer (W x H x D): 228 x 406 x 265 mm
- Center Speaker (W x H x D): 580 x 52 x 98 mm
- Satellite Speaker (W x H x D): 110 x 301 x 110 mm
- Satellite Speaker Cable length: 5 m
- Center Speaker Weight: 1.3 kg
- Satellite Speaker Weight: 1.2 kg
- Subwoofer Weight: 5.7 kg

Accessories

- Included accessories: Remote Control, Wireless rear audio receiver, AAA Battery (x1), Power adapter, AC power cord (x3), Wall mount brackets (x4), Screws (x8), User Manual, World Wide Warranty leaflet, Safety & Legal Leaflet, Trademarks Sheet

Outer Carton

- EAN: 48 95185 60735 1
- Gross weight: 15.24 kg
- Outer carton (L x W x H): 79.5 x 28 x 41.5 cm
- Nett weight: 12 kg
- Number of consumer packagings: 1
- Tare weight: 3.24 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 79.5 x 41.5 x 28 cm
- EAN: 48 95185 60735 1
- Gross weight: 15.24 kg
- Nett weight: 12 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 3.24 kg
- Type of shelf placement: Laying

Product dimensions

- Product dimensions (W x H x D): 58 x 5.35 x 9.8 cm
- Weight: 1.5 kg



Issue date 2016-12-27

Version: 4.0.6

12 NC: 8670 001 23557
EAN: 48 95185 60735 1

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com