



Philips  
CD Soundmachine

CD  
Tape

AZ1027

## Enjoy music wherever you go

You take pleasure in the simple things in life and delight in convenience. The compact and portable Philips CD soundmachine lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

### **The ultimate listening experience**

- Play CD, CD-R and CD-RW
- Autostop cassette deck
- FM/MW tuner for radio enjoyment

### **Easy to use**

- CD Shuffle/Repeat for personalized music enjoyment
- MP3 Link for portable music playback

### **Rich and clear sound**

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS


# Highlights

## Play CD, CD-R and CD-RW




Philips is known for making products which are compatible with many discs available in the market. This audio system lets you enjoy music from CD, CD-R and CD-RW. CD-RW (CD-Rewritable Compatible) means that your audio system can play both CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and rewritten multiple times and can only be played back on compatible audio CD players.

## Autostop cassette deck

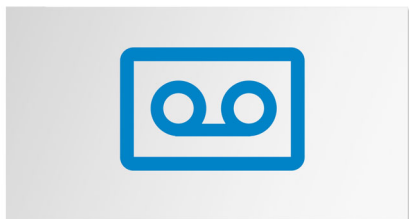

Autostop cassette deck

## CD Shuffle/Repeat

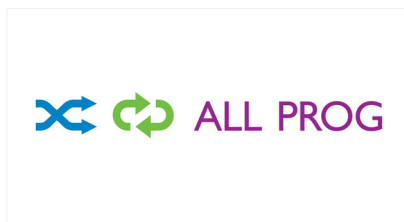

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.


## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do

is to plug your portable MP3 player to the audio system.

## FM/MW tuner

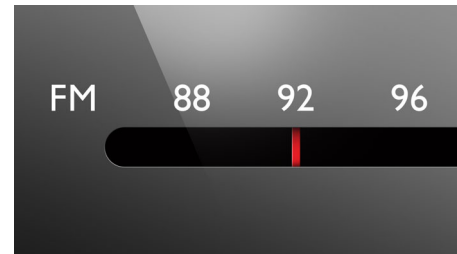

FM/MW (AM) stereo tuner

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Number of decks: 1
- Cassette deck technology: mechanical

## Tuner/Reception/Transmission

- Tuner bands: FM, MW
- Antenna: FM antenna

## Sound

- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

## Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

## Audio recording

- Tape recording enhancement: CD synchro start recording
- Recording media: tape

## Convenience

- Loader type: top
- Display type: LCD display

## Connectivity

- MP3 Link: 3.5mm stereo line in

## Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Power supply: 220 - 240 V
- Number of batteries: 6

## Accessories

- Cables/Connection: power cord
- Others: User Manual
- Warranty: Warranty Certificate

## Dimensions

- Gross weight: 2.4 kg
- Packaging depth: 175 mm
- Packaging height: 275 mm
- Packaging width: 320 mm
- Weight: 1.8 kg
- Main unit depth: 243 mm
- Main unit height: 146 mm
- Main unit width: 291 mm



Issue date 2013-11-20

Version: 1.0.3

12 NC: 8670 000 52709  
EAN: 87 12581 48365 4

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)