

Philips
SoundBar Home cinema
speakers

Virtual surround

Wireless subwoofer
for Android

CSS5123



Powerful sound for any TV

with wireless subwoofer

Bring movies and music to life from your tablet/smartphone with this Philips home cinema speaker CSS5123. Stream movies and music wirelessly from your Android™ DLNA device or PC to enjoy with your family and friends.

Full and rich sound, effortlessly

- Angled stand for full frontal sound projection
- DoubleBASS technology for fuller and deeper bass
- Virtual Surround Sound for a realistic movie experience
- Wireless subwoofer adds thrill to the action

Designed to enhance your living space

- Smart and sleek design for versatile placement anywhere
- Ultra-flat for a perfect fit in front of your TV


Connect wirelessly and enjoy all your entertainment

- Works with all Android™ DLNA phones and tablets
- Stream movies from your device to your TV while you surf the web
- Integrated Smart Media Player to play all your media files
- Wirelessly stream movies and music with SimplyShare

PHILIPS

Highlights

Android™ Compatibility

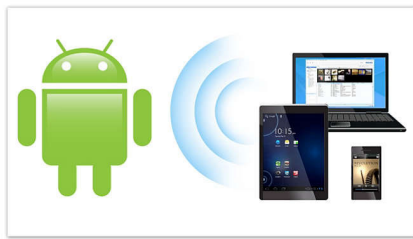

This home cinema speaker is compatible with all Android™ DLNA tablets and phones so you can stream all of your favourite music, movies and photos wirelessly. Simply ensure your home cinema speaker and Android devices are connected to the same Wi-Fi network, and you can start enjoying endless entertainment straight away.

Stream wirelessly



Philips SimplyShare lets you effortlessly share all your favourite music, movies and photos directly from your Android DLNA tablet/ phone to your home cinema sound. Simply connect your home cinema speaker, TV and Android devices to your Wi-Fi network, and start streaming your media files easily.

Integrated Smart Media Player



The integrated Smart Media Player lets you play all your media files on this home cinema speaker. Simply connect a portable hard drive, thumb drive or SD card to the USB connector/ SD card slot* of the home cinema speaker and start enjoying your music, movies and photos right from the comfort of your sofa.


Surf and stream simultaneously

Stream movies from your device to your TV while you surf the web

Angled stand

Angled stand for full frontal sound projection

Virtual Surround Sound

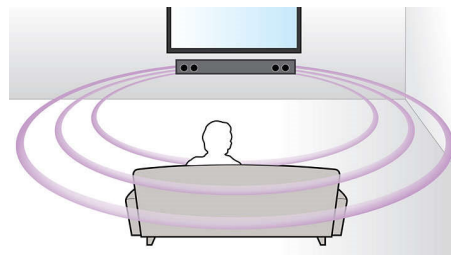

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-

channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you get a full, uncompromised listening experience.

Smart and sleek design

Smart and sleek design for versatile placement anywhere

Ultra-flat

Ultra-flat for a perfect fit in front of your TV

Wireless subwoofer



Wireless subwoofer adds thrill to the action



Specifications

Sound

- Sound Enhancement: Auto Volume Leveller, DoubleBass, FullSound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, DTS Digital Surround
- Subwoofer output power: 90 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Speaker output power: 30 W x 2
- Total Power RMS @ 30% THD: 150 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 20–150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Active
- Subwoofer impedance: 4 ohm
- Speaker Drivers per side: 1 x 1" Mylar tweeter, 1 x 2.5" woofer
- Speaker Impedance: 8 ohm

Connectivity

- Front/Side connections: USB
- Integrated Connections: Wi-Fi
- Rear Connections: AUX IN 1, Digital coaxial in, Digital optical in, Ethernet, HDMI 1.4 output (ARC)

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power consumption: 45 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 840 x 48 x 110 mm
- Weight incl. Packaging: 11 kg
- Main Unit Weight: 2.2 kg
- Packaging (W x H x D): 900 x 304 x 373 mm
- Subwoofer (W x H x D): 220 x 251 x 280 mm
- Subwoofer Weight: 4 kg

Audio Playback

- Compression format: AAC, FLAC, MP3, Ogg Vorbis, PCM, WAV, WMA

File Format

- Audio: aac, mka, mp3, wma
- Video: asf, avi, DivX, flv, mkv, mov, mp4, mpeg, mpg, wmv
- Picture: BMP, GIF, JPEG, JPG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG, TIFF
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4



Issue date 2024-05-02

Version: 7.4.6

EAN: 87 12581 62143 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Applicable only to specific models; please refer to product specification for full details