



Philips  
Cordless phone with  
answering machine

25 min answering machine  
1.8" display/ white backlight  
Handset speakerphone

**D2351B**



## Enjoy the view

The Philips D235 Cordless Phone packs HQ Sound and a large, clear display in a sleek, ergonomic design. Enjoy smart privacy modes, great comfort and the convenience of an inbuilt answering machine – all in easy handsfree style.

### Nice and simple

- Easy to read 4.6 cm (1.8") display with white backlight
- Freestanding handset with a speaker for easy handsfree calls
- Up to 25 minutes message on your answering machine
- Textured back cover for non-slip grip
- Up to 16 hours talk time on a single charge
- Programmable hot keys for quick dial
- Privacy settings: call block & call barring
- Caller ID – so you always know who is calling\*

### Crystal clear sound

- Parametric Equalizer delivers pure and clear sound
- Optimized antenna layout for great reception in any room
- Advanced sound testing & tuning for superb voice quality

### Eco-conscious product

- Zero power emission when ECO+ mode is activated

**PHILIPS**

# Highlights

## 4.6cm (1.8") display

Easy to read 4.6 cm (1.8") display with white backlight

## Advanced sound testing

We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction.

## Caller ID\*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

## Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## Non-slip grip



The rear of the handset is treated with a special texture for added comfort and better grip.

## Optimized antenna layout



Our optimized antenna layout ensures strong and stable reception – even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

## Parametric Equalizer



Our telephones use parametric equalization in the digital sound processing to fine-tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

## Programmable hot keys




Now calling the people you care about most is easier than ever. With simple one-touch dialing, you will never have to search for their number again. You can program up to 2 keys for instant calling.

## Up to 16 hours talk time



Up to 16 hours talk time on a single charge

## Up to 25 min. recording

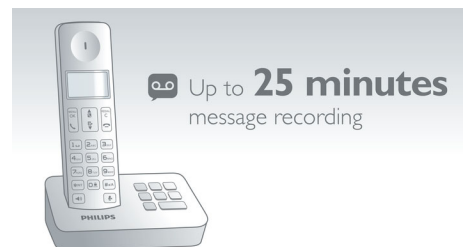

Up to 25 minutes message on your answering machine

# Specifications

## Convenience

- Menu structure in the handset: List Menu
- Speakerphone - talk handsfree
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3-bar indicator
- Battery level indicator: 3-bar battery icon
- Intercom - multiple handsets
- Date / Time display
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting\*, Caller ID\*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto hang up
- Multi handset capability: Up to 4
- Number of keys: 20
- Base Station keys: Paging key, Volume control, Answering machine keys
- Up to 16 hrs talk time
- Charge time: 8 hours
- Line cord length: 1.8m
- Power cord length: 1.8m
- Range: Open field <300m; indoor <50m
- Block callers/ Blacklist\*: Restrict the phone from ringing on specific incoming numbers
- Non-slip grip: Uniform texture
- Up to 200 hrs standby time

## Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic
- HQ-Sound

## Picture/Display

- Display size: 4.6cm / 1.8"
- Display type: 1-line dot matrix + 1-line numeric + icons
- Backlight: Yes
- Backlight color: White

## Answering Machine

- Recording time capacity: up to 25 minutes
- Pre-recorded OGM
- Answering machine control: from base & handset
- Loud speaker on base
- Message indication on base: LED (Soft Amber)

## Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: 10 last numbers
- Call log entries: 20 entries
- Phonebook store in the base

## Power

- Battery Capacity: 500 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz
- Power Consumption: <0.75W

## Security

- Transmission encryption : Yes

## Network Features

- Compatible: GAP

## SAR Value

- Philips handsets: <0.1 W/kg

## Eco Design

- Eco+

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 18.4 x 13.5 x 5.9 cm
- Gross weight: 0.392 kg
- Nett weight: 0.316 kg
- Tare weight: 0.076 kg
- EAN: 48 95185 61127 3



Issue date 2019-06-02

Version: 3.0.3

12 NC: 8670 001 26897  
EAN: 48 95185 61127 3

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* \*This feature requires additional subscription of Caller ID service.  
Please check with your local network operator for details.