



Philips 3000 series
Blu-ray Disc/ DVD player

DivX Plus HD

WiFi-Ready
BD-Live



BDP3200

Get the Blu-ray cinematic experience at home

Bring the magic of movies home in full High Definition with Blu-ray and DivX Plus HD on this sleek player. Conveniently enjoy your favorite video and music files directly from USB flash drives or portable hard disks with USB 2.0 Media Link.

See more

- DivX Plus HD Certified for high definition DivX playback
- Blu-ray Disc playback for sharp images in full HD 1080p
- Watch YouTube videos directly on your big screen TV*
- 1080p at 24 fps for cinema-like images
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles

Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound

Engage more


- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Enjoy all your movies and music from CD and DVD
- EasyLink to control all HDMI CEC devices via a single remote



PHILIPS


Highlights

Blu-ray Disc playback

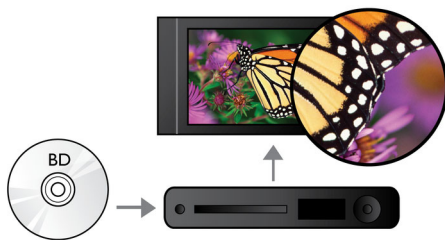

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

Dolby TrueHD and DTS-HD MA

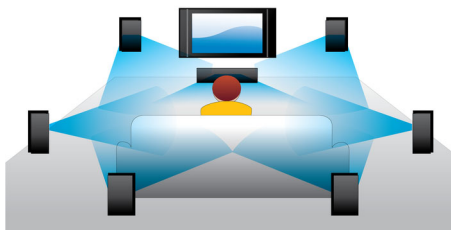

DTS-HD Master Audio and Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

USB 2.0

The Universal Serial Bus or USB is an industry standard that allows high-speed, easy connection of peripherals to PCs, consumer electronics and mobile products. The USB 2.0 provides better and faster performance - up to 40 times quicker than the USB 1.0 and with a data transfer rate of up to 480 Mbps from the original 12 Mbps. When plugged in, everything configures automatically. With USB 2.0, simply plug in your USB portable devices or hard disk drives, select the movie, music or photo and play away.

BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the

internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

1080p at 24 fps



Bring true cinema experience into your living room with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs - thus giving you sensational cinema-like high definition images that will astound you.-

DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Specifications

Picture/Display

- Aspect ratio: 21:9, 16:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Progressive scan
- D/A converter: 12Bit/148MHz

Video Playback

- Playback Media: BD Video, BD-R/RE 2.0, DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, DivX, CD, CD-R/CD-RW, USB flash drive, BD-ROM
- Compression formats: H.264, VC-1, MPEG2, WMV, XviD, AVCHD, DivX Plus™ HD, MKV
- Disc Playback Modes: Standard Play, Pause, Search forward/reverse, Resume Playback from Stop, Slow Forward, Skip, Disc Menu, Repeat, A-B Repeat, Zoom, Angle
- Video Enhancement: Deep Color, x.v. Color, Video Upscaling, Progressive Scan
- BD Region Code: C
- DVD Region Code: 5

Sound

- Sound System: Dolby True HD, DTS, Dolby Digital, Dolby Digital Plus, DTS-HD Master Audio
- Signal to noise ratio: 105 dB
- Dynamic Range (1kHz): 92 dB
- Frequency response: (20kHz) ±0.5dB (Max./Min. 2ch, DVD) Hz
- D/A converter: 24 bit, 192 kHz

Audio Playback

- Playback Media: CD, CD-R/RW, MP3-CD, MP3-DVD, USB flash drive
- Compression format: DTS, Dolby Digital, MP3, PCM, WMA, AAC (multi-channels)

Digital Photo Playback

- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive

- Picture Enhancement: High Definition Resolution, Rotate, Slideshow, Zoom, Slideshow with MP3 playback
- Picture Compression Format: JPEG

Connectivity

- Rear Connections: HDMI output, Digital coaxial out, Composite video (CVBS) output, Analog audio Left/Right out, Ethernet
- Front / Side connections: USB 2.0
- Network connections: Wi-Fi Ready (802.11 g/n)*

Convenience

- EasyLink (HDMI-CEC): One touch play, One touch standby
- On-Screen Display languages: English, Russian, Ukraine
- Child Protection: Parental Control
- BD-Live(1GB USB memory needed)
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

Accessories

- Included accessories: User Manual, Quick start guide, Product Registration Card, Remote Control, 2 x AAA Batteries
- User Manual: Russian

Power

- Power supply: 50Hz, 220-240V
- Power consumption: 18 W
- Standby power consumption: 0.3W

Dimensions

- Packaging dimensions (W x H x D): 500 x 125 x 285 mm
- Weight incl. Packaging: 3.75 kg
- Product dimensions (W x H x D): 435 x 60 x 227 mm
- Product weight: 3.00 kg



Issue date 2019-02-28

Version: 3.1.14

12 NC: 8670 000 66689
EAN: 87 12581 55867 3

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To upgrade to access YouTube, please visit www.philips.com/support
* Adaptor supplied is needed for all Latin American countries, except in Brazil.