

Philips
5.1 Home theater with
360Sound

Blu-ray 3D playback



HTS9520



Surround sound from all angles, like in the cinema

Obsessed with Sound

Over 70% of people who took the sound challenge* prefer Philips 360Sound. 360Sound speakers are designed with sound drivers in the front and on the sides to fill your room evenly with surround sound, just like in the cinema.

Ultimate listening experience

- 360Sound fills your room with sound from all angles
- Dolby TrueHD and DTS-HD for high fidelity surround sound

Designed to enhance your living space

- Iconic and compact speakers enhance your home environment
- Sophisticated design with high-quality aluminum finish

Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Philips Net TV with Wi-Fi for online services on your TV
- DLNA Network Link to enjoy music & videos from your PC



2011




asimpleswitch.com

PHILIPS

Highlights

360Sound

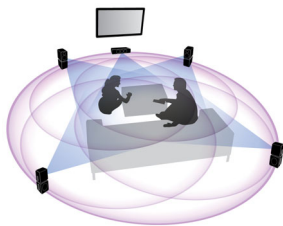

Vastly different from a conventional 5.1 home theater, 360Sound is uniquely designed with three drivers in each satellite speaker – a front one, and two side firing ones which are angled to project immersive sound around you. In addition to the principle of dipoles, Philips uses a proprietary algorithm to further enhance the embracing sound effect. Built with premium acoustic components like soft dome tweeters, Neodymium magnets and Class D digital amplifiers, 360Sound delivers exceptional sound from all angles – giving you a true cinema experience in your own home.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed


surround sound for an unbelievably real audio experience.

Philips Net TV with Wi-Fi



Experience a rich selection of online services with Net TV. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Simply connect your home theater directly to your home network through the ethernet connection, and navigate and select what you want to watch with the remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen. Additionally, with the DLNA certified PC network you can watch videos or access pictures stored on your computer using your remote control.

Dolby TrueHD and DTS-HD

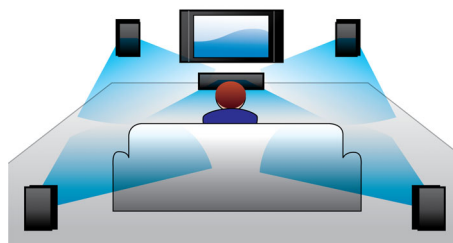

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.



EISA award

EISA recognizes the features to be appreciated by people seeking high quality & creative facilities.

Philips HTS 9520's novel satellite speakers, each comprising multiple drivers are the key. The lower cabinet features two side-firing units which act as dipoles while the top cabinet utilizes a conventional bass/treble arrangement. These are driven from Class D amplifiers in the HTS9520's main DVD/BD player, which also includes custom DSP to further enhance the system's surround sound. With a subwoofer providing a solid foundation for the midrange and treble, the result is a sound that surrounds you in new and exciting ways! This product is ready for both 3D TV and wireless access to your PC.



iF award

iF award: product design 2011

There's cinematic surround sound - and there's Philips 360Sound,

the only system that produces high-quality sound that comes at you from all angles. This premium surround sound home theater achieves its effect through five speakers, one subwoofer and one Blu-ray center unit. Each speaker contains three drivers and one tweeter. Two of the drivers fire sound from the side, which increases the sense of immersion. The speakers are discrete yet powerful, and the system is constructed from high-end materials finished with brushed aluminum and chrome to complement the home interior.

5.1 Home theater with 360Sound
Blu-ray 3D playback

HTS9520/51

Specifications



Issue date 2014-03-17

Version: 28.5.11

12 NC: 8670 000 59333
EAN: 87 12581 52084 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Base on consumer sound tests carried out by Synovate in Nov 2010
in Germany vs. a leading competitor. Data on file.