

#### PHILIPS PHILIPS

### **Choosing Power Supply**

- a Connect the AC power cord to the AC~ Mains inlet and the wall socket. -OR-
- b Open the **battery door** and insert 6 x C batteries (not included).

## **?** Listening to the Radio


- Push the source selector to a TUNFR
- b Adjust **BAND** to **MW** or FM.
- Turn **TUNING** to tune to a c station.

#### **3** Playing a disc


This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.

IMPORTANT: For a disc with CD Audio tracks and MP3 files, only the CD audio tracks will be played.

- a Adjust the **source selector** to CD/MP3.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press PLAY/PAUSE ►II to start playback.
- e To stop disc playback, press ■.

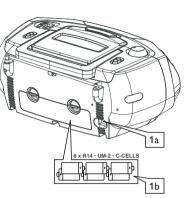

R-14, UM-2 or C-cells (not included)

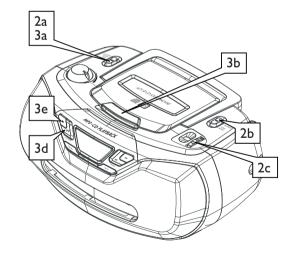

#### Source selector

Slide to select function: CD/MP3-CD or radio.

# **VOLUME** \

Turn to adjust olume level.

K

# LIFT TO OPEN

Lift to open the disc door.

Press to stop disc playback, or erase a disc program.

# PLAY/PAUSE

Press to start or pause disc playback..

#### ALBUM+ (up) For MP3-CD c/ilv: Press to select albums

## MODE

Press to select different play modes, such as **REPEAT or SHUFFLE** (random order)

#### TUNING

Turn to tune to a station.

#### BAND

Slide to select waveband

#### **Telescopic** antenna Improves FM reception.

# SEARCH

## Briefly press to skip to


the beginning of the current/previous/ later disc track: During disc playback, press and hold to find a particular passage backward/forward.

#### PROG

- Co

Use to program disc tracks and review a disc program.

## Display Shows disc functions

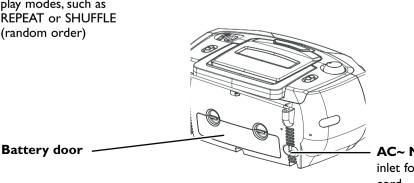

AC~ MAINS inlet for the AC power cord.

