

Philips  
DVD home theater system



HTS3151D

## Simply sounds great

Dock included for iPod

A stylish and compact digital system, the HTS3151D produces high quality Dolby multi-channel surround sound. Able to play practically any disc, it provides captivating home entertainment for the enjoyment of both movies and music.

### Connect and enjoy multiple sources

- Dock included for iPod
- USB Direct plays photos and music from USB flash drives
- MP3 Line-in for music playback from Portable Media Players

### Brings audio and video to life

- 12-bit/108MHz video processing for sharp, natural images
- Dolby Digital and Pro Logic II surround sound

### Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL
- Plays DivX, MP3, WMA and JPEG digital camera photos


### Easy to set up and use

- Easy-fit™ connectors with color-coding for a simple set-up

**PHILIPS**  
sense and simplicity

# Highlights

## Dock included for iPod

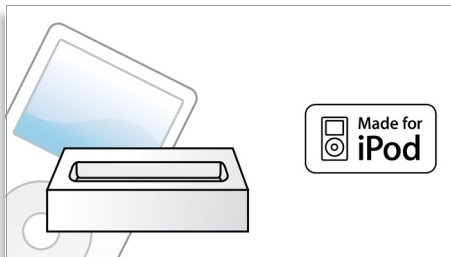

Use the docking station for your iPod, and enjoy music from your iPod on the home theater system.

## USB Direct

Simply plug your device into the USB port on your Philips DVD system. Your digital music and photos will be played directly from the device. Now you can share your favorite moments with family and friends.

## MP3 line-in

MP3 Line-in uses Plug and Play technology that allows direct playback of MP3 content via the home theatre system by simply plugging your portable MP3 player into the built-in headphonejack. Now you can enjoy the superb sound quality of the Philips Home Theatre System while playing your favorite music from your portable MP3 player.


## DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio


languages, multiple tracks and menus into one convenient file format.

## Plays it all

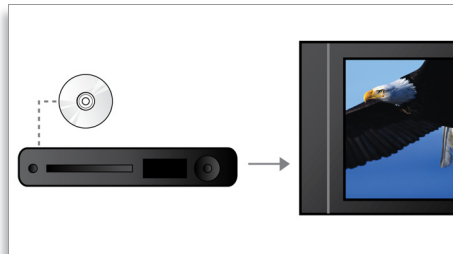


Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.

## Plays it all

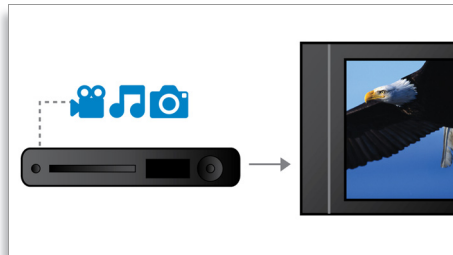

Play virtually any media format you want - whether they be DivX, MP3s, WMA or JPEGs. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system - in the comfort of your living room.


## 12-bit/108MHz video DAC

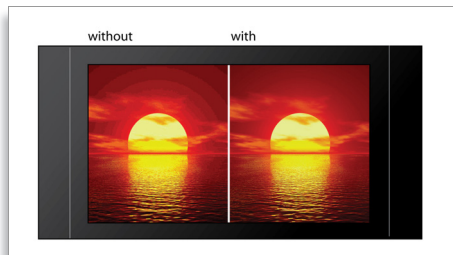

12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows


subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## Easy-fit™ connectors

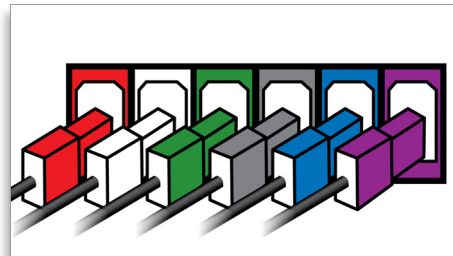

Color-coded connectors provide a simple and user-friendly solution to connect the speakers and subwoofer to the center unit of the home entertainment system simply by plugging the connectors in the matching colored interface at the rear of the center unit.

## Dolby Digital and Pro Logic II

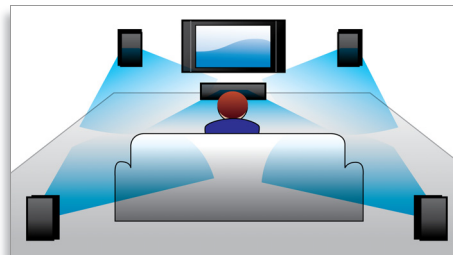

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.



# Specifications

## Picture/Display

- D/A converter: 12bit, 108MHz
- Picture enhancement: Progressive Scan

## Sound

- Total Power (RMS): 300 W
- Output power (RMS): 4x37.5W + 2x75W
- D/A converter: 24 bit, 192 kHz
- Frequency response: 180-14000 Hz
- Signal to noise ratio: > 60 dB
- Sound System: Dolby Digital, Dolby Prologic II, Stereo
- Equalizer settings: Action, Cartoon, Classic, Concert, Drama, Gaming, Jazz, Lounge, MTV, News, Party, RnB, Rock, Sports
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode

## Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: PAL, NTSC

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

## Tuner/Reception/Transmission

- Tuner Bands: FM
- No. of preset Audio Channels: 40

## Connectivity

- Rear Connections: Component Video output,

Composite video (CVBS) output, TV in (audio, cinch), AUX in, FM Antenna, Easy-Fit speaker connectors

- Front / Side connections: MP3 Line-in, USB

## Power

- Power supply: 120V, 60Hz
- Standby power consumption: < 1 W

## Loudspeakers

- Satellite speaker drivers: 3" full range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20000 Hz
- Center Speaker: Magnetically shielded
- Center speaker drivers: 3" full range woofer
- Center speaker impedance: 8 ohm
- Center freq range: 150-20000 Hz
- Subwoofer driver: 6.5" high efficiency woofer
- Subwoofer type: Passive
- Subwoofer impedance: 8 ohm
- Subwoofer freq range: 45-150 Hz

## Accessories

- Included Accessories: Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, Quick start guide, User Manual, World Wide Warranty leaflet, Dock interconnect cable, Dock video cable, iPod/GoGear Dock, Product Registration Card

## Dimensions

- Set dimensions (W x H x D): 360 x 55 x 332 mm
- Set weight: 2.82 kg
- Surround Speaker dimensions (W x H x D): 100 x 95 x 83 mm
- Surround speaker Weight: 0.52 kg
- Center speaker dimensions (W x H x D): 100 x 95 x 83 mm
- Center Speaker Weight: 0.68 kg
- Subwoofer dimensions (W x H x D): 131 x 315 x 386 mm
- Subwoofer Weight: 4.2 kg
- Packaging dimensions (W x H x D): 570 x 310 x 392 mm
- Weight incl. Packaging: 11.1 kg



Issue date 2009-11-06

Version: 1.1.5

12 NC: 8670 000 35159  
UPC: 6 09585 14544 3

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)