




## Philips Clock Radio

Dual USB port for charging

FM, Analogue tuning  
Dual alarm  
Time & alarm backup

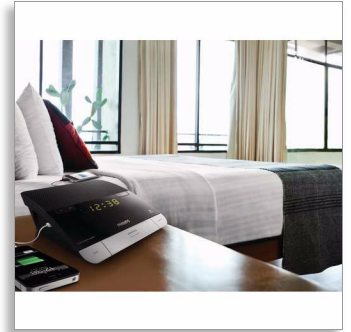

AJ4000B

## Charge your mobile while sleeping

with built-in micro USB cable

Start your day recharged with this clock radio. It charges your mobile phone and USB device at the same time, so you never run out of juice. The alarm can be set to go off with radio or a buzzer, while dual alarm gives you two wake up times

### Convenient bedside battery charger

- Charge your mobile phone via built-in micro USB cable
- Charge a second USB device via built-in USB hub

### Start the day your way

- Wake up to your favorite radio tune or a buzzer
- Gentle wake for a pleasant wake up experience
- Repeat alarm for additional snooze
- FM tuner for radio enjoyment


### Easy to use

- Dual alarm to wake you and your partner at different times
- Sleep timer for easy falling asleep to your favorite music
- Battery back-up ensures memory of time during power failure

# PHILIPS


# Highlights

## Wake up to radio or a buzzer

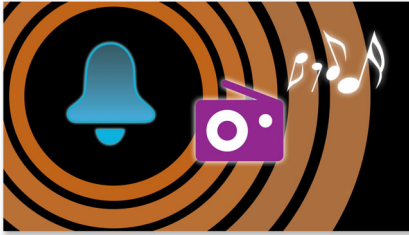


Wake up to sounds from your favorite radio station or a buzzer. Simply set the alarm on your Philips Clock radio to wake you with the radio station you last listened to or choose to wake up with a buzzer sound. When the wake up time is reached, your Philips Clock radio will automatically turn on that radio station or trigger the buzzer to sound.

## Dual alarm

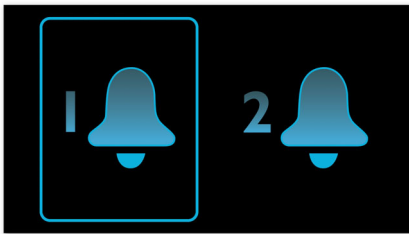

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

## Repeat alarm

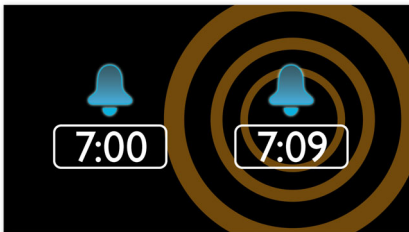

To counter oversleeping, the Philips Clock radio has a snooze feature. Should the alarm ring and you wish to continue sleeping a bit longer, simply press the Repeat Alarm button once and go back to sleep. Nine minutes later the alarm will ring again. You can

continue to press the Repeat Alarm button every nine minutes until you turn off the alarm altogether.

## Sleep timer



Sleep timer lets you decide how long you want to listen to music, or a radio station of your choice, before falling asleep. Simply set a time limit (up to 1 hour) and choose a radio station to listen to while you drift off to sleep. The Philips radio set will continue to play for the selected duration and then automatically switch to a power-efficient and silent stand-by mode. Sleep Timer lets you fall asleep to your favourite radio DJ without counting sheep, or worrying about wasting power

## Battery back-up

Battery back-up ensures memory of time during power failure

## FM tuner

The built-in FM tuner lets you enjoy your favorite songs or news from your radio station every day. Simply tune into the station that you want to listen.

## Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

# Specifications

## Clock

- Type: Digital
- Display: LED
- Display digits: 4
- Time format: 24H

## Alarm

- No. of alarms: 2
- Alarm source: Buzzer, FM radio
- Snooze (repeat alarm): Yes, 9mins
- 24 hours alarm reset
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

## Tuner/Reception/Transmission

- Analogue tuning
- Tuner bands: FM
- Frequency range: 87.5 - 108 MHz
- Antenna: FM antenna

## Convenience

- Display brightness: High/ Mid/ Low
- Volume control: Yes, Rotary
- Clock/ alarm backup: Yes, with 6F22 9V battery

## Sound

- Sound system: mono
- Output power (RMS): 300 mW

## Power

- Power type: AC power
- AC power input: 100-240 V, 50/60 Hz
- AC power output: 6.5V, 1.3A
- Operation power consumption: 11W
- Standby power consumption: <1W
- micro USB charging voltage: 5V
- USB charging voltage: 5V
- Number of batteries: 1
- Battery type: 6F22 9V
- Battery voltage: 9 V

## Dimensions

- Packaging type: D-box
- Packaging dimensions (WxDxH): 182 x 69 x 207 mm
- Product dimensions (WxDxH): 173 x 159 x 64 mm
- Weight incl. Packaging: 0.64 kg
- Weight: 0.49 kg

## Accessories

- Warranty: Warranty Certificate
- User Manual



Issue date 2014-09-25

Version: 3.0.3

12 NC: 8670 000 96599  
EAN: 87 12581 66346 9

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)