



In-ear true wireless headphones

- 8mm drivers/closed-back
- Active Noise Canceling
- Black
- Bluetooth®

TAT5505BK/00

## Your sound. Your style.

Music or calls, these sleek-looking true wireless headphones know how to perform. Active Noise Canceling tunes out background noise, and you can personalize the sound using the Philips Headphones app. Take an earbud out to pause the music.

### Benefits

#### simply smart

- Sleek design and hybrid Active Noise Canceling
- Philips Headphones app. Custom sound control
- Dual mics for clear calls. Mono mode
- IR sensor. Music pauses when you take an earbud out

#### The sound you want

- Charging case. Get up to 20 hours play time
- Powerful 8 mm neodymium drivers. Punchy bass, clear sound

- Oval acoustic tube. Silicone ear-tip covers
- Awareness Mode. Let the world in when you need to

#### Ready for your day. Or night

- Rock-solid connectivity. Integrated earbud controls
- IPX5 splash- and sweat-resistant
- Easily wake your phone's voice assistant

**PHILIPS**


## Features

### Sleek design



These true wireless headphones don't just look great—they also let you hear your tunes better when you're on the move. Hybrid Active Noise Canceling reduces external noise, so there's less between you and your music. Awareness Mode lets you bring the world back in.

### Philips Headphones app

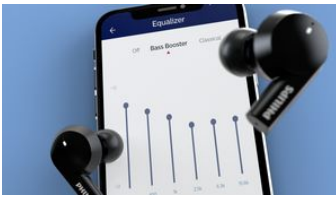

Enhance the bass. Tone down the treble. The Philips Headphones app puts you in charge of the music you're listening to. Adjust levels yourself or choose from preset sound styles. You can also switch between preset ANC modes with a single tap.

### Dual mics for clear calls

Two mics in each earbud focus on the sound of your voice, reducing noise from the world around you. If you're in a quieter place and don't need to block out noise while you're speaking, mono mode lets you use just one earbud to talk.

### Charging case.

You get up to 20 hours play time with the charging case, and the headphones will play for 5 hours from a single charge (4.5 hours with ANC). A speedy 15-

minute charge gives you an extra hour. It takes two hours to charge the case via USB-C.

### Powerful 8 mm neodymium driver



Traveling, working from home, or just relaxing. 8 mm drivers deliver great sound for every track, playlist, and more. If you take an earbud out, the music pauses. Put the earbud back in, and the music starts up again.

### Oval acoustic tube.

The oval-shaped acoustic tube sits comfortably and securely in your ear and maximizes passive noise isolation. You get a choice of silicone ear-tip covers in small, medium, and large, so you always get a comfortable fit.

### Rock-solid connectivity



Your headphones are ready to pair the instant you take them out of the charging case. Once they're paired, they remember the last device they were paired with. Touch controls on each earbud make it easy to control music, calls, and volume.

### IPX5 sweat-resistant

With an IPX5 rating, these true wireless headphones are resistant to splashing from any direction. They won't mind a little sweat, and you don't need to worry about getting caught out in the rain.

## Specifications

[field not found 'disclaimer\_text']

### Accessories

Quick Start Guide	Yes
USB cable	USB-C cable
Ear caps	3 sizes

### Convenience

Call Management	Answer/End Call Reject Call Switch between 2 calls
-----------------	----------------------------------------------------------

### Connectivity

Microphone	Built-in microphone
Bluetooth profiles	AVRCP A2DP HSP
	Streaming Format: SBC
Bluetooth version	5.0
Maximum range	Up to 10 m

### Design

Color	Black
-------	-------

### Power

Battery type	Lithium-Ion
--------------	-------------

Music play time	5+15 hr
Standby time	200 hr
Talk time	5+15 hr
Charging time	2 hr

### Sound

Acoustic system	Closed
Diaphragm	PET
Frequency response	20 - 20 000 Hz
Magnet type	NdFeB
Speaker diameter	8 mm
Impedance	16 Ohm
Maximum power input	5 mW
Sensitivity	105 dB (1K Hz)

### Outer Carton

Number of consumer packagings	24
Length	32.2 cm
Width	22.7 cm
Height	42 cm
Gross weight	5.52 kg
Tare weight	3.456 kg
GTIN	1 48 95229 11038 7

Nett weight 2.064 kg

#### Inner Carton

Number of consumer packagings 3  
Length 15 cm  
Width 10.5 cm  
Height 19.7 cm  
Gross weight 0.633 kg  
Tare weight 0.375 kg  
GTIN 2 48 95229 11038 4  
Nett weight 0.258 kg

#### Product dimensions

Height 3.6 cm  
Width 3.2 cm  
Depth 7.4 cm  
Cable length 0 cm  
Weight 0.057 kg

#### Packaging dimensions

Packaging type Carton  
Type of shelf placement Both  
Height 17.5 cm  
Width 9.5 cm  
Depth 4.5 cm  
Gross weight 0.164 kg  
Nett weight 0.086 kg  
Tare weight 0.078 kg  
EAN 48 95229 11038 0  
Number of products included 1

#### UPC

UPC 8 40063 20158 3



data subject to change  
2023, June 19

Version: 10.1.3  
EAN: 4895229110380

© 2023 Koninklijke Philips N.V.  
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)