



Philips
Wireless noise-cancelling
headphones

32 mm drivers/closed-back

On-ear
Soft ear cushions
Compact folding

SHB8750WT

More sound, less noise

wirelessly

No wires, no noise and no compromise. Immerse yourself in music with advanced ActiveShield™ active noise cancelling technology. Connect wirelessly with NFC one-tap pairing, enjoy music and manage calls with smart control on earpads.

Clear and natural sound

- 32mm neodymium speaker drivers deliver precision sound
- High-quality Bluetooth 4.0
- Soft ergonomic cushions for long wearing comfort

Art of Noise Cancellation

- ActiveShield™ noise cancelling reduces noise by up to 97%

Make life more convenient

- Control calls, music and volume with ear-shell switches
- Compact folding for easy carrying and storage
- Extra audio cable means music can continue without power
- Convenient hands-free calling with mic and Bluetooth® 4.0
- Multi-point plays music and calls on two devices at once
- Rechargeable battery offers up to 16 hours of wireless music
- Simple NFC one-tap pairing
- Activate Siri and Google Now with a press-on earcan button

PHILIPS

Wireless noise-cancelling headphones
32 mm drivers/closed-back On-ear, Soft ear cushions, Compact folding

SHB8750WT/00

Highlights

32 mm high-definition drivers




Finely tuned 32 mm neodymium drivers combined with a closed-back acoustic system design and on-ear sealing provide an excellent and impressive precision sound.

ActiveShield™



ActiveShield™ active noise-cancelling technology features two feed-backward microphones used for cancelling low frequencies. It detects ambient noise and inverts the sound wave, effectively cancelling it out and converting background noise to silence.

Compact folding

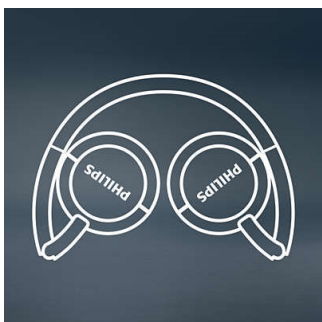

The compact, foldable design makes it the perfect on-the-go companion.


Extra audio cable included

Unlike most noise-cancelling headphones, the headphones work with or without battery to consistently deliver excellent audio in any environment. If the battery runs out, simply plug in the audio cable and continue enjoying your favourite music.

Hands-free calls

Convenient hands-free calling with mic and Bluetooth® 4.0

Multi-point

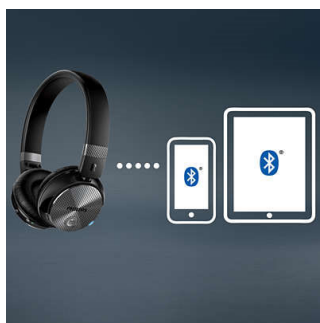


Multi-point allows you to connect your Philips Bluetooth headphones with two Bluetooth-enabled devices simultaneously. Simply pair up the two devices to enjoy movies and music while effortlessly taking calls in between.

Rechargeable battery


Enjoy 16 hours of continuous music playback even with Bluetooth and active noise-cancelling on, 28 hours when only Bluetooth is on and 33 hours when only ANC is on.

Simple NFC pairing

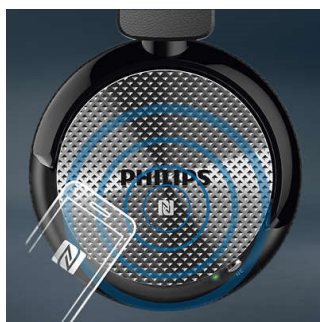


Simple NFC pairing lets you connect your Bluetooth® headphones with any Bluetooth-enabled device – with just a single touch.

Button controls

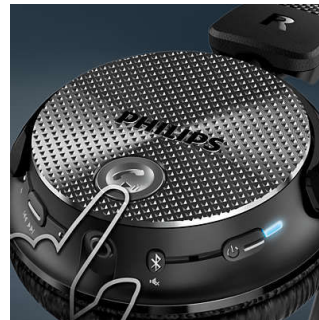

Button controls on the right ear shell enable you to control music and calls with a press.

Soft ergonomic cushions

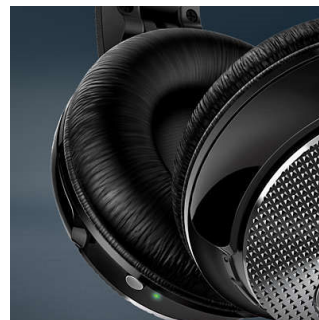

Soft ergonomic cushions for long wearing comfort

Works with Siri/Google Now

Compatible with Siri and Google Now, the latest Philips Bluetooth headphones make using your virtual assistant even easier. All you need is a press on the earcan button to activate Siri on iPhone or Google Now on Android devices.

Bluetooth 4.0



Enjoy high quality wireless sound with Bluetooth 4.0.

Specifications

Sound

- Acoustic system: Closed
- Frequency range: 10–22 000 Hz
- Speaker diameter: 32 mm
- Diaphragm: PET
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Maximum power input: 30 mW
- Sensitivity: 105 dB

Connectivity

- Audio Connections: 3.5 mm Line in
- Cable length: 1.2 m
- Connector: 3.5 mm stereo
- Bluetooth version: 4.0
- Cable Connection: single sided
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Finishing of connector: Gold-plated
- Maximum range: Up to 10 m

Outer Carton

- Length: 20.3 cm
- Number of consumer packages: 3
- Length: 8.0 inch
- Width: 16.2 cm
- Gross weight: 1.103 kg
- Height: 21.6 cm
- GTIN: 1 69 25970 71176 7
- Width: 6.4 inch
- Height: 8.5 inch
- Net weight: 0.618 kg
- Gross weight: 2.432 lb
- Net weight: 1.362 lb
- Tare weight: 0.485 kg
- Tare weight: 1.069 lb

Convenience

- Call Management: Answer/End Call, Reject Call, Microphone mute, Call on Hold, Switch between call and music, Switch between 2 calls
- Volume control

Power

- Rechargeable
- Battery Type: LI-Polymer
- Music play time: 16* hour(s)
- Standby time: 45* hr
- Talk time: 15* hr

Packaging dimensions

- Height: 19.9 cm
- Packaging type: Carton
- Type of shelf placement: Both
- Width: 19.4 cm
- Depth: 5 cm
- Height: 7.8 inch
- Number of products included: 1
- EAN: 69 25970 71176 0
- Width: 7.6 inch
- Gross weight: 0.308 kg
- Depth: 2.0 inch
- Net weight: 0.206 kg
- Gross weight: 0.679 lb
- Net weight: 0.454 lb
- Tare weight: 0.102 kg
- Tare weight: 0.225 lb

Product dimensions

- Height: 18 cm
- Width: 16 cm
- Depth: 3.8 cm
- Width: 6.3 inch
- Height: 7.1 inch
- Depth: 1.5 inch
- Weight: 0.175 kg
- Weight: 0.386 lb

Accessories

- Quick start guide: Included
- USB cable: Included for charging
- Audio cable: Extra 1.2-m audio cable

Design

- Colour: White



Issue date 2024-03-12

Version: 3.0.4

EAN: 69 25970 71176 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Actual results may vary