



Register your product and get support at
www.philips.com/welcome












Question?
Contact
Philips



CN 简明用户手册

DTB855

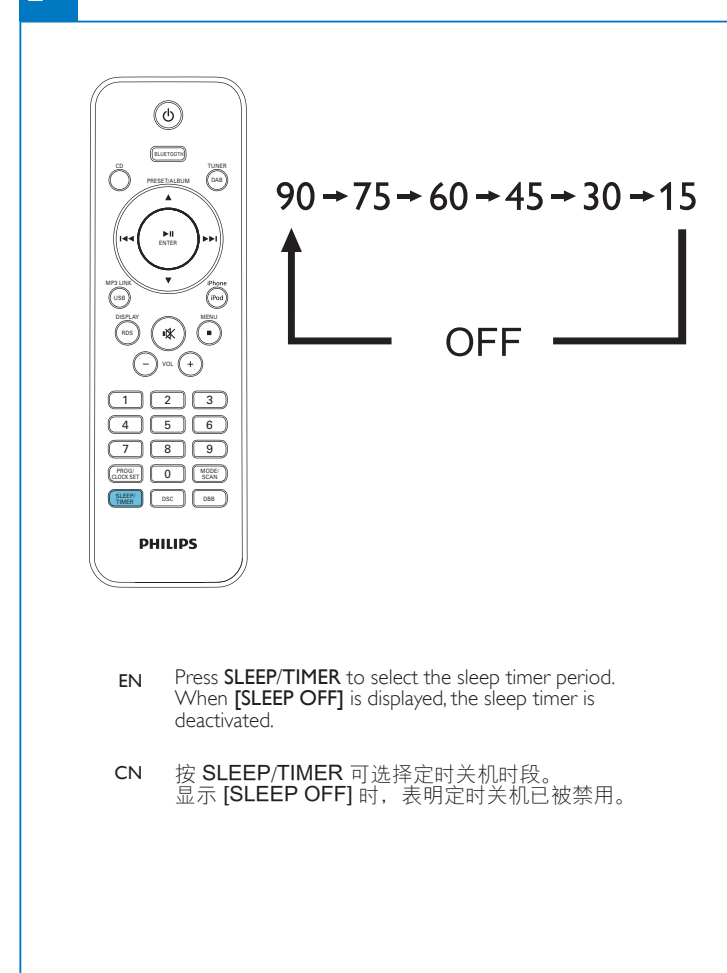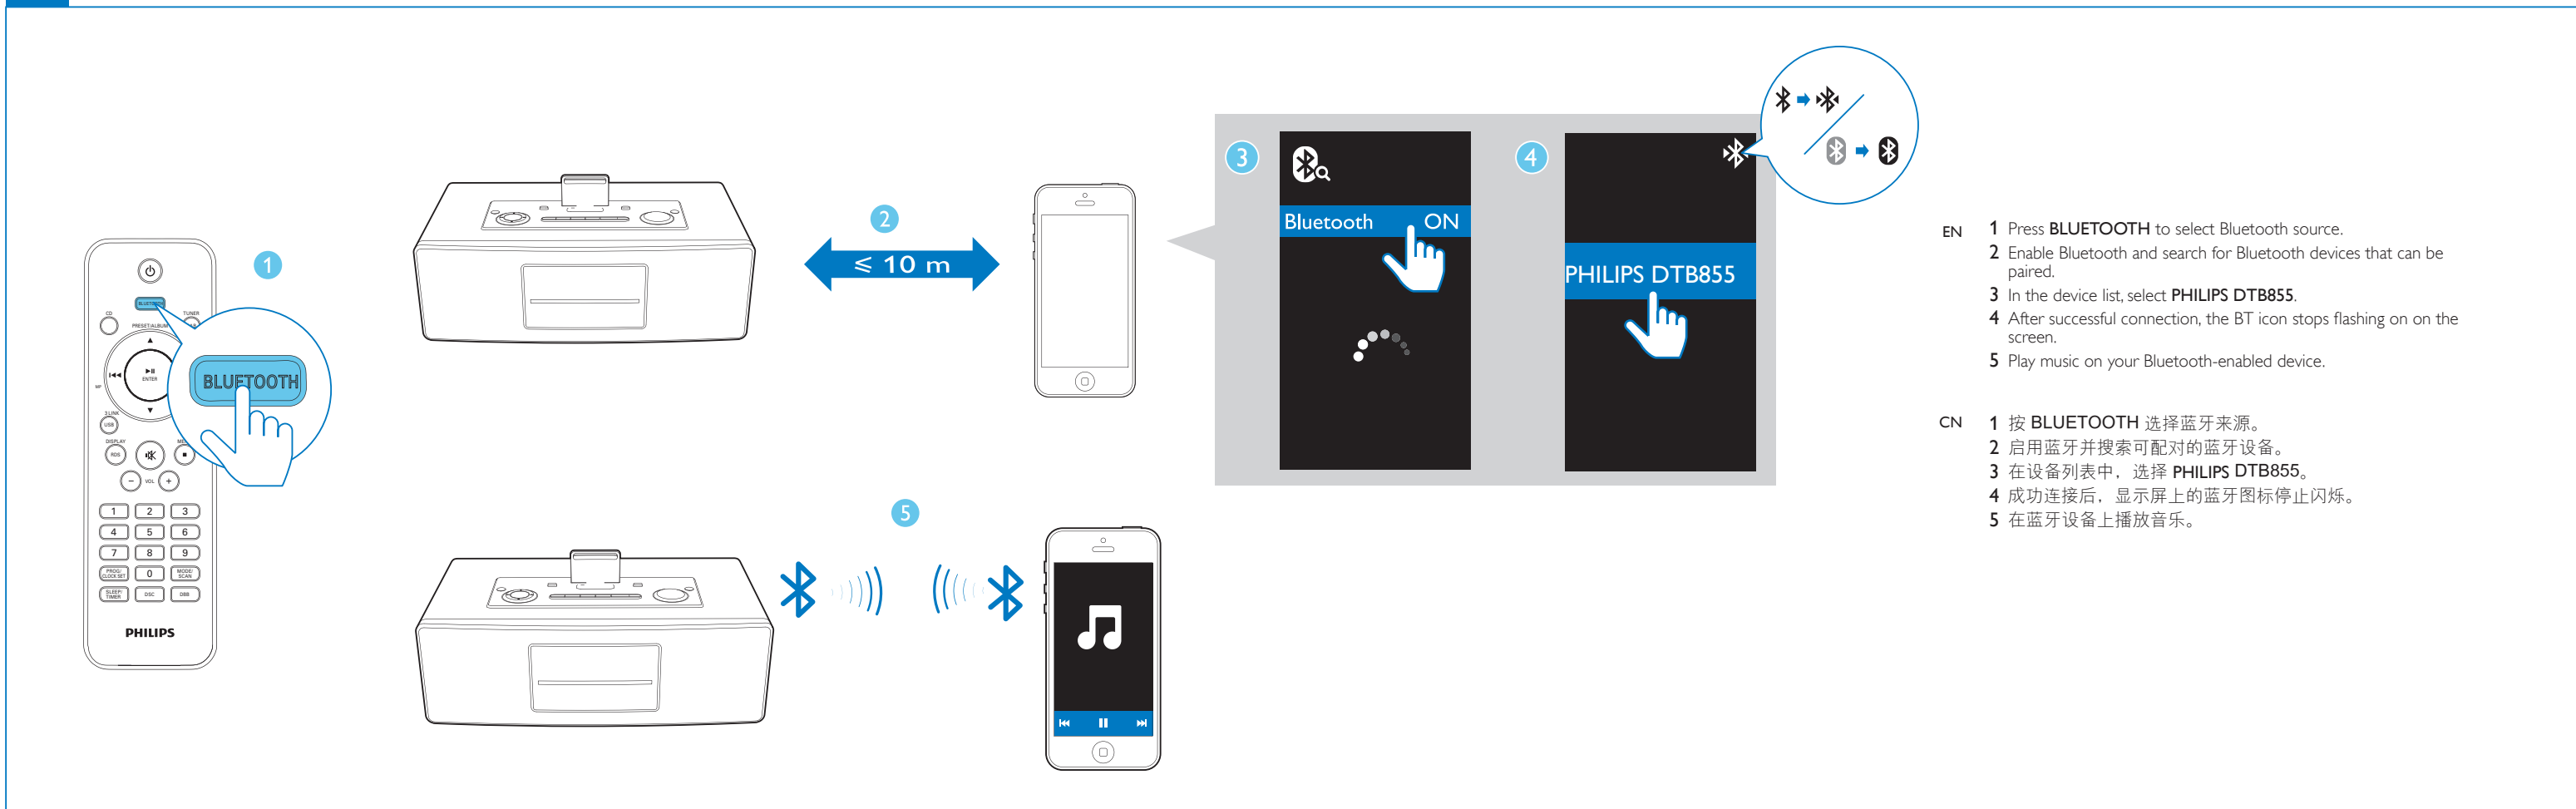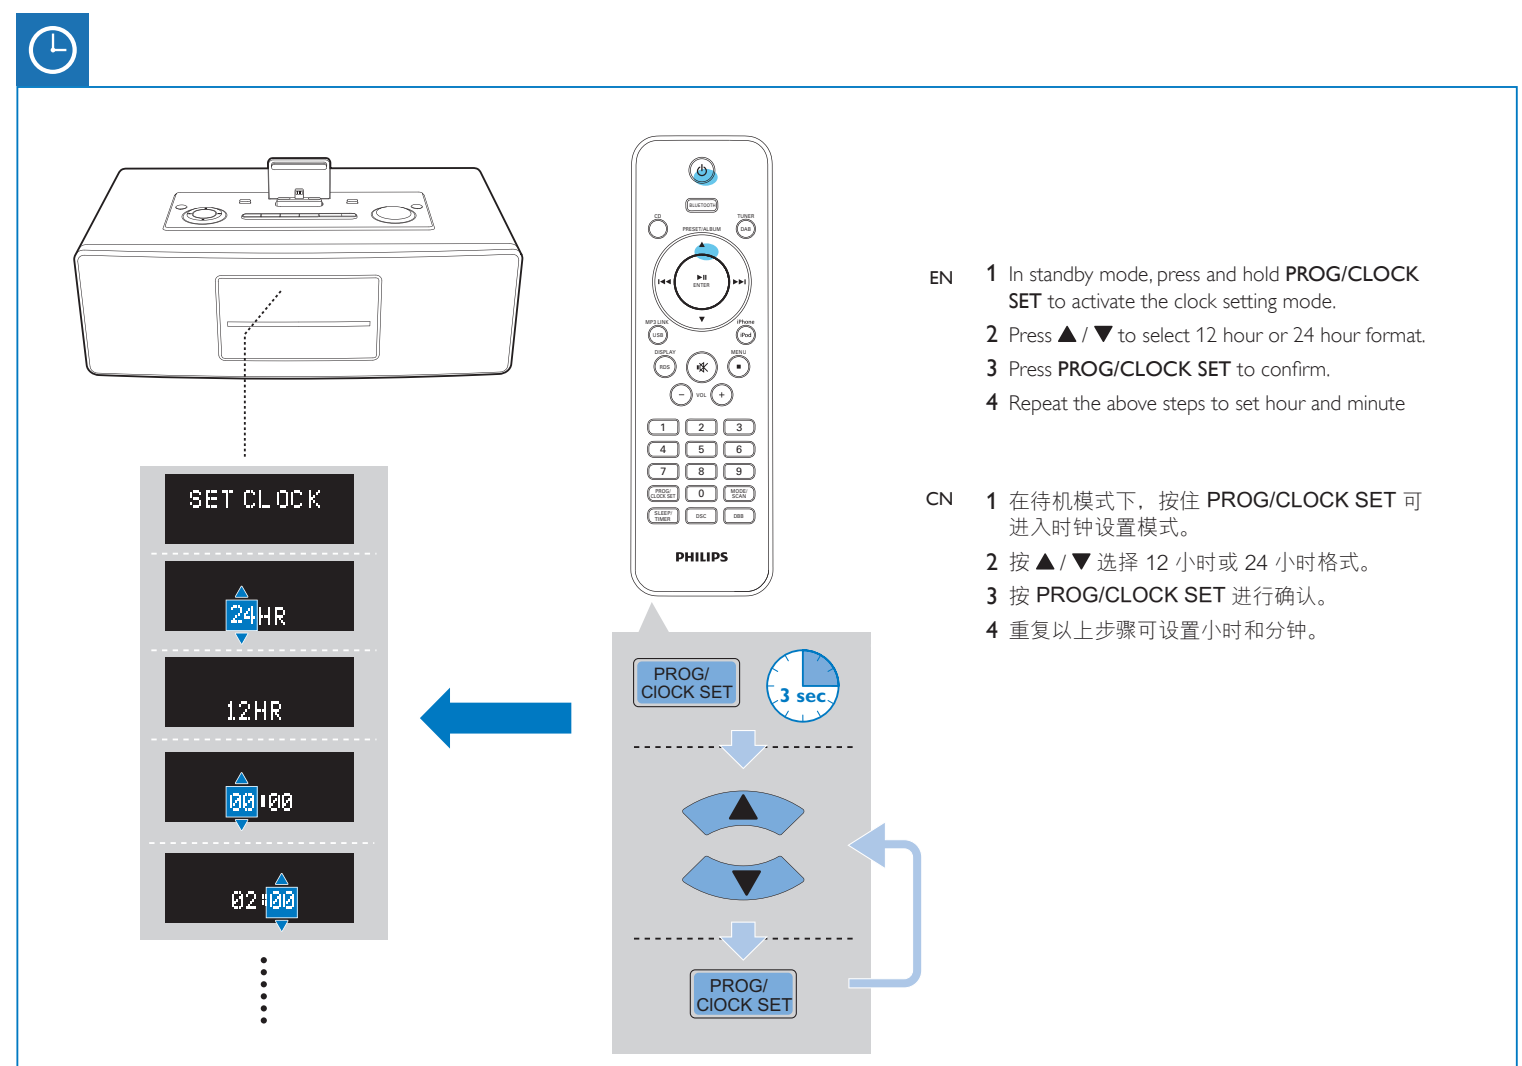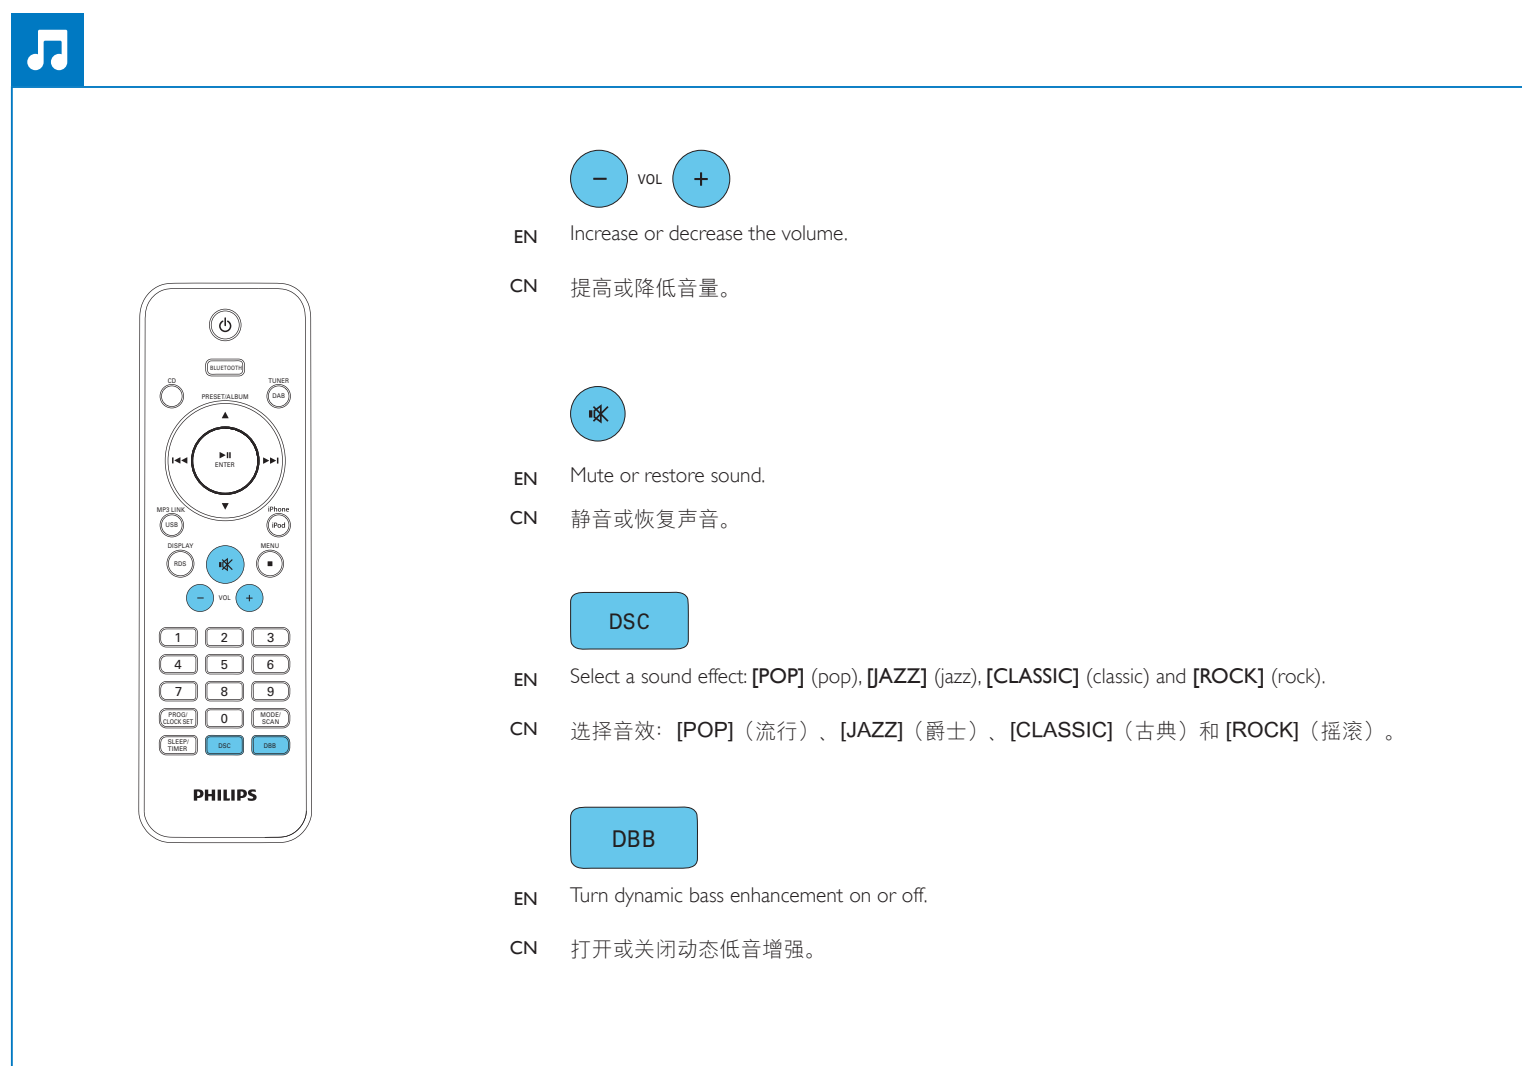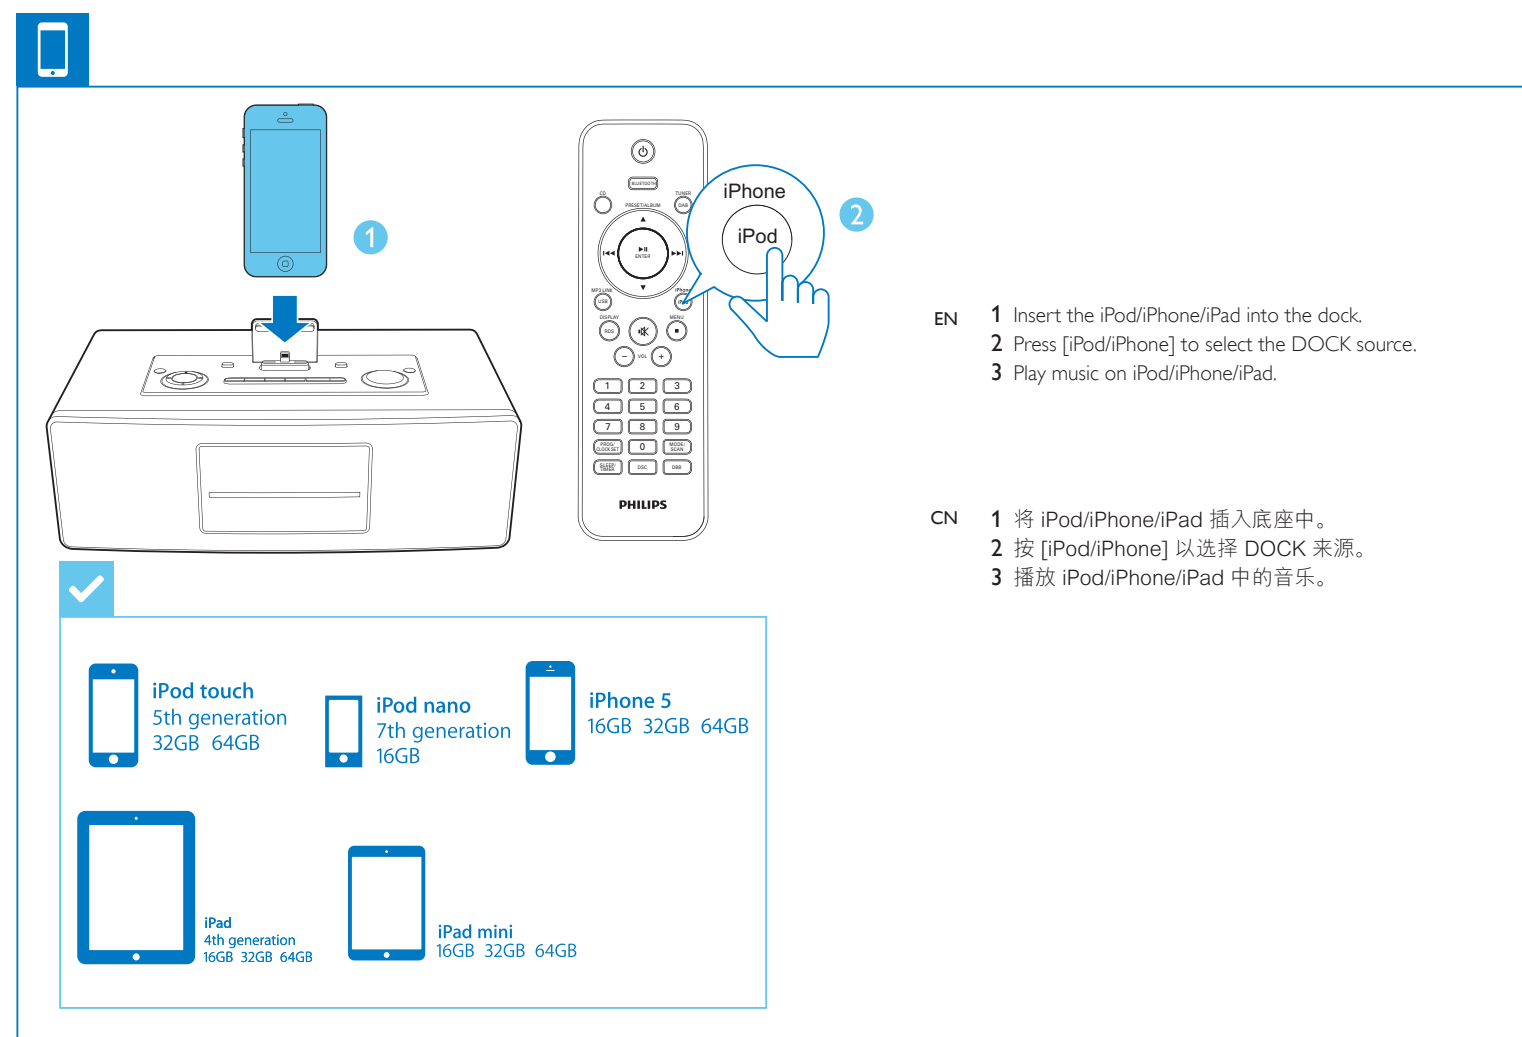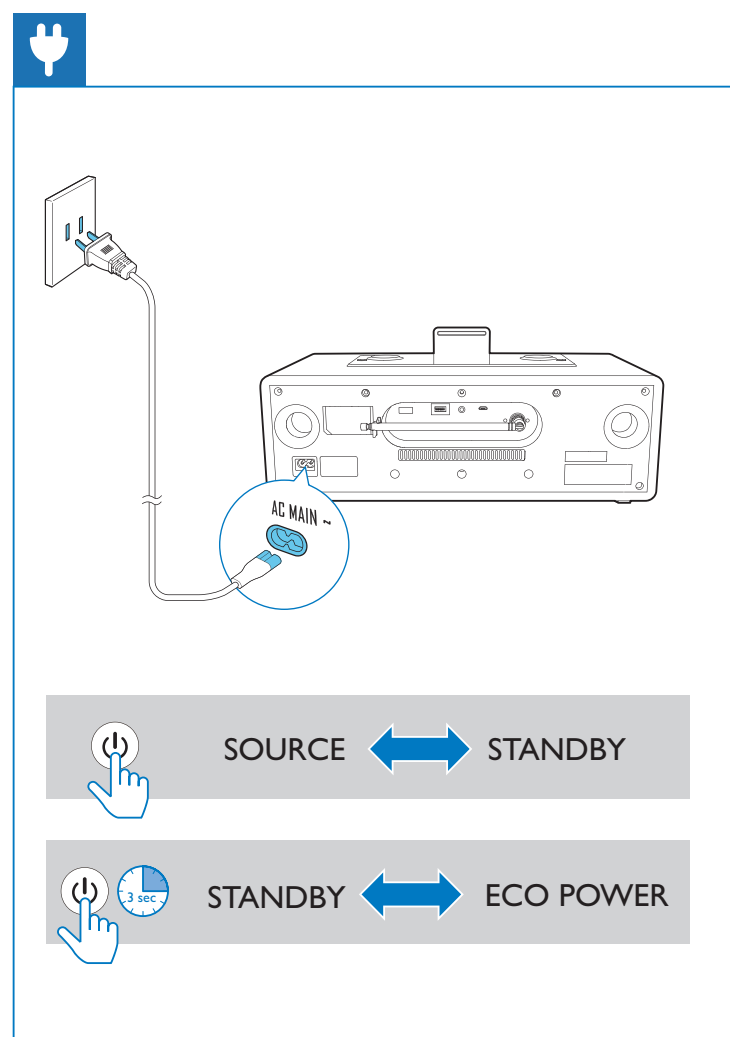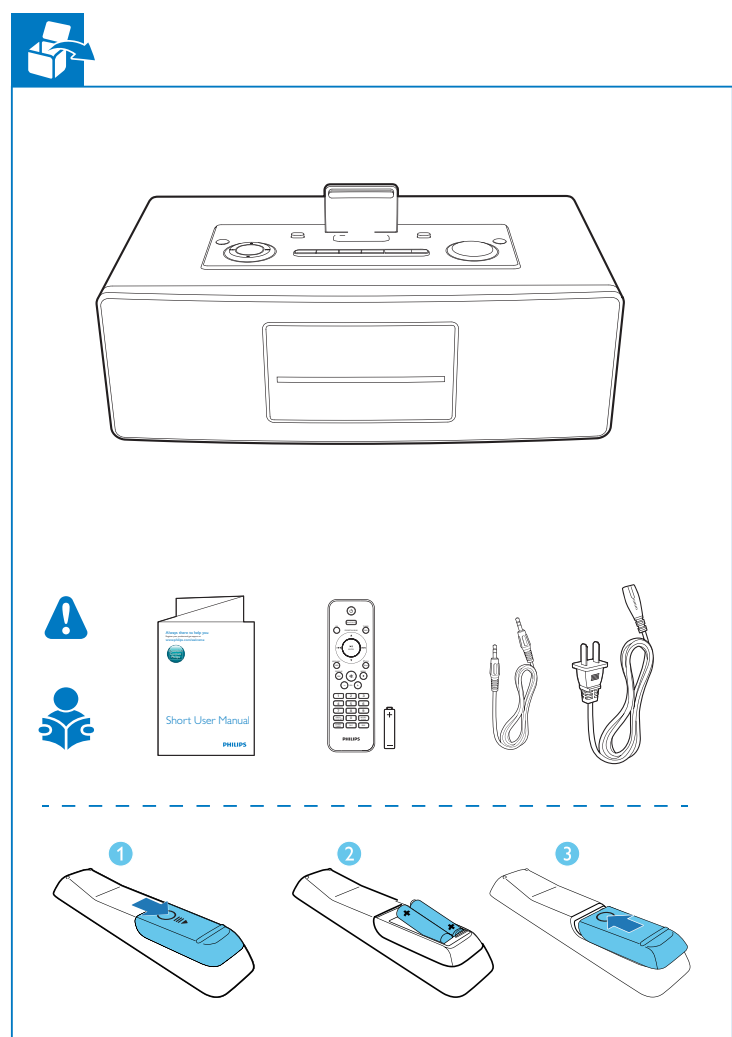

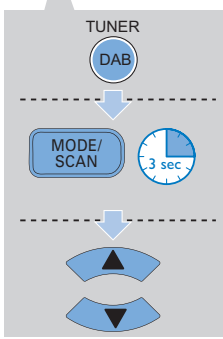
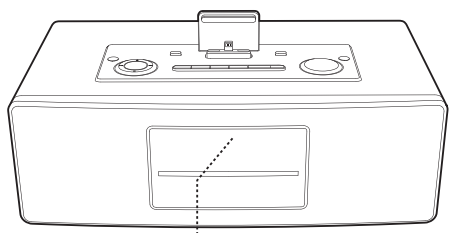


EN Store FM radio stations automatically

- 1 In the tuner mode, press and hold **MODE/SCAN** to activate automatic program mode.
- 2 Press **▲/▼** to select preset stations.

CN 自动存储 FM 电台

- 1 在调谐器模式下，按住 **MODE/SCAN** 可启用自动设定模式。
- 2 按 **▲/▼** 可选择预设电台。



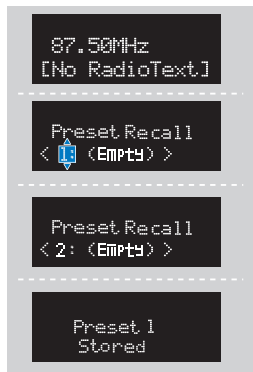
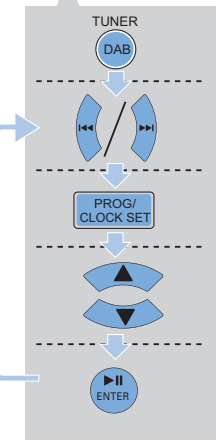


EN Store FM radio stations manually

- 1 Press **◀/▶** to tune to a radio station.
- 2 Press **PROG** to activate program mode.
- 3 Press to **▲/▼** allocate a preset number then press **PROG** to confirm.

CN 手动存储 FM 电台

- 1 按 **◀/▶** 可调谐至电台。
- 2 按 **PROG** 激活设定模式。
- 3 按 **▲/▼** 可分配预设编号，然后按 **PROG** 确认。

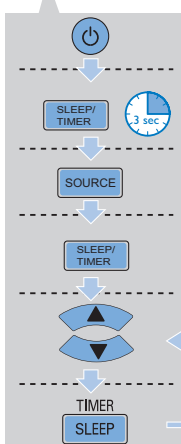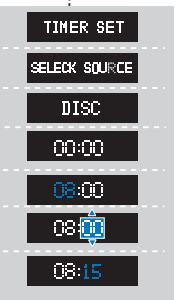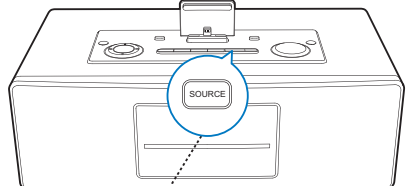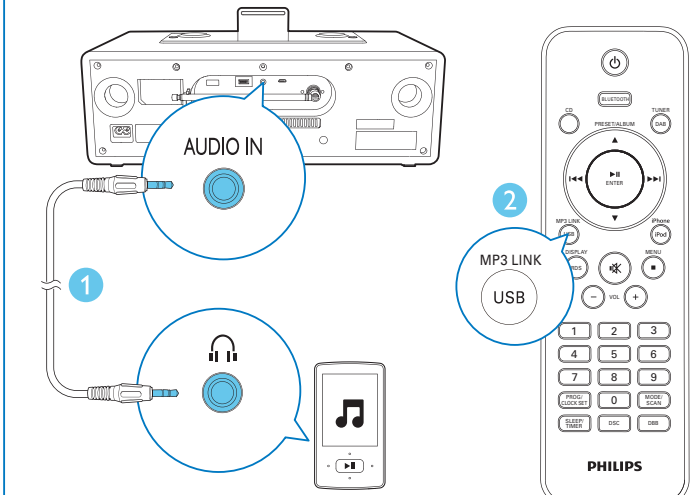

EN Ensure that you have set the clock correctly.

- 1 In standby mode, press and hold **SLEEP/TIMER**.
- 2 Press **SOURCE** repeatedly to select an alarm source.
- 3 Press **SLEEP/TIMER** to confirm.
- 4 Press **▲/▼** to set the hour.
- 5 Press **SLEEP/TIMER** to confirm.
- 6 Repeat the above steps to set minute and volume.


CN 确保已正确设置时钟。

- 1 在待机模式下，按住 **SLEEP/TIMER**。
- 2 反复按 **SOURCE** 可选择闹钟来源。
- 3 按 **SLEEP/TIMER** 确认。
- 4 按 **▲/▼** 设置小时。
- 5 按 **SLEEP/TIMER** 确认。
- 6 重复以上步骤以设置分钟和音量。




EN To fully enjoy features of this product, download the application **Philips DigitalRadio** from **Apple App Store** or **Android Market**, and install the application to your smart device.

CN 要享受本产品的完整功能，请从 **Apple** 应用程序专卖店或 **安卓**市场下载应用程序 **飞利浦 DigitalRadio**，并将应用程序安装到您的智能设备。

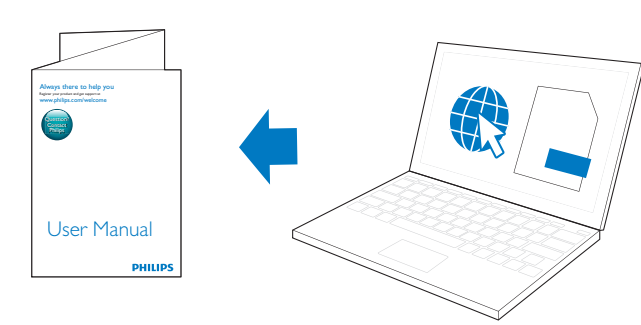

EN To download the full user manual, visit www.philips.com/support.

CN 要下载完整的用户手册，请访问 www.philips.com/support。

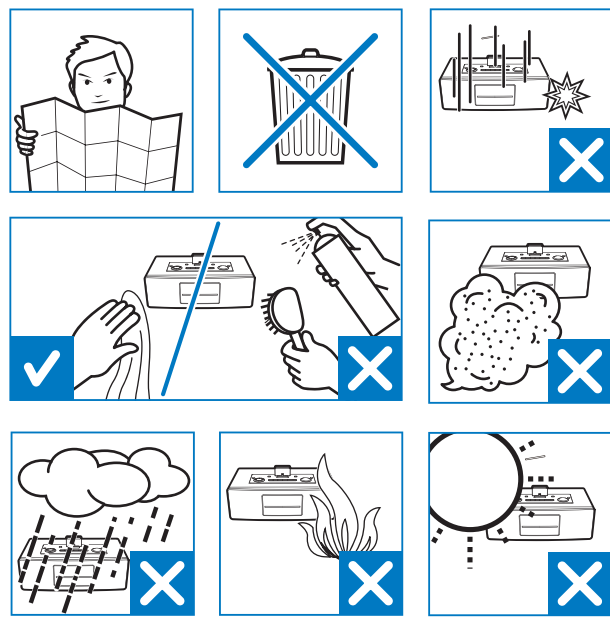

EN

1 Important

Safety

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

- The device shall not be exposed to dripping or splashing.
- Do not place any source of danger on the device (e.g. liquid filled objects, lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Make sure that there is enough free space around the product for ventilation.
- Only use attachments/accessories specified by the manufacturer.
- Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
 - Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

Notice

Any changes or modifications made to this device that are not expressly approved by WOXX Innovations may void the user's authority to operate the equipment.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Be responsible Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOXX Innovations is under license.



© 2013 CSR plc and its group companies.
The aptX® mark and the aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.

This apparatus includes this label:



Note

- The type plate is located at the rear of the apparatus.

2 Product information

Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	2X15W RMS
Frequency Response	60 Hz - 16 kHz, ±3 dB
Signal to Noise Ratio	>65dB
Aux Input	0.5 V RMS 20kohm

Disc

Laser Type	Semiconductor
Disc Diameter	12cm/8cm
Support Disc	CD-DA, CD-R, CD-RW, MP3-CD
Audio DAC	24Bits / 44.1kHz
Total Harmonic Distortion	<1%
Frequency Response	60Hz -16kHz (44.1kHz)
S/N Ratio	>65dB

Tuner

Tuning Range	FM: 87.5 - 108 MHz;
Tuning grid	50 KHz
Total Harmonic Distortion	<2%
Signal to Noise Ratio	>50 dB
Number of presets	30

Speakers

Speaker Impedance	4 ohm
Speaker Driver	2 X 3" full range
Sensitivity	>82 dB/m/W

General information

AC power	100-240V~, 50/60Hz
Operation Power Consumption	30W
ECO Standby Power Consumption	< 1W
USB Direct	Version 2.0/1.1
Dimensions	
- Main Unit (W x H x D)	380 x 186 x 227mm
Weight	
- Main Unit	4.19 kg

CN

1 注意事项

安全

警告

- 切勿拆下本产品的外壳。
 - 切勿润滑本装置的任何部件。
 - 切勿将本装置放在其它电器设备上。
 - 应让本装置远离阳光直射、明火或高温。
 - 切勿直视本装置内部的激光束。
 - 确保始终可轻易地接触到电源线、电源插头或适配器，以便于将本装置从电源上断开。
- 切勿将设备暴露于漏水或溅水环境下。
- 不要将任何危险源放在本设备上（例如装有液体的物体、点燃的蜡烛）。
- 主插头用作断路器装置，在不使用时应将插头拔掉，应保证与电网电源完全切断。
- 请确保产品周围有足够的空间进行通风。
- 仅使用制造商指定的附件/配件。
- 电池使用注意事项 – 为防止电池泄漏而造成人身伤害、财产损失或装置损坏，请：
- 按照装置上标明的 + 极和 - 极，正确安装所有电池。
 - 请勿混合使用电池（旧电池与新电池或碱电池与碱性电池，等等）。
 - 若打算长期不用本装置，应取出电池。
 - 不可将电池置于高温环境，如阳光直射处、明火或类似环境。

爱护产品

- 切勿将光盘以外的任何物体插入光盘仓中。
- 切勿将变形或破裂的光盘插入光盘仓中。
- 如果长时间不使用本产品，请将光盘从光盘仓中取出。
- 只能用微细纤维清洁布清洁本产品。

注意

如果用户未经 WOXX Innovations 的明确许可而擅自对此设备进行更改或修改，则可能导致其无权操作此设备。

环境信息

已省去所有不必要的包装。我们努力使包装易于分为三种材料：纸板（盒）、泡沫塑料（缓冲物）和聚丙烯（袋，保护性泡沫衬垫）。

您的系统包含可回收利用的材料（如果由专业公司拆卸）。请遵守当地有关包装材料、废电池和旧设备的处理的规定。

Be responsible Respect copyrights

进行受版权保护材料（包括计算机程序、文件、广播和录音）的未经授权复制可能会侵犯版权并构成犯罪。不得将此设备用于这些目的。



"Made for iPod," "Made for iPhone," and "Made for iPad" 表示电子附件专为连接 iPod、iPhone 或 iPad 而设计，并经过开发人员认证，符合 Apple 性能标准。Apple 对该设备的操作及其是否符合安全和法规标准不负任何责任。请注意，通过 iPod、iPhone 或 iPad 使用该配件可能影响无线性能。

iPod 和 iPhone 是 Apple Inc. 在美国和其它国家/地区注册的商标。iPad 是 Apple Inc. 的商标。

蓝牙® 字样和徽标均为 Bluetooth SIG, Inc. 所有，WOXX Innovations 对这些字样和徽标的任何使用均属合法。



© 2013 CSR plc 及其集团公司。
aptX® 标志和 aptX 徽标均为 CSR plc 或其任一集团公司的商标，并且可能已在 一个或多个司法管辖区注册。
本装置包括此标签：



注

- 铭牌（铭牌上的信息包括工作电压、消耗功率）位于主机背部，使用前请了解铭牌上的相关信息。

2 产品信息

注

- 产品信息如有更改，恕不另行通知。

规格

功放器

额定输出功率	2X15W RMS
频率响应	60 赫兹 - 16 千赫，± 3dB
信噪比	>65dB
Aux 输入	0.5 伏 RMS 20 k 欧姆

光盘

激光类型	半导体
光盘直径	12 厘米/8 厘米
支持的光盘	CD-DA、CD-R、CD-RW 和 MP3-CD
音频 DAC	24 位 / 44.1 千赫
总谐波失真	<1%
频率响应	60 赫兹 -16 千赫（44.1 千赫）
信噪比	>65dB

部件名称 Name of the Parts	有害物质和危险物质表 Hazardous Substances									
	汞 (Pb, Lead)	镉 (Cd, Cadmium)	六价铬 (Cr(VI), Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	汞 (Pb, Lead)	镉 (Cd, Cadmium)	六价铬 (Cr(VI), Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	○	○	○	○	○	○	○	○	○	○
CD-laser	×	○	○	○	○	○	○	○	○	○
LCD Panel	×	○	○	○	○	○	○	○	○	○
Capacitors 电容器	○	○	○	○	○	○	○	○	○	○
Printed wiring board 印刷电路板	×	○	○	○	○	○	○	○	○	○
Accessories (cables, remote control, etc.) 附件 (连接缆、电 视遥控器、电 视底座等)	×	○	○	○	○	○	○	○	○	○
Battery (Zn-Cd) 镍镉电池	×	○	○	○	○	○	○	○	○	○

○: 表示该有害物质在该部件所有均质材料中的含量均符合SJ/T11363 - 2006标准规定的限量要求以下。
○ Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

×: 表示该有害物质在该部件某些均质材料中的含量超过SJ/T11363 - 2006标准规定的限量要求。
× Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



环境使用期限 Environmental Protection Use Period

本产品符合RoHS指令，不含铅、汞、镉、六价铬、多溴联苯、多溴二苯醚等有害物质，符合RoHS指令的要求。本产品在使用过程中，请按照说明书的要求进行使用，请勿随意丢弃，以免造成环境污染。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or migrate so that the use of these substances or elements will not result in any severe environmental pollution, any bodily injury or damage to any assets.