



Philips izzy  
wireless multiroom  
portable speaker

**Bluetooth®**

Splash-proof  
Rechargeable battery  
izzylink™ for multiroom

**BM6B**

## One tap to play music in every room

The Philips izzy portable speaker BM6 plays music wirelessly via Bluetooth. It is splash-proof, so you can take it into the bathroom or kitchen or outdoors. Start off with one and add more to expand music to multiple rooms. Easy setup: no router, password or apps.

### **Philips izzylink™ for multiroom music**

- Play music in one room wirelessly via Bluetooth
- One tap to set up izzylink™, no router, no password, no apps
- Group up to 5 izzy with izzylink™ for multiroom enjoyment
- Change the master speaker in the group with just one tap

### **Designed to go places**

- Splash-proof design ideal for outdoor use (IPX4)
- Built-in rechargeable Li-ion battery for playback anywhere
- Swap music instantly between 2 devices with MULTIPAIR


### **Balanced sound with clarity**

- Two speaker drivers & passive radiators give immersive sound
- 2 x 7.5 W RMS maximum output power

**PHILIPS**


# Highlights

## Play music in one room

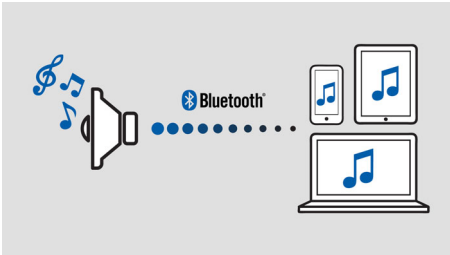


Philips izzy speaker lets you stream all your favourite music from your phone, tablet or computer, no matter which music or radio app you use.

## izzylink™

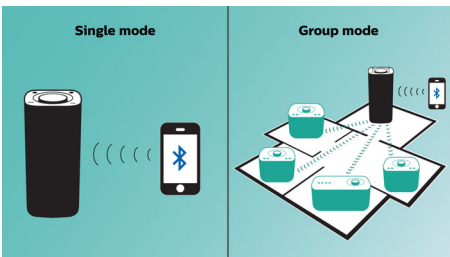


izzylink™ is a wireless technology that uses the IEEE 802.11n standard to enable the link-up of multiple speakers to form a wireless network. The network connects up to five speakers without the need of a router, Wi-Fi password, or any smart device mobile app to set it up. You can add izzy speakers to the network easily to enjoy music playing at the same time in different rooms. Each speaker can still be switched between single mode for individual use or group mode for multiroom music with one tap.

## One tap to set up izzylink™

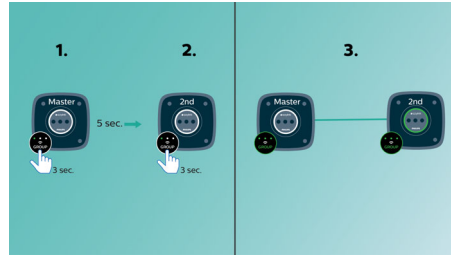

No router, no password, no apps needed for set up. Just long press the "GROUP" button on two speakers to set up for the first time. Repeat to add a 3rd, 4th, or 5th speaker. Each long press of the "Group" button adds one new speaker at a time. Multiroom music has never been easier. Once complete, the izzylink™ network will be stored even when the speaker is unplugged.

## Switch the lead speaker easily

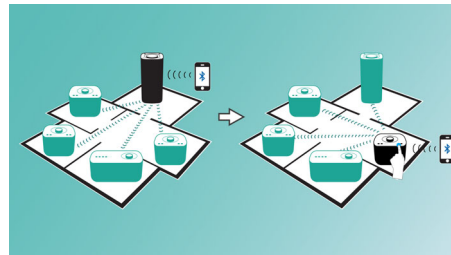

In each izzylink™ group, any individual speaker can be the master, streaming music to the others. When you want to take the lead to share your own music, press the Bluetooth button on the speaker in your room and share that music from your device instantly. Other speakers in the same izzylink™ group will play the same music at the same time, in sync. Sharing music with each other is that easy.

## Two speaker drivers



Equipped with two 2" full-range drivers twinned with two opposing passive radiators, the Philips izzy BM6 delivers balanced sound with clarity.

## Splash-proof design

Water-resistant design allows enjoyment in wet and rainy environments. Tested to stringent IPX4 standards, internal components are proven to be protected from exposure to the elements, allowing for music enjoyment indoors in the bathroom, kitchen or even outdoors whatever the weather.

## Swap music between 2 devices

Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, at parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.

# Specifications

## Compatibility

- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPad: iPad 1, iPad 2, iPad Air, iPad Air 2, iPad mini, iPad mini 2, iPad mini 3, iPad with Retina display, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S
- iPod touch: 3rd generation or later
- other music devices: with Bluetooth 2.1 or above
- works with: most Bluetooth smartphones, music devices, tablets

## Sound

- Output power (RMS): 2 x 7.5 W (on mains); 2 x 5 W (on battery)
- Speakers: 2 x 2" full-range drivers; 2 x passive radiators
- Sound System: Stereo
- Volume Control: Volume Control up/down

## Convenience

- Water resistance: IPX4

## Connectivity

- Audio in (3.5 mm)

## Accessories

- Included accessories: AC/DC Adapter, World Wide Warranty leaflet, Quick install guide

## Power

- Operating time on battery: 8 hr (Bluetooth), 4 hr (multiroom)

## Dimensions

- Product dimensions (WxDxH): 92 x 92 x 200 mm
- Packaging dimensions (WxDxH): 122 x 122 x 278 mm
- Product weight: 0.604 kg
- Weight incl. Packaging: 1.059 kg



Issue date 2016-06-17

Version: 2.0.6

12 NC: 8670 001 34426  
EAN: 48 95185 62037 4

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)