

PHILIPS

Portable Speakers

MMS2141B



User manual

Register your product and get support at
www.philips.com/welcome

General information

Safety instructions

Please read carefully the safety mark on the back side



This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This mark is intended to alert the user for important operating and servicing instruction.

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

Accessories

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening


- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.

Care of the cabinet


- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Item	3.5mm - 3.5mm stereo cable	Remote control	User manual	FM Antenna cable
Quantity	1	1	1	1

Front & back panel

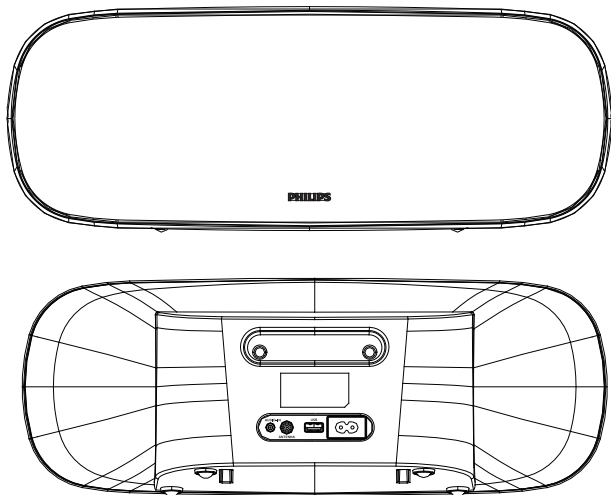

Top panel operation

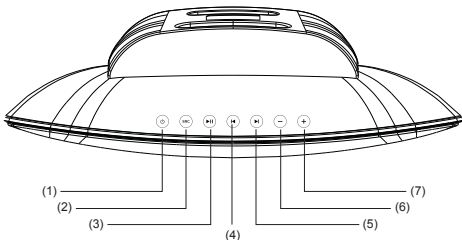

1. ⏻
2. SRC
3. ⏮
4. ⏮
5. ⏭
6. -
7. +

1. ⏻ :

Power or standby mode.

2. SRC:

Change the input mode—AU for Audio in, USB,*
87.5 for FM, bt. for Bluetooth.

3. ⏮ :

		AUDIO IN INPUT	USB INPUT	FM TUNNER	BT INPUT
⏮	short press	MUTE	PLAY/PAUSE	MUTE	PLAY/PAUSE
	long press	—	—	AUTOMATIC SEARCH FM STATION/CHANNEL STORED AUTOMATICALLY	—

4. ⏮ :

		AUDIO IN INPUT	USB INPUT	FM TUNNER	BT INPUT
⏮	short press	—	TRACK SELECTION PREVIOUS	PREVIOUS CHANNEL SELECTION	TRACK SELECTION PREVIOUS

5. ⏭ :

		AUDIO IN INPUT	USB INPUT	FM TUNNER	BT INPUT
⏭	short press	—	TRACK SELECTION NEXT	NEXT CHANNEL SELECTION	TRACK SELECTION NEXT

6. - :


Volume decrease.

7. + :

Volume increase.

* AVAILABLE IF CONNECTED

Remote controls

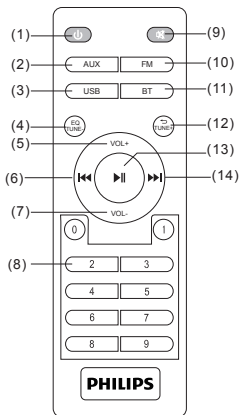

- | | |
|------------|---------------|
| 1. | 8.0~9 |
| 2.AUX | 9.MUTE |
| 3.USB | 10.FM |
| 4.EQ TUNE- | 11.BT |
| 5.VOL+ | 12. |
| 6. | 13.PLAY/PAUSE |
| 7.VOL- | 14. |

1. : Power or standby mode.
2. AUX: Audio in input mode selection.
3. USB: USB reader mode selection when enter into USB* mode.
 “” means next song; “” means previous song;
 “” means play/pause. press the number “0-9” on the remote control. your can choose the Corresponding song, Press “ TUNE+” select one song or all the songs repeating play. (only in USB* mode)
4. Press “EQ TUNE-” each time to search FM station step by step (each step (-) 0.1 MHz), press “EQ TUNE-” long time to search previous channel, and play the channel automatically.
 Equalizer: NORMAL, POP, CLASSIC, ROCK, JAZZ. (only in USB*/BT* mode)
5. Press VOL+ to increase volume.
6. Pressing “” takes you to previous song/station.
7. Press VOL- to decrease volume.
8. By pressing the number “0-9” on the remote control you can choose the corresponding song or corresponding FM channel.
9. Mute: Turn volume off. Press again to activate sound.
10. FM: FM tuner mode selection. When you enter FM mode and press “” for long time, it searches FM station/channel automatically.
11. For pairing with mobile or other Bluetooth devices, search the device named “MMS2141B” and pair it. Once paired, ‘.’ of “bt.” stops blinking/flashing. Press “” for 3 seconds, Bluetooth function can be forced disconnected. ‘.’ of “bt.” flashes slowly when song is playing.
12. Press “ TUNE+” each time to search FM station step by step (each step 0.1 MHz), press “ TUNE+” long time to search next channel, and play the channel automatically.
13. Pressing “” plays/pauses songs alternately.
14. Pressing “” takes you to next song/station.

* AVAILABLE IF CONNECTED

Bluetooth Operating Instruction

1. Press SOURCE key from front panel or remote to go to Bluetooth;
2. When selected the Bluetooth mode, in display, ‘•’ of “bt.” starts blinking/flashing.;
3. For pairing with mobile or other Bluetooth devices, search the device named “MMS2141B” and pair it. Once paired, ‘•’ of “bt.” stops blinking/flashing;
4. Press “▶||” for continuous 3 seconds from remote in order to force disconnect the Bluetooth.

Note: While using Bluetooth, if external call comes, then speaker system goes in mute mode in order to protect privacy of mobile phone user. Operation resumes once the call is disconnected.

Troubleshooting

Warning -

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table, Consult your dealer or PHILIPS APSC for help.

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socket.
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the system. Replace the batteries with new ones / Point the remote control directly towards the IR sensor (located on front panel of the subwoofer) / Check that the batteries are loaded correctly / Switch off the system for 30 seconds and then restart.
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician.
5. The content of the USB flash drive can not be read.	The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS).
6. Slow operation of the USB flash drive / can not detect USB flash drive.	Large file size of high memory USB flash drive takes longer time to read and play. / Take out USB drive and insert it again properly.
7. FM not properly tuned.	Match with local frequency.
8. FM reception not good.	While listening radio turn off TV / DVD or other radiation source.
9. BT not working.	Reduce the distance or device is not paired.

In case these measures do not work contact the nearest PHILIPS service center or call at customer care numbers.

Warranty

This Philips 2.1 Integrated Multimedia Speaker System is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the period of warranty, **Gibson Innovations India Private Limited** undertake to repair the apparatus FREE OF CHARGE through the dealer from whom it has been purchased or at any of the Philips Authorised Service Centres.

The warranty is not valid in case :

1. Proof of purchase is not accompanied with this warranty card.
2. The warranty card is not completed immediately after purchase.
3. The apparatus is not used according to this manual.
4. Defects are caused by improper or reckless use.
5. Any repairs are done by persons other than Philips Authorised service centre.
6. Any modifications or alteration of any nature are made in the apparatus.
7. The serial number is tampered with.
8. Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to the purchaser's residence.

All consumables and parts susceptible to normal wear and tear are not covered under warranty.

Week/S.No.: _____ Bill No. _____

Date of purchase _____

Dealer's name: _____

Dealers stamp: _____

Customer's name and address: _____

Model No.: _____

Dealer's signature: _____

Gibson Innovations India Private Limited 4th Floor, Block-1, Vatika Business Park, Sector 49, Sohna Road,
Gurgaon-122018, Haryana, India

Product specifications*

Total system power	40W RMS
Treble speaker power	10Wx2 RMS
Bass speaker power	20W RMS
Separation	>38 dB
SNR	>60 dB
Audio input socket	Stereo
Audio output socket	_____
Power consumption	15W
Subwoofer speaker power	1 Way
Speaker size	4 inch
Impedance	4 Ohm
Frequency range	20Hz - 3.5KHz

Satellite speaker power	2 Way
Speaker size	2 inch
Impedance	4 Ohm
Frequency range	120Hz - 20KHz
Product Dimension (mm) W x H x D	430 x 162 x 133
Net Weight	1.86 Kg
BT version	V3.0
BT range	Upto 10 meter
USB class support	UMS (USB mass storage class)
USB capacity	Upto 16GB
USB playability	MP3 track

*Specification subject to change without prior notice.
Measured under specific conditions.

The Philips trademark and Philips shield emblem are registered trademarks of koninklijke Philips N.V. used under license.

This product has been manufactured by and sold under the responsibility of Gibson Innovation India Private Ltd. and Gibson Innovations India private Ltd. is the warrantor in relation to this product.



Question?
Contact
Philips

Always there to help you

Visit us at www.india.philips.com
Contact at: 1860 180 1111, 1800 102 2929
Or customer.care.india@philips.com