

Philips
Hard disk recorder

DVR2008



Embrace your movies, music, photos

with your very own Media Centre

Create your own jukebox of videos, music and songs, by connecting your multiple devices and sources. Take complete control your TV time and entertainment with One Touch Pause Live TV. Never miss another great TV moment again.

Connect and enjoy multiple sources

- HDD Media Jukebox lets you store movies, music and photos
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive

Records and plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays DivX, MPEG-4, MP3, WMA and JPEG digital camera photos
- DivX with Chinese subtitles

Enjoy enhanced TV viewing

- FlexTime to watch the beginning while you record the end
- Instant Replay for reliving a live TV moment with one touch
- One Touch Pause Live TV freezes the action instantly

Brings audio and video to life

- High definition JPEG playback for images in true resolution
- Progressive Scan component video for optimized image quality


PHILIPS
sense and simplicity

Highlights

HDD Media Jukebox

Create your very own digital media jukebox right in your living room. Transfer MP3, WMA, MPEG2, DivX, DivX Ultra, Xvid, JPEG and HD JPEG files quickly and conveniently onto the recorder's built-in hard disk - from USB thumbdrives, portable media players, digital cameras, and even some AV devices. Play back your favorite movies, music or photos on your TV or home theater system anytime you want. The options are endless, as will be the enjoyment.

Hi-Speed USB 2.0 Link

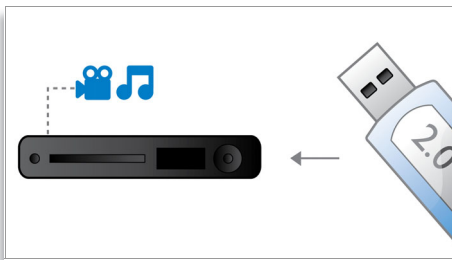


The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Instant Replay



With Instant Replay, you can relive magic movie moments and super sports scenes - anytime you want. At the touch of a button, the hard disk will replay the last 30 seconds. Skipping backwards further requires nothing more than pressing the button again.

One Touch Pause Live TV

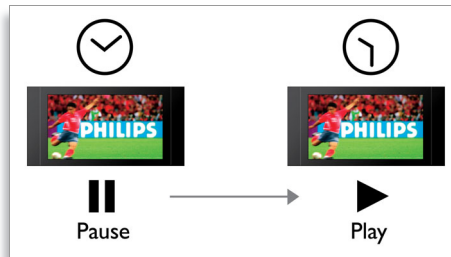


Pause Live TV puts you in absolute control. Once the recorder is turned on, a large built-in memory automatically starts recording the program you are watching -- allowing you to pause, replay or save the program, anytime. When you need to take a break, you can pause your 'live' TV program with just one touch of a button, and resume watching when it suits you.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Plays it all

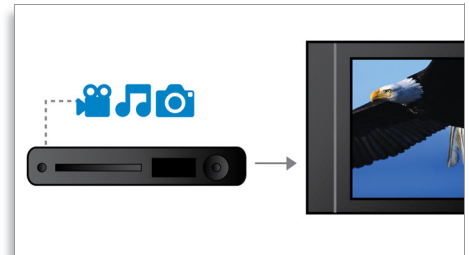

Play virtually any media format you want - whether they be DivX, MPEG-4s, MP3s, WMA or JPEGs. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system - in the comfort of your living room.



Specifications

Picture/Display

- D/A converter: 10 bit, 54 MHz
- Picture enhancement: Progressive Scan
- A/D converter: 10 bit, 27MHz

Sound

- D/A converter: 24 bit, 192 kHz
- A/D converter: 24 bit, 96 kHz

Video Recording

- Recording system: PAL
- Compression formats: MPEG2
- Recording Modes: High Quality (HQ), Standard Play (SP), Long Play (LP), Extended Play (EP), Super Long Play (SLP)
- Audio compression: Dolby Digital, PCM
- Recording Media: HDD
- Recording enhancements: One Touch Record (OTR), Erase, Divide, Auto Chapter Marking, Manual Chapter Marking

Video Playback

- Playback Media: USB flash drive
- Compression formats: MPEG2, MPEG1, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, XviD

Audio Playback

- Playback Media: USB flash drive
- Compression format: Dolby Digital, MP3, WMA, PCM

Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow with MP3 playback, Rotate, Zoom

Storage Media

- HDD recording enhancements: Pause Live TV, Instant Replay, FlexTime, Instant Jump, Time Shift Buffer

- HDD Media Jukebox Capacity: up to 60 DivX movies, 8650 MP3 songs or 71000 JPEG photos at default setting
- Hard Disk Capacity: 160 GB
- HDD video recording capacity: 123 hr

Tuner/Reception/Transmission

- TV system: PAL B/G, PAL D/K, PAL I

Connectivity

- Front / Side connections: USB 2.0
- Rear Connections: Composite video (CVBS) input, Analog audio Left/Right in, Component Video input, Composite video (CVBS) output, Analog audio Left/Right out, Component Video output, RF antenna in / TV out, S-Video out

Convenience

- Programming/Timer Enhancements: One Touch Recording, Daily/Weekly Repeat Program, Manual Timer
- Programmable Events: 8
- HDD Media Jukebox: DivX, JPEG digital camera photos, MP3, WMA

Power

- Power supply: 220-240V, 50Hz
- Power consumption: 28 W
- Standby power consumption: 3W

Accessories

- Included Accessories: A/V Cable, Antenna cable, User Manual, Quick start guide, Remote Control, 2 x AAA Batteries, CVBS video cable, Warranty Leaflet

Dimensions

- Product weight: 3 kg
- Product dimensions (WxDxH): 360 x 285 x 50
- Weight incl. Packaging: 4 kg



Issue date 2009-11-06

Version: 1.0.5

12 NC: 8670 000 37609
EAN: 87 12581 40012 5

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com