

Philips
DVD player

Karaoke

DVP3005K



See, hear, play everything

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

Great audio and video performance

- Progressive Scan component video for optimized image quality
- High quality outputs for analog and digital audio

Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD
- Music: CD, CD-R/RW and MP3-CD
- Photos: Picture CD (JPEG)

Fits everywhere, goes anywhere

- Compact design
- Ultra-slim design

Your personal karaoke show

- Karaoke for endless karaoke entertainment at home

PHILIPS
sense and simplicity

Specifications

Picture/Display

- Aspect ratio: 16:9, 4:3
- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive Scan, Smart Picture Setting

Sound

- D/A converter: 24 bit 96KHz
- Signal to noise ratio: 95 dB
- Distortion and Noise (1kHz): 80 dB
- Crosstalk (1kHz): 90 dB
- Dynamic Range (1kHz): 85 dB
- Sound System: Dolby Digital
- Sound Enhancement: 3D Virtual Surround, Night Mode, Smart Sound

Video Playback

- Playback Media: CD, CD-R, CD-R/CD-RW, Video CD/SVCD, DVD+R, DVD+RW, DVD-R, DVD-RW (Video mode), DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, CD-R, MP3-CD, CD-RW
- Compression format: PCM, MP3
- MP3 bit rates: 32 - 256 kbps

Still Picture Playback

- Playback Media: Picture CD, DVD+R/+RW
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Zoom

Connectivity

- Other connections: ComponentVideo out, Progressive, Composite video (CVBS) out, Analog audio Left/Right out, Digital coaxial out
- Front / Side connections: Microphone

Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Traditional Chinese, Simplified Chinese, Korean, Malay, Thai
- Karaoke: MIC volume

Power

- Power supply: 50/60 Hz, 110-240V
- Power consumption: 10 W
- Standby power consumption: < 0.8 W

Accessories


- Batteries: 2 x AA
- Cables: 1 x AV Cables
- Remote control: 3141 017 90181
- User Manual: English, Simplified Chinese, Traditional Chinese, B. Melayu
- Warranty Card

Dimensions

- Set dimensions (W x H x D): 360 x 37 x 265 mm
- Set weight: 1.98 kg
- Packaging dimensions (W x H x D): 415 x 82 x 352 mm
- Weight incl. Packaging: 2.98 kg

Highlights

Progressive Scan

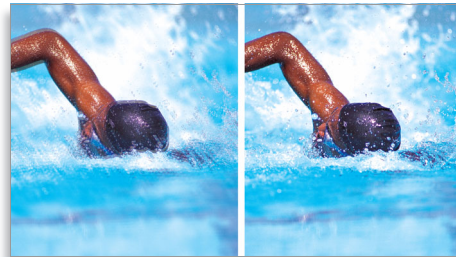

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Multi-format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Multi-format Music

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

Ultra-slim design

The attractive enclosure has a very low profile.

Karaoke



The Karaoke feature on your DVD player provides endless entertainment and maximum audio and singing enjoyment. You can enhance your performance by adding an 'echo' effect to your voice. The key controls allow you to choose the optimal key for your personal vocal range.



Issue date 2009-08-06

Version: 9.0.11

12 NC: 8622 810 12168
EAN: 87 10895 85758 1

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com