



Philips
wireless portable speaker

Bluetooth®

Splash proof
Power bank
16W, Rechargeable battery



BT7700B

Spin360max

Massive all around powerful sound

Put speaker down any way you like. 360° of sound gives you powerful sound all around. Extra-long battery for half-day music and even charges your phones. Thanks to Bluetooth multipair for instant music swapping between two devices.

Sound that blows you away

- Two speaker drivers & passive radiators give immersive sound
- Digital Sound Processing for lifelike, distortion-less music
- 2 x 8W RMS total output power

Advanced versatility

- Wireless music streaming via Bluetooth
- Swap music instantly between 2 devices with MULTIPAIR
- Built-in microphone for hands-free phone calls
- Audio-in for easy portable music playback

Designed to go places

- Splash-proof design ideal for use in wet conditions
- Built-in rechargeable Li-ion battery for playback anywhere
- Up to 12 hours music playtime
- Speaker also acts as power bank for smartphone charging

PHILIPS

wireless portable speaker
Bluetooth® Splash proof, Power bank, 16W, Rechargeable battery

BT7700B/00


Highlights

Twin speaker drivers



Twin 1.75" Neodymium speaker drivers deliver natural, clear and balanced sound while dual opposing passive radiators extend and boost bass. Front and back full-range speaker drivers create even 360-degree sound, offering the freedom to enjoy the same quality sound wherever the speaker is facing.

Digital Sound Processing

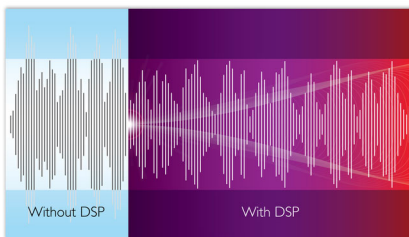


Advanced sound processing technology enhances the reproduction of your music so that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimizes the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

Splash-proof design



A lightly water resistant design makes the speaker ideal for the shower, the kitchen, near the pool or in a rainy day, so you can enjoy your music anywhere you want.

Up to 12 hours music playtime

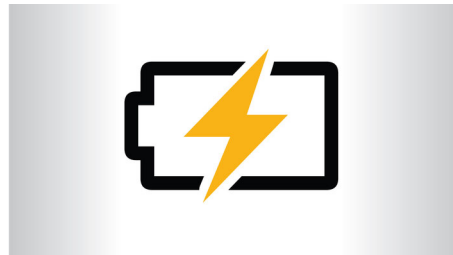


Play your music loud anytime, anywhere with a built-in rechargeable battery that lasts for up to 12 hours. Listen to all your music without the fuss of tangled power cords and inconvenient searches for electrical outlets, giving you total freedom of movement and a half-day of musical entertainment.

Speaker as a power bank


The speaker is also a back up power bank, so if your smartphone or tablet run out of battery, you can use the battery inside the speaker to charge them up via the USB cable.

Swap music between 2 devices

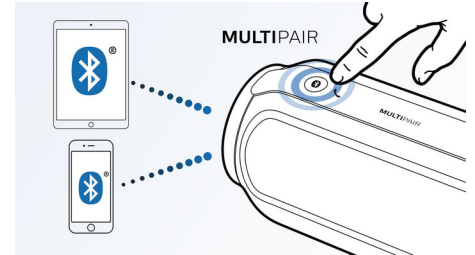

Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.

Wireless music streaming

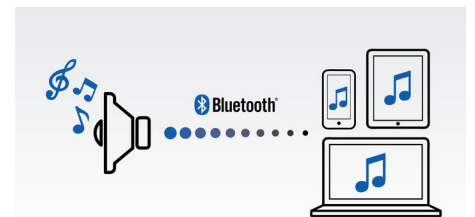

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Specifications

Compatibility

- Works with: most Bluetooth smartphones, tablets, music devices
- iPad: iPad 1, iPad 2, new iPad, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini, iPad mini 4, iPad Pro
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone SE
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

Sound

- Output power (RMS): 2 x 8W
- Speakers: 2 x 1.75"
- Sound System: Stereo
- Volume Control: rotary

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP

- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

Convenience

- Water resistance: IPX4
- USB port: to charge mobile device (5V, 2.1A)
- Built-in microphone: for speaker conference

Power

- Battery type: Lithium-ion (built-in)
- Operating time on battery: 12 hr

Accessories

- Included accessories: USB cable for charging, Quick install guide, Warranty certificate, World Wide Warranty leaflet

Dimensions

- Product dimensions (WxDxH): 81 x 76 x 214 mm
- Packaging dimensions (WxDxH): 225 x 117 x 123 mm
- Product weight: 0.68 kg
- Weight incl. Packaging: 0.97 kg



Issue date 2020-07-08

Version: 1.0.7

12 NC: 8670 001 39235
EAN: 48 95185 62397 9

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com