



Philips
Soundbar speaker

2.1 CH wireless subwoofer
Bluetooth® and NFC
HDMI ARC
200W



HTL3140B

Powerful sound for any TV

with wireless subwoofer

Get amazing virtual surround sound from your TV via just one cable! In addition to movies, you can also enjoy top quality Music iLink MP3 playback from your mobile devices.



Connect and enjoy all your entertainment

- One-touch with NFC-enabled smartphones for Bluetooth pairing
- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3/WMA music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Stream music wirelessly via Bluetooth™ from your smartphone

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- Wireless subwoofer adds thrill to the action


PHILIPS

Soundbar speaker
2.1 CH wireless subwoofer Bluetooth® and NFC, HDMI ARC, 200W

HTL3140B/12


Highlights

Virtual Surround Sound

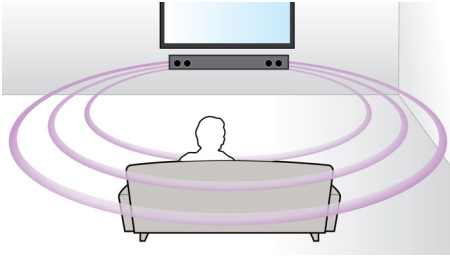

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital

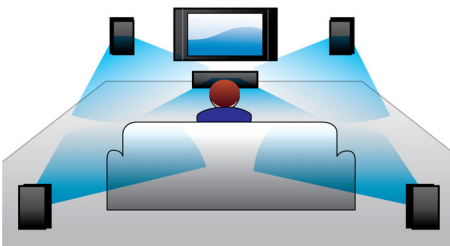

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality

surround sound audio with realistic spatial cues.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

One-touch with NFC



Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.



Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Virtual Surround Sound
- Sound System: Dolby Digital
- Speaker output power: 2x 30 W
- Subwoofer output power: 140W
- Total Power RMS @ 10% THD: 200 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Subwoofer type: Wireless subwoofer
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 3 ohm
- Tweeter Impedance: 16 ohm
- Speaker Impedance: 8 ohm

Connectivity

- Integrated Connections: Bluetooth, NFC
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- Top connections: Audio In (3.5mm), USB 2.0

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby,

Audio Return Channel

- HDMI Features: Audio Return Channel (ARC), Content Type

Design

- Wall mountable

Power

- Power consumption: 35 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: Soya based ink, 80% recycled corrugated board

Dimensions

- Main Unit (W x H x D): 843x 52x 60 mm
- Main Unit Weight: 1.4 kg
- Subwoofer (W x H x D): 226 x 251 x 306 mm
- Packaging (W x H x D): 400 x 292 x 349 mm
- Weight incl. Packaging: 8.2 kg
- Subwoofer Weight: 4.14 kg

Accessories

- Included accessories: Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, AAA Battery (x1), AC Adapter, 2 x Power cords



Issue date 2015-08-28

Version: 7.4.10

12 NC: 8670 001 10812
EAN: 87 12581 70704 0

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com