



Philips
CD Soundmachine

- 8W
- USB and tape
- Digital tuning



AZ3856

Powerful portable sound system

with 8W RMS total output power

Enjoy digital music from your portable device in powerful sound on the Philips AZ3856/12 CD soundmachine - anytime, anywhere. Thanks to USB Direct, Bass Reflex Speakers and 2x4W RMS total output power.

Enjoy your music from multiple sources

- USB Direct for MP3/WMA music playback
- Autostop cassette deck
- Digital tuning with preset stations for extra convenience
- MP3 Link for portable music playback
- Play MP3/WMA-CD, CD and CD-RW

Easy to use

- Handy remote control for extra convenience
- Stereo headphone jack for better personal music enjoyment
- Sleep timer for easy falling asleep to your favorite music

Powerful sound you can hear and feel

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimized music style settings



asimpleswitch.com



asimpleswitch.com

PHILIPS

Highlights

Handy remote control



With a handy remote control for greater convenience at your fingertips, all you have to do is sit back and relax.

Stereo headphone jack


Connect your own headphones to this Philips radio for a more personal listening experience whenever you want it. You can enjoy your favorite movie or music in great sound without disturbing others by connecting your headphones to the player.

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

Autostop cassette deck

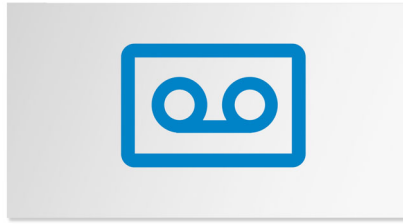

Autostop cassette deck

Digital tuning with presets



Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker

box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

MP3 Link




The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



Specifications

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Cassette deck technology: mechanical
- Number of decks: 1
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop

Connectivity

- USB: USB host
- Audio/Video output: Headphone (3.5mm)
- MP3 Link: 3.5mm stereo line in

Tuner/Reception/Transmission

- Antenna: FM antenna
- Tuner bands: FM, MW
- Station presets: 40
- Tuner enhancement: auto digital tuning

Sound

- Sound enhancement: Dynamic Bass Boost 2 steps
- Sound system: stereo
- Volume control: rotary (digital)
- Output power: 2 x 4 W RMS / 350 W PMPO

Loudspeakers

- No. of built-in speakers: 2
- Loudspeaker enhancement: 2-way bass reflex

- speaker
- Speaker grille finishing: metal

Convenience

- Loader type: top
- Display type: LCD display

Accessories

- Remote control
- Cables/Connection: AC-DC adapter
- User Manual: multi-languages
- Warranty: World Wide Guarantee booklet

Dimensions

- Gross weight: 4 kg
- Packaging width: 468 mm
- Packaging height: 310 mm
- Packaging depth: 198 mm
- Weight: 3 kg
- Main unit depth: 270 mm
- Main unit height: 170 mm
- Main unit width: 435 mm

Power

- Number of batteries: 6 x LR20 for main set (not included), 1x CR2025 for RC (included)
- Power type: DC input

Audio recording

- Recording media: tape
- Tape recording enhancement: CD synchro start recording



Issue date 2013-05-10

Version: 1.0.8

12 NC: 8670 000 51076
EAN: 87 12581 47418 8

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com

* Avoid extensive use of the set in a volume higher than 85 decibel
because this may damage your hearing.