



Philips Streamium
Wireless Micro Hi-Fi
System

Streamium



MCI298



Obsessed with sound

Stream music from PC/MAC and Internet - wirelessly

Explore your music universe with this wall-mountable wireless Philips MCI298/12 micro system. Stream music from your PC/MAC, play CDs, MP3s or FM and Internet radio and enjoy easy navigation on its intuitive touch screen with colour display.

Unlimited listening pleasure - wirelessly

- Wireless stream music and photos from your PC/MAC
- Thousands of free Internet Radio Stations
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- Playback iTunes music
- FM radio

Easy navigation and control

- Remote control for handy navigation
- Touch screen for easy navigation

Quality sound performance

- 20 W RMS total output power
- Complete integrated sound system

Ready to connect

- Works with home broadband connection and Wi-Fi router

PHILIPS
sense and simplicity

Highlights

Free Internet radio stations



Streamium comes with thousands of free Internet radio stations. Now you can stay abreast of all kinds of music worldwide. Connect your Streamium to the Internet and listen to your favourite online programmes on your audio system without having to turn on your PC.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorised music sites on the Internet or create your own MP3 or WMA music files by

ripping your audio CDs and transferring them onto your player.

Wireless stream music and photos



Your PC/ MAC is filled with music that you can now conveniently stream onto your Philips audio device – without messy cables. Share your favourite songs with others at a party, or simply enjoy them in the comfort of your home. Do the same for your photo collections, and view them at leisure while you listen to music. Unlock your PC/ MAC treasures with the convenience of wireless streaming.


Remote control



Control all your Philips Hi-Fi system's functions from the comfort of your sofa. Search, navigate and play back your music with ease and speed. With direct keys such as

Home and Favourite, you can have quick access to your main screen or your favourite Internet station, or stream music from your PC/MAC and the Internet - wirelessly. The Hi-Fi control centre is in the palm of your hand.

Touch screen

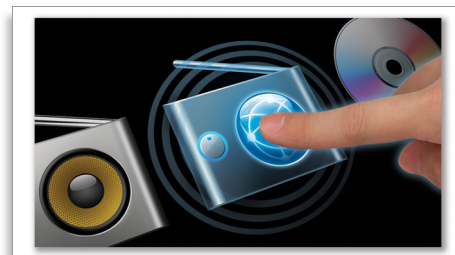

Touch-screen control allows you to control your device by simply pressing on-screen buttons rather than physical buttons on the device. Simply power up the device and the touch-screen user interface will show up on the LCD display with all the control options for the device. Touch-screen control combines LCD display technology with pressure sensors and a powerful digital micro processor. When you press on a specific area of the screen with your finger, the relevant signal is sent to the processor and the command is immediately executed.

Specifications

Audio Playback

- Compression format: MP3, WMA, non DRM AAC (m4A)
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Internet Radio
- Loader Type: Slot
- PC Link playback mode: MP3 streaming via network, Wi-Fi wireless connection
- USB Direct Modes: Play/Pause, Previous/Next, Stop
- Disc Playback Modes: Fast Forward/Reverse, Next/Previous Track Search, Repeat Play
- ID3-tag support
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: up to 192 kbps, CBR/VBR

Sound

- Equalizer settings: Neutral, Jazz, Pop, Rock
- Sound Enhancement: Class "D" Digital Amplifier, Dynamic Bass Boost, Equalizer, Treble and Bass Control
- Volume Control: Volume Control up/down
- Output power (RMS): 2 x 10 W

Loudspeakers

- Main Speaker: Full range

Tuner/Reception/Transmission

- Auto digital tuning
- Tuner Bands: FM Stereo

Connectivity

- Other connections: Ethernet
- Headphones: 3.5 mm
- Wireless connections: Wireless LAN (802.11 g), Wireless LAN (802.11b)
- Wireless Universal Plug and Play: Enabled
- LAN wired: Ethernet (RJ 45) 1 x
- Encryption/security: WEP 128 bit, WEP 64 bit, WPA, WPA2, WPS-PBC, WPS-PIN
- Antenna: FM Dipole
- Audio Connections: 3.5 mm stereo line in -MP3

link

- Power: 220-240 V

Convenience

- Display Type: LCD
- Backlight
- Backlight colour: White
- On-Screen Display languages: English, Dutch, French, German, Italian, Spanish, Portuguese, Swedish
- Eco Power Standby: 1 watt
- Headphone jack
- Clock: On main display, Internet time
- Alarms: Buzzer Alarm, Sleep timer
- Display Enhancements: Brightness Control, Touch screen control
- Indications: DIM mode
- Remote control: 1-way

Accessories

- Included accessories: FM antenna
- Batteries: 2 x AAA
- CD-ROM: CD-ROM with Media Browser, Video Tutorial and manuals
- Quick start guide: English, French, Spanish, Italian, Dutch, German, Swedish, Finnish, Norwegian, Danish, Portuguese, Russian, Polish
- Remote control: 1-way Remote
- User Manual: English, French, Spanish, Italian, Dutch, German, Swedish, Finnish, Norwegian, Danish, Portuguese, Russian, Polish
- Warranty Card: Warranty Card
- AC/DC Adapter: AC/DC Adapter

Dimensions

- Product dimensions (WxDxH): 542 x 90 x 238 mm
- Set weight: 2.98 kg

Picture/Display

- Diagonal screen size (inch): 3.5 inch

Power

- Power supply: 200-240 V, 50 Hz



Issue date 2013-03-03

Version: 8.4.8

12 NC: 8670 000 58364
EAN: 87 12581 51767 0

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com