



Philips 3000 series  
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback  
DivX Plus HD  
USB2.0 Media Link



**BDP3490M**

## Explore 3D cinematic experience

with 3D Blu-ray playback

Bring the magic of movies home in full High Definition with Blu-ray 3D and DivX Plus HD on this sleek player. Conveniently enjoy your favorite video and music files directly from USB flash drives or portable hard disks with USB 2.0.

### Engage more

- Turn your Smartphone into a remote for Philips AV products
- SimplyShare to connect & stream all entertainment wirelessly
- USB 2.0 plays video/music from USB flash/hard disk drive

### Hear more

- Dolby TrueHD for high fidelity sound
- Dolby Digital DTS2.0 for ultimate movie experience

### See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback

# PHILIPS

# Highlights

## Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.


## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV

file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Dolby TrueHD

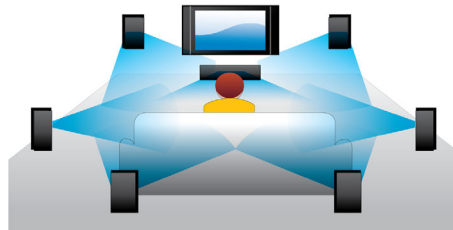

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## MyRemote app

The Philips MyRemote app lets you use your iPhone or iPod Touch or Android Smartphone as a remote to control your Philips networked AV products. The app automatically recognizes your\* Philips Blu-ray player, Home theater or Streamium audio system connected to your home Wi-Fi network, and gives you instant control over the devices from anywhere in your home. And if you have more than one Philips networked AV product, the app will allow you to switch between them and control each one independently. This free app is created exclusively by Philips.

## SimplyShare



Philips SimplyShare lets you share your music, movies & photos from tablet, smartphone & PCs to your home theater & Blu-ray player. You can stream all entertainment directly from your DLNA-enabled devices or use remote control to access & stream media files from your PC. For the best wireless experience, install the SimplyShare app on your tablet/ smartphone. You are now ready to enjoy all your entertainment effortlessly.

## USB 2.0

The Universal Serial Bus or USB is an industry standard that allows high-speed, easy connection of peripherals to PCs, consumer electronics and mobile products. The USB 2.0 provides better and faster performance - up to 40 times quicker than the USB 1.0 and with a data transfer rate of up to 480 Mbps from the original 12 Mbps. When plugged in, everything configures automatically. With USB 2.0, simply plug in your USB portable devices or hard disk drives, select the movie, music or photo and play away.

## Dolby Digital DTS2.0

Dolby Digital DTS2.0 for ultimate movie experience



# Specifications

## Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- D/A converter: 12Bit/148MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Sound

- D/A converter: 24 bit, 192 kHz
- Dynamic Range (1kHz): =80 dB
- Frequency response: (20kHz) ±0.5dB (Max./Min. 2ch, DVD) Hz
- Signal to noise ratio: 80dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

## Video Playback

- BD Region Code: B
- Compression formats: DivX Plus™ HD, H.264, MPEG2, MPEG4 (AVC), XviD, MPEG1
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 2
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Connectivity

- Front Connections: USB 2.0

- MyRemote App: SimplyShare, Virtual Remote
- Rear Connections: Digital coaxial out, Ethernet, HDMI output, USB 2.0, Composite video (CVBS) output, Analog audio Left/Right out

## Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: Czech, Danish, Dutch, English, Finnish, French, German, Italian, Norwegian, Polish, Portuguese, Spanish, Swedish, Turkish

## Power

- Power consumption: 12 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: 0.25 W

## Accessories

- Included accessories: 2 x AAA Batteries, CD-R (User Manual), Product Registration Card, Quick start guide, Remote Control, User Manual

## Product dimensions

- Product dimensions (W x H x D):  
36 x 4.2 x 21 cm
- Weight: 1.06 kg

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D):  
41.5 x 30 x 8.7 cm
- Gross weight: 1.63 kg
- Nett weight: 1.23 kg
- Tare weight: 0.4 kg
- EAN: 48 95185 60858 7

## Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 41.5 x 30 x 8.7 cm
- Gross weight: 1.63 kg
- Nett weight: 1.23 kg
- Tare weight: 0.4 kg
- EAN: 48 95185 60858 7



Issue date 2016-03-01

Version: 4.1.4

12 NC: 8670 001 24925  
EAN: 48 95185 60858 7

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)