



Philips
Mira design cordless phone

1.8" display/white backlight
Handset speakerphone

M5601WG

Unique and desirable

With its sleek silhouette and high-quality finishing, Philips Mira challenges conventional perceptions about telephone design. Timeless, unique and stylish, it's an elegant piece of art for your home.

Eco-designed

- Zero power emission when ECO+ mode is activated

Outstanding design in high-quality execution

- Durable, glossy and fingerprint-resistant outer shell
- Elegant and stylish appearance from every angle
- Smart cable management
- Calibrated keypad for smooth precision clicks
- Charge handset either way around

Ultimate calling experience

- Handset speakerphone allows you to talk hands-free
- Easy to read 4.6 cm (1.8") display with white backlight
- Privacy settings: call block and call barring
- Save up to 100 of your favourite contacts in your phonebook
- Advanced sound testing and tuning for superb voice quality
- Talk for up to 16 hours on a single charge

PHILIPS

Mira design cordless phone
1.8" display/white backlight Handset speakerphone

M5601WG/38

Highlights

Durable and glossy outer shell



Durable, glossy and fingerprint-resistant outer shell

Beautiful from every angle



Elegant and stylish appearance from every angle

Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

ECO+




Zero power emission when ECO+ mode is activated

Multiple privacy settings

Value your privacy and quiet time at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you choose to block, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls from specific numbers starting with certain digits (for example, pay per call numbers).

100-name phone book

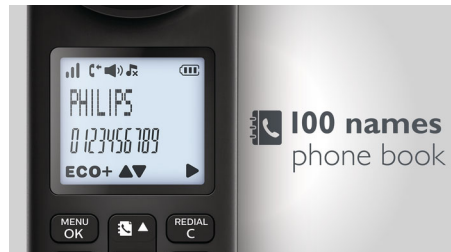

Always have the phone numbers of your loved ones available: Save up to 100 favourite contacts in your phonebook.

4.6 cm (1.8") display



Easy to read 4.6 cm (1.8") display with white backlight

Superb sound quality

Advanced sound testing and tuning for superb voice quality

Smart cable management



The smart cable management system cleverly hides the wires from sight. Intelligently designed concealed sockets and an internal cable guide ensure everything is clutter-free and neatly tucked away.

Smooth and calibrated keypad



Calibrated keypad for smooth precision clicks

Hassle-free charging

Charge handset either way around

Specifications

Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic
- HQ-Sound

Picture/Display

- Display size: 4.6 cm/1.8"
- Display type: 1 line Dot Matrix + 1-line Numeric + Hard ICON
- Backlight: Yes
- Backlight colour: White

Convenience

- Menu structure in the handset: List Menu
- Speakerphone — talk hands-free
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3 bar indicator
- Battery level indicator: 3 bar battery icon
- Intercom — multiple handsets
- Date/Time display
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto hang up
- Multi-handset capability: Up to 4
- Number of keys: 20
- Base Station keys: Paging key
- Up to 16 hrs talk time
- Up to 250 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Range: Open field < 300 m (984 ft); indoor < 50 m (164 ft)
- Premium MMI: Standard

- Block callers/Blacklist*: Restrict the phone from ringing on specific incoming numbers
- Event notifications: For events status

Memory Capacity

- Phonebook: 100 names and numbers
- Redial List Capacity: 20 entries
- Call log entries: 50 entries
- Phonebook store in the base

Power

- Battery Capacity: 500 mAh
- Battery type: 2 x AAA, NiMH rechargeable
- Mains power: AC 100-240 V ~ 50/60 Hz
- Power Consumption: < 0.70 W

Security

- Transmission encryption

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: < 0.1 W/kg

Eco Design

- Eco Mode: Automatic
- Eco+

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 31.8 x 9.5 x 8.1 cm
- Gross weight: 0.507 kg
- Net weight: 0.366 kg
- Tare weight: 0.141 kg
- EAN: 48 95229 10668 0



Issue date 2019-10-10

Version: 2.1.1

12 NC: 8670 001 65377
EAN: 48 95229 10668 0

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com