



DVD player

- USB 2.0

TAEP200/12

Enjoy it all - from DVD & USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player TAEP200 delivers your movies and music entertainment experience.

Benefits

Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time
- Smart Picture provides personalized image settings

Play all your movies and music

- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

Features

12-bit/108MHz video processing



12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture.

The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.


PHILIPS

Plays it all




Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD +R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

Screen Fit

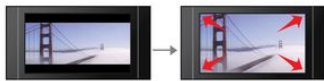

Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen

USB Media Link

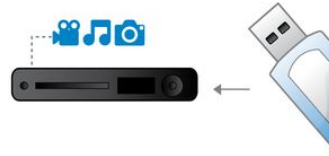

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Smart Picture



Smart Picture provides the optimum picture settings for color, brightness, saturation, contrast, sharpness, and so on, to enhance your overall viewing experience at all times.

Specifications

[field not found 'disclaimer_text']

File Format

Video	avi mpg
Audio	mp3 wma
Picture	JPG JPEG

Video Playback

Video supported formats	MPEG1 MPEG2
Video disc playback system	NTSC PAL AUTO
Audio format	Dolby Digital WMA MP3

Optical Playback Media

Playable Discs	CD CDDA CD-R/CD-RW DVD DVD +R/+RW DVD -R/-RW SVCD VCD
----------------	--

Still Picture Playback

Compression format	JPEG
Picture Enhancement	Flip photos Rotate Slideshow Slideshow with MP3 playback Zoom

Audio Playback

Audio supported formats	MP3 WMA
MP3 bit rates	16 kbps - 320 kbps
WMA bit rates	16 kbps - 320 kbps

Picture/Display

D/A converter	12 bit, 108 MHz
Picture enhancement	Video upsampling

Connectivity

Front Connections	USB 2.0
Rear Connections	Analog audio Left/Right out Composite video (CVBS) output HDMI output

Convenience

Child Protection	Child Lock Parental Control
------------------	--------------------------------

Power

Power consumption	15 W
Power supply	100-240V 50/60 Hz
Standby power consumption	< 0.5 W

Sound

Crosstalk (1kHz)	> 100 dB
D/A converter	24 bit, 192 kHz
Distortion and Noise (1kHz)	<= -65 dB
Dynamic Range (1kHz)	> 90 dB
Frequency response	30 - 20000 Hz
Signal to noise ratio	>= 90 dB
Sound System	Dolby Digital

Accessories

Included accessories	2 x AAA Batteries Audio/Video cable Remote Control Quick start guide World Wide Warranty leaflet Safety warranty sheet
----------------------	---

Design

Color Black

Product dimensions

Height 4.3 cm
Width 22.5 cm
Depth 19.6 cm
Weight 0.82 kg

Packaging dimensions

Packaging type Box
Number of products included 1
Type of shelf placement Standing
Height 24.4 cm
Width 24.7 cm

Depth 8 cm
Gross weight 1.25 kg
Nett weight 0.95 kg
Tare weight 0.3 kg
EAN 48 95229 10444 0

Outer Carton

Number of consumer packagings 8
Length 51.2 cm
Width 33.5 cm
Height 26 cm
Gross weight 10.6 kg
Nett weight 7.6 kg
Tare weight 3 kg
GTIN 1 48 95229 10444 7



data subject to change
2023, June 19

Version: 5.0.5
EAN: 4895229104440

© 2023 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com