

TAH8505



User manual

Register your product and get support at www.philips.com/support

Contents

1	Important safety instructions Hearing Safety General information	2 2 2
2	Your Bluetooth over-ear headphones What's in the box Other devices Overview of your Bluetooth wireless headset	3 3 3
3	Get started Charge the battery Pair the headphones with your mobile phone	5 5 5
4	Use your headphones Connect the headphones to a Bluetooth device Manage your calls and music	6 6 6
5	Technical data	8
6	Notice Declaration of conformity Disposal of your old product and battery Remove the integrated battery Compliance with EMF Environmental information Notice of compliance	9 9 9 9 9 10
7	Trademarks	11
	Frequently asked questions	12

1 Important safety instructions

Hearing Safety



4

Danger

 To avoid hearing damage, limit the time you use headphones at high volume and set the volume to a safe level. The louder the volume, the shorter the safe listening time is.

Be sure to observe the following guidelines when using your headset.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume continuously upwards as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Using headphones with both ears covered while driving is not recommended and may be illegal in some areas while driving.
- For your safety, avoid distractions from music or phone calls while in traffic or other potentially dangerous environments.

General information

To avoid damage or malfunction:



Caution

- Do not expose headphones to excessive heat
- · Do not drop your headphones.
- Headphones shall not be exposed to dripping or splashing.
- Do not allow your headphones to be submerged in water.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives.
- If cleaning is required use a soft doth, if necessary dampened with a minimum amount of water or diluted mild soap, to clean the product.
- The integrated battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Never use your headphones when you are operating a motor vehicle, riding a bicycle, running or walking in traffic areas. It is dangerous and illegal in many places.

About operating and storage temperatures and humidity

- Operating temperature: 0°C (32°F) to 40°C (104°F)
- Storage temperature: -10°C (14°F) to 45°C (113°F)
- Operating humidity: 8% 90% RH (No condensation)
- Storage humidity: 5% 90% RH (No condensation)
- Maximum operating altitude: 3000m
- Battery life may be shorter in high or low temperature conditions.

2 Your Bluetooth over-ear headphones

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. With this Philips over-ear headphones, you can:

- enjoy convenient wireless handsfree calls;
- enjoy and control wireless music;
- switch between calls and music;
- · enjoy noise cancelation.

What's in the box



Philips Bluetooth over-ear headphones Philips TAH8505



USB charging cable (for charging only)



Audio cable



Quick start guide




Carrying case

Other devices

A mobile phone or device (e.g. note-book, PAD, Bluetooth adapters, MP3 players etc) which supports Bluetooth and is compatible to the headset (see 'Technical data' on page 8).

Overview of your Bluetooth wireless headset





- 1 Touch Control Panel
- ② Audio jack
- 3 Microphone
- 4 LED indicator
- 5 ANC/Ambient sound LED indicator
- 6 ் (Power button)
- 7 Micro USB charging slot

3 Get started

Charge the battery



Note

- Before you use your headset for the first time, place the headsets in the charging case and charge the battery for 3 hours for optimum battery capacity and lifetime.
- Use only the original USB charging cable to avoid any damage.
- Finish your call before charging the headset, as connecting the headset for charging will power the headset off.

Charging case

Connect the supplied USB charging cable to:

- The micro USB charging slot on the headphones and;
- The charger/USB port of a computer.
- → LED turns red during charging and turns off when the headphones in fully charged.



Tip

· Normally, a full charge takes 2 hours.

Pair the headphones with your mobile phone

Before you use the headphones with your mobile phone for the first time, pair it with a mobile phone. A successful pairing establishes a unique encrypted link between the headphones and mobile phone. The headphones store the last 8 devices in the memory. If you try to pair more than 8 devices, the earliest paired device is replaced by the new one

- 1 Make sure that the headphones are fully charged and turned off.
- 2 Press and hold \circlearrowleft for 5 seconds until the blue and red LED flashes alternately.
 - → The headphones remain in pairing mode for 2 minutes.
- 3 Make sure that the mobile phone is turned on and its Bluetooth feature is activated.
- 4 Pair the headphones with the mobile phone. For detailed information, refer to the user manual of your mobile phone.

The following example shows you how to pair the headphones with your mobile phone.

→ Activate the Bluetooth feature of your mobile phone, select Philips TAH8505



Philips TAH8505

4 Use your headset

Connect the headset to your Bluetooth device

- Turn on your mobile phone/ Bluetooth device.
- 2 Press and hold the on/off button to turn the headphones on.
 - → The blue LED will turn on 3s.
 - → The headphones are reconnected to the last connected mobile phone/ Bluetooth device automatically.



 If you turn on the mobile phone/Bluetooth device or activate the Bluetooth feature after turning on the headphones, you have to reconnect the headphones and mobile phone/ Bluetooth device manually.



Note

- If the headphones fail to connect to last connected Bluetooth device within range in 2 minutes, it will change to pairing mode, then will switch off automatically if it's still not connected to any Bluetooth device 8 minutes later when ANC off.
- If the headphone has no any connection history and doesn't connect any Bluetooth device whith 2 minutes, it will stop pairing and enter idle mode.

Wired Connection

You can also use the headphones with the audio cable provided. Connect the supplied audio cable to the headphones and external audio device.



Tin

 The function keys will be disabled when using line-in mode.

Manage your calls and music

On/off

Button	Operation
Power	Press and hold
button	for 3 seconds.
Power	Press and hold
button	for 3 seconds.
	→ The blue
	LED is
	on and
	fades
	out.
	Power button

Music control

Task	Button	Operation
Play or	Power	Press once.
pause music.	button	
Adjust volume.	Touch Control Panel	Swipe up/ Swipe down
Next track.	Power button	Push down
Previous track.	Power button	Push up

Call control

Task	Button	Operation
Pick up/ hang	Power	Press once
up a call.	button	
Reject call.	Power button	Press twice
Answer new call during a call.	Power button	Press once
Reject new call during a call.	Power button	Press twice

Task	Button	Operation
Hang up the current call and active the other call	Power button	Press once
Switch call when answered two calls	Power button	Press twice
Switch phone and head- phone when on a call	Power button	Press twice

ANC control

Task	Button	Operation
ANC ON /OFF/	Touch	Tap once
Ambient sound	Control	
	Panel	

Voice Assistant

Task	Button	Operation
Wake up the	Touch	Cover &
default	Control	Hold 2
voice assistant	Panel	seconds

Other headphones indicator status

Lia a dia basa a a atatusa	Localitation in the control of the c
Headphones status	Indicator
The headphones	The blue LED is
are connected	on.
to a Bluetooth	
device, while the	
headphones in	
standby mode	
or while you are	
listening to music.	
The headphones	The LED flashes
are ready for	blue and red
pairing.	alternately.
The headphones	The red LED
are on but not	flashes slowly.
connected to a	If no connection
Bluetooth device.	can be made, the
	headphones will
	turn itself off within
	8 minutes when
	ANC off.
Low battery level.	The red LED
Low battery level.	flashes once every
	2 seconds until it is
	out of power
Battery is fully	Red LED is off.
charged.	

5 Technical data

Headset

- Music time: 30 hours
 Talk time: 30 hours
 Standby time: 160 hours
- Standby time: 160 hours Charging time: 2 hours
- Rechargeable lithium polymer battery (680 mAh)
 Bluetooth version: 5.0
- Compatible Bluetooth profiles:
 - HFP (Hands-Free Profile)
 - A2DP (Advanced Audio Distribution Profile)
 - AVRCP (Audio Video Remote Control Profile)
- Supported audio codec: SBC
- Frequency range: 2.402-2.480 GHz
- Transmitter power: < 10 dBm
- Operating range: Up to 10 meters (33 feet)
- · Digital echo & noise reduction
- · Auto power off
- · Micro-USB port for charging



Note

• Specifications are subject to change without notice.

6 Notice

Declaration of conformity

Hereby, MMD Hong Kong Holding Limited declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on www.p4c.philips.com.

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.




This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery. Inform yourself about the local separate collection system for electrical and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health

Remove the integrated battery

If there is no collection/recycling system for electronic products in your country, you can protect the environment by removing and recycling the battery before disposing the headphones.

 Make sure the headset is disconnected from the charging case before removing the battery.

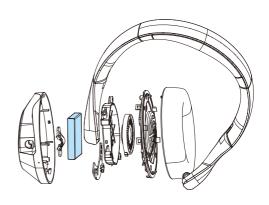

Compliance with EMF

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Notice of compliance

The device complies with the FCC rules, Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

FCC rules

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence- exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

IC Radiation Exposure Statement:

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

7 Trademarks

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Top Victory Investment Limited is under license. Other trademarks and trade names are those of their respective owners.

Siri

Siri is a trademark of Apple Inc., registered in the U.S. and other countries.

8 Frequently asked questions

My Bluetooth headset does not turn on. The battery level is low. Charge the headset

I cannot pair my Bluetooth headset with my Bluetooth device.

The Bluetooth is disabled. Enable the Bluetooth feature on your Bluetooth device and turn on the Bluetooth device before you turn on the headset.

How to reset pairing.

Let headphone stay in pairing mode (red and blue lights flash alternately), push the power button \circlearrowleft up and hold, double tap the touch control panel, then purple LED light will flash 3 times.

I hear but cannot control music on my Bluetooth device (e.g. play/pause/skip forward/backward).

Make sure the Bluetooth audio source supports AVRCP (see 'Technical data' on page 8).

The volume level of the headset is too low.

Some Bluetooth devices cannot link the volume level with the headset through volume sync. In this case, you have to adjust the volume on your Bluetooth device independently to achieve an appropriate volume level.

The Bluetooth device cannot find the headset.

- The headset may be connected to a previously paired device. Turn off the connected device or move it out of range.
- Pairing may have been reset or the headset has been previously paired with another device. Pair the headset with the Bluetooth device again as described in the user manual. (see 'Pair the headset with your Bluetooth device at the first time' on page 6).

My Bluetooth headset is connected to a Bluetooth stereo enabled mobile phone, but music only plays on the mobile phone speaker.

Refer to the user manual of your mobile phone. Select to listen to music through the headset.

The audio quality is poor and crackling noise can be heard.

- The Bluetooth device is out of range.
 Reduce the distance between your headset and Bluetooth device, or remove obstacles between them.
- Charge your headset.

The audio quality is poor when streaming from the mobile phone is very slow, or audio streaming does not work at all.

Make sure your mobile phone not only supports (mono) HFP but alos supports A2DP and is BT4.0x (or higher) compatible (see 'Technical data' on page 8).



Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.





