

PHILIPS

Cordless phone with answering machine

25 min answering machine

1.6" display/amber backlight

Handset speakerphone

D2651B



Talk Hands-free

Great sound reproduction, without having to hold the phone to your ear – so you can talk completely hands-free. A true plug-and-play device with a user-friendly menu and an inbuilt answering machine. A great chat has never been easier.

Eco-conscious product

- Low radiation and power consumption

Nice and simple

- Easy to read 1.6" (4.1 cm) graphical display with backlight
- Freestanding handset with a speaker for easy hands-free calls
- Menu in multiple local languages
- Programmable hot keys for quick dial
- Textured back cover for non-slip grip
- Up to 16 hours of talk time on a single charge
- Up to 25 minutes of messages on your answering machine
- Caller ID – so you always know who is calling*

Crystal clear sound

- The Parametric Equaliser delivers pure and clear sound
- Optimised antenna layout for great reception in any room
- Advanced sound testing and tuning for superb voice quality

Highlights

4.1-cm (1.6") graphical display

Easy to read 1.6" (4.1 cm) graphical display with backlight

Advanced sound testing



We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction for both handset and hands-free modes.

Caller ID*



Sometimes it's good to know who's calling before you answer. And our Caller ID lets you keep track of who's on the other end of the line.

Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment.

Handset speakerphone




Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Menu in local languages




Enjoy easy setup, navigation and control with intuitive menu available in local languages.

Non-slip grip

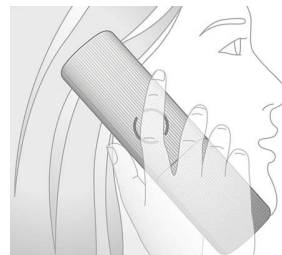

The rear of the handset is treated with a special texture for added comfort and better grip.

Optimised antenna layout

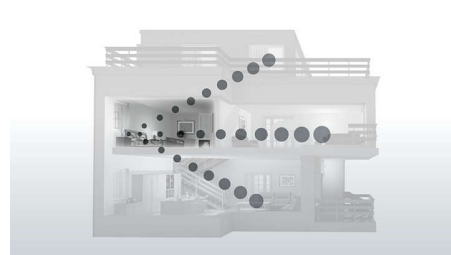

Our optimised antenna layout ensures strong and stable reception, even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

Parametric Equaliser



Our telephones use parametric equalisation in the digital sound processing to fine tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

Highlights

Programmable hot keys



Now calling the people you care about most is easier than ever. With simple one-touch dialling, you will never have to search for their number again. You can programme up to 2 keys for instant calling.

Up to 16 hours talk time



Up to 16 hours of talk time on a single charge

Up to 25 min. recording



Up to 25 minutes of messages on your answering machine

Specifications

Sound

Volume control on handset
Ringtones on handset: 10 polyphonic

Convenience

Menu structure in the handset: List Menu
Base Station keys: Paging key, Volume control, Answering machine keys
Speakerphone — talk hands-free
Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls
Signal strength indication
Signal strength indicator: 3 bar indicator
Battery level indicator: 3 bar battery icon
Date/Time display
Multi-base capability: 1
Battery charge indication
Programmable hot keys: Key 1 and 2
Keypad lock
Key tone on/off
Auto hang up
Up to 16 hrs talk time
Up to 180 hrs standby time
Charge time: 8 hours
Line cord length: 1.8 m
Power cord length: 1.8 m
Range: Open field <300 m; indoor <50 m
Non-slip grip: Circular texture

Power

Battery Capacity: 550 mAh
Mains power: AC 100-240 V ~50/60 Hz
Battery type: AAA NiMH Rechargeable
Power Consumption: <0.75 W

Packaging dimensions

Height: 13.6 cm
Packaging type: Carton
Type of shelf placement: Laying
Width: 18.5 cm
Depth: 6 cm
Number of products included: 1
EAN: 48 95229 12597 1
Gross weight: 0.405 kg
Net weight: 0.329 kg
Tare weight: 0.076 kg

Picture/Display

Display size: 4.1 cm/1.6"
Backlight colour: Amber
Display type: 1-line dot matrix + 1-line numeric + icons
Backlight: Yes

Answering Machine

Recording time capacity: up to 25 minutes
Pre-recorded OGM
Message counter on base: LED (Soft Amber)

Loud speaker on base

Answering Machine control:: from base and handset

Memory Capacity

Call log entries: 20 entries
Phonebook: 50 names and numbers
Redial List Capacity: Last 10 numbers
Phonebook store in the base

Security

Transmission encryption: Yes

SAR Value

Philips handsets: <0.1 W/kg

Eco Design

Full ECO Mode (NEMO)
Eco+

Network Features

Compatible: GAP

