

Philips  
5.1 Home theater

DVD

HTD3500K



## Powerful Surround Sound

from compact speakers

Bring the power of the cinema into your home! Pump up your home entertainment experience with exposed speaker drivers offering powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

### Great listening experience

- 300W RMS power delivers great sound for movies and music
- Dolby Digital for ultimate movie experience
- Exposed speaker drivers for powerful surround sound

### Simply enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- Karaoke for endless singing entertainment at home
- Audio in to enjoy music from iPod/iPhone/MP3 player

### Designed to enhance your cinema at home

- Modern design to complement your home environment

# PHILIPS


# Highlights

## 300W RMS power



300W RMS power delivers great sound for movies and music

## Dolby Digital

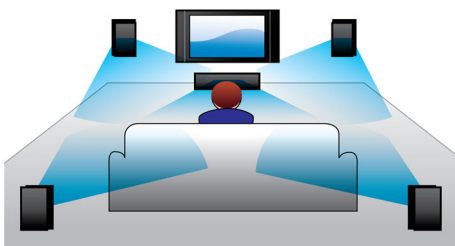

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music

with the superior sound quality of the Philips home cinema system.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

## Karaoke for endless singing



Karaoke for endless singing entertainment at home

## Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

## Modern design

Modern design to complement your home environment

## Exposed speaker drivers



Exposed speaker drivers for powerful surround sound



# Specifications

## Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1
- Cube speaker output power: 5 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W

## Loudspeakers

- Loudspeaker types: 5 x Cube speakers
- Drivers per Cube speaker: 1 x 2.5" woofer
- Cube speaker freq range: 150 - 20k Hz
- Cube speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Connectivity

- Front Connections: Microphone In, Music iLINK, USB
- Rear Connections: AUX in, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital optical in, HDMI 1.4 output (ARC), Fixed FM Antenna

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mpeg, mpg

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4

## Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p),

Progressive scan, Video upscaling

## Power

- Power consumption: 55 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5W

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 84.5 x 89 x 89 mm
- Center Speaker Weight: 0.28 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 89 x 89 mm
- Front Speaker Weight: 0.28 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 84.5 x 89 x 89 mm
- Rear Speaker Weight: 0.28 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 160 x 267.5 x 265 mm
- Subwoofer cable length: 2 m
- Subwoofer Weight: 2.5 kg
- Packaging (W x H x D): 520 x 310 x 377 mm
- Weight incl. Packaging: 9 kg

## Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, HDMI cable, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

## Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

## Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 52 x 37,7 x 31 cm
- Gross weight: 7,38 kg
- Nett weight: 6,33 kg
- Tare weight: 1,05 kg
- EAN: 87 12581 65914 1

## Packaging dimensions

- Packaging type: Dummy
- Number of products included: 1
- Type of shelf placement: Dummy
- Packaging dimensions (W x H x D): 52 x 31 x 37,7 cm
- Gross weight: 7,38 kg
- Nett weight: 6,33 kg
- Tare weight: 1,05 kg
- EAN: 87 12581 65914 1

## Product dimensions

- Product dimensions (W x H x D): 36 x 5,8 x 32,5 cm
- Weight: 2,3 kg



Issue date 2015-08-07

Version: 5.1.3

12 NC: 8670 000 94919  
EAN: 87 12581 65914 1

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)