

Philips
Cordless phone

1.8" display/ white backlight

Handset speakerphone
2 handsets

D2302B



Enjoy the view

The Philips D230 Cordless Phone packs HQ Sound and a large, clear display in a sleek, ergonomic design. Enjoy smart privacy modes, great comfort and sound– all in easy handsfree style.

Nice and simple

- Easy to read 4.6 cm (1.8") display with white backlight
- Freestanding handset with a speaker for easy handsfree calls
- Textured back cover for non-slip grip
- Programmable hot keys for quick dial
- Up to 16 hours talk time on a single charge
- Privacy settings: call block & call barring
- Caller ID – so you always know who is calling*

Crystal clear sound

- Parametric Equalizer delivers pure and clear sound
- Advanced sound testing & tuning for superb voice quality

Eco-conscious product

- Zero power emission when ECO+ mode is activated

PHILIPS

Cordless phone
1.8" display/ white backlight Handset speakerphone, 2 handsets

D2302B/90

Highlights

4.6cm (1.8") display

Easy to read 4.6 cm (1.8") display with white backlight

Advanced sound testing

We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction.

Caller ID*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.


Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful

if you want to share the call with others or simply multitask.

Non-slip grip

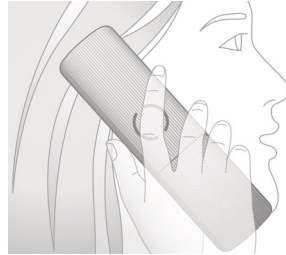

The rear of the handset is treated with a special texture for added comfort and better grip.

Parametric Equalizer



Our telephones use parametric equalization in the digital sound processing to fine-tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

Programmable hot keys



Now calling the people you care about most is easier than ever. With simple one-touch dialing, you will never have to search for their

number again. You can program up to 2 keys for instant calling.

Up to 16 hours talk time



Up to 16 hours talk time on a single charge

Multiple privacy settings

Value your privacy and quiet at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you chose to blocked, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls to specific numbers starting with certain digits (for example, pay per call numbers).

Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment. The emitted radiation is reduced by up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

Specifications

Convenience

- Menu structure in the handset: List Menu
- Speakerphone - talk handsfree
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3-bar indicator
- Battery level indicator: 3-bar battery icon
- Intercom - multiple handsets
- Date / Time display
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto hang up
- Multi handset capability: Up to 4
- Number of keys: 20
- Base Station keys: Paging key
- Up to 16 hrs talk time
- Charge time: 8 hours
- Line cord length: 1.8m
- Power cord length: 1.8m
- Range: Open field <300m; indoor <50m
- Block callers/ Blacklist*: Restrict the phone from ringing on specific incoming numbers
- Non-slip grip: Uniform texture
- Up to 200 hrs standby time

Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic
- HQ-Sound

Picture/Display

- Display size: 4.6cm / 1.8"
- Display type: 1-line dot matrix + 1-line numeric +

- icons
- Backlight: Yes
- Backlight color: White

Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: 10 last numbers
- Call log entries: 20 entries
- Phonebook store in the base

Power

- Battery Capacity: 500 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz

Security

- Transmission encryption : Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- Eco+

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 18.4 x 13.5 x 8.5 cm
- Gross weight: 0.602 kg
- Nett weight: 0.506 kg
- Tare weight: 0.096 kg
- EAN: 48 95185 61143 3



Issue date 2019-06-02

Version: 3.0.2

12 NC: 8670 001 26916
EAN: 48 95185 61143 3

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

**This feature requires additional subscription of Caller ID service.
Please check with your local network operator for details.