



Philips 3000 series  
Blu-ray Disc/DVD player

**DivX Plus HD**

Wi-Fi-Ready  
BD-Live



**BDP3300**

## Get the Blu-ray cinematic experience at home

Bring the magic of movies home in full High Definition with Blu-ray and DivX Plus HD on this sleek player. Conveniently enjoy your favourite video and music files directly from USB flash drives or portable hard disks with USB 2.0 Media Link.

### See more

- Blu-ray Disc playback for sharp images in full HD 1080p
- DivX Plus HD Certified for high-definition DivX playback
- Access your favourite YouTube videos and Picasa photos easily

### Hear more

- Dolby TrueHD for high fidelity sound
- Dolby Digital DTS2.0 for the ultimate movie experience


### Engage more

- Turn your Smartphone into a remote for Philips AV products
- Wi-Fi-n Ready\* for faster, wider wireless performance
- USB 2.0 plays video/music from USB flash/hard disk drive

# PHILIPS

# Highlights

## Blu-ray Disc playback

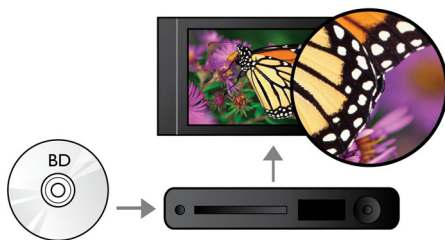


Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound — so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allows a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features such as pop-up menus bring a whole new dimension to home entertainment.

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet directly on your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Dolby TrueHD

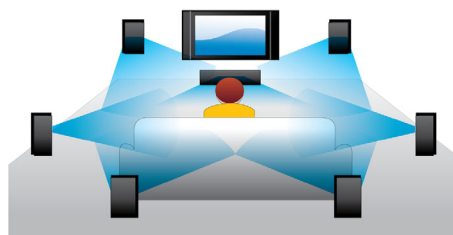

Dolby TrueHD delivers the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.

## Dolby Digital DTS2.0

Dolby Digital DTS2.0 for the ultimate movie experience

## Wi-Fi-n Ready



Wi-Fi-n Ready\* for faster, wider wireless performance

## Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply

ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector, then sit back and enjoy the best of YouTube and Picasa.

## MyRemote app



The Philips MyRemote app lets you use your iPhone or iPod Touch or Android Smartphone as a remote to control your Philips networked AV products. The app automatically recognises your\* Philips Blu-ray player, Home theatre or Streamium audio system connected to your home Wi-Fi network, and gives you instant control over the devices from anywhere in your home. And if you have more than one Philips networked AV product, the app will allow you to switch between them and control each one independently. This free app is created exclusively by Philips.

## USB 2.0

The Universal Serial Bus or USB is an industry standard that allows high-speed, easy connection of peripherals to PCs, consumer electronics and mobile products. The USB 2.0 provides better and faster performance - up to 40 times quicker than the USB 1.0 and with a data transfer rate of up to 480 Mbps from the original 12 Mbps. When plugged in, everything configures automatically. With USB 2.0, simply plug in your USB portable devices or hard disk drives, select the movie, music or photo and play away.



# Specifications

## Accessories

- Compatible accessories: WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- BD Region Code: B
- DVD Region Code: 2
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, XviD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Colour, x.v. Colour

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, DivX, m2ts, mkv, mp4, mpeg, mpg

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Connectivity

- Front Connections: USB 2.0/Wi-Fi dongle slot
- Network connections: Wi-Fi Ready (802.11 g/n)\*
- Rear Connections: Analogue audio Left/Right out,

- Composite video (CVBS) output, Digital coaxial out, Ethernet, HDMI output
- PC network link: DLNA 1.5 certified

## Convenience

- BD-Live (1 GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: Czech, Danish, Dutch, English, Finnish, French, German, Italian, Norwegian, Polish, Portuguese, Spanish, Swedish, Turkish

## Dimensions

- Product (W x H x D): 435 x 38 x 212 mm
- Product weight: 1.37 kg
- Packaging (W x H x D): 495 x 87 x 300 mm
- Weight incl. Packaging: 2.16 kg

## Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- D/A converter: 12 Bit/148 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Power

- Power consumption: 12 W
- Power supply: 230-240 V, 50 Hz
- Standby power consumption: 0.25 W

## Sound

- D/A converter: 24-bit, 192 kHz
- Dynamic Range (1 kHz): =80 dB
- Frequency response: (20 kHz) ±0.5 dB (Max./Min. 2ch, DVD) Hz
- Signal to noise ratio: 80 dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out



Issue date 2016-09-20

Version: 5.2.6

12 NC: 8670 000 85586  
EAN: 87 12581 62841 3

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Philips Wi-Fi USB adapter WUB1110 required (sold separately)