

Philips  
Soundbar speaker

2.1 CH wireless subwoofer

Bluetooth® aptX, AAC and NFC  
1 HDMI in and HDMI out ARC  
320 W

HTL5140B



## Powerful sound for any TV

with wireless subwoofer

HTL5140 is a slim Soundbar with a maximum output of 320 W. A premium metal finish gives it style and it can be mounted on the wall or placed on a table top. HDMI ARC, one HDMI in for video and Bluetooth® with aptX® and AAC for wireless music.

### Designed to enhance your living space

- Wireless subwoofer for clutter-free placement

### Connect and enjoy all your entertainment

- Bluetooth® (aptX® and AAC) for wireless music streaming
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI ARC to access all the sound from your TV
- Connect to one HDMI in for great picture and sound quality
- One-Touch with NFC-enabled smartphones for Bluetooth pairing

### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Powerful 320-W sound output
- Dolby Digital and DTS for great surround sound
- Mylar material tweeter for high definition sound
- 8" woofer for thumping bass

# PHILIPS

## Soundbar speaker

2.1 CH wireless subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in and HDMI out ARC, 320 W

HTL5140B/12


# Highlights

## Powerful 320-W sound output




Two units, each one with 4 woofers and 2 tweeters inside, keep sound perfectly balanced. As a whole, they output 320 W of sound, which is matched by powerful bass from a 17-l subwoofer box.

## Dolby Digital and DTS

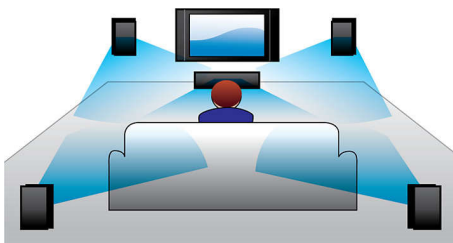

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

## Bluetooth® (aptX® and AAC)

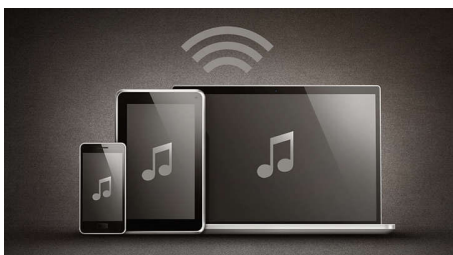

Bluetooth® (aptX® and AAC) for wireless music streaming

## NFC technology




Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## Mylar tweeter

The unique Mylar material used in the tweeters ensures incredible sound definition. The full range of high frequencies is perfectly reproduced, so music comes to life and films sound like they were meant to. An integral part of the 2-way design, the tweeter improves high frequencies resulting in cleaner, more spacious and more accurate sound in tandem with the woofer. Improved clarity means you can identify all the different elements in the music. Listen to the individual instruments, hear the vocals more clearly, enjoy your music in refreshing detail.

## Virtual Surround Sound

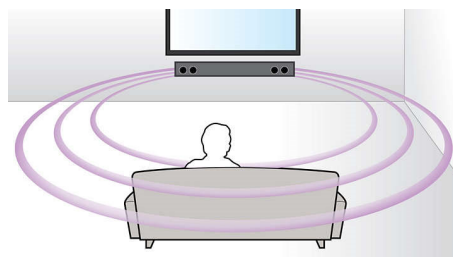

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced

spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Wireless subwoofer

Wireless subwoofer for clutter-free placement

## HDMI ARC

HDMI ARC to access all the sound from your TV

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## One HDMI in available

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio one HDMI in output into the connection on your non-3D AV receiver.

## 8" woofer for thumping bass

8" woofer for thumping bass

## Soundbar speaker

2.1 CH wireless subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in and HDMI out ARC, 320 W

HTL5140B/12

# Specifications

### Sound

- Sound Enhancement: Treble and Bass Control, DoubleBass
- Sound System: DTS Digital Surround, Dolby Digital
- Subwoofer output power: 220 W
- Speaker output power: 100 W
- Total Power RMS @ 10% THD: 320 W

### Loudspeakers

- Subwoofer driver: 1 x 8" woofer
- Subwoofer type: Wireless subwoofer
- Drivers per Soundbar: 2 X 1" Mylar tweeters, 4 racetrack woofers

### Connectivity

- Integrated Connections: Bluetooth APT-X, NFC
- Rear Connections: Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, Audio-in 3.5 mm jack, USB
- Wireless connection: Bluetooth APT-X and AAC

### Outer Carton

- EAN: 87 12581 70694 4
- Length: 48 cm
- Number of consumer packages: 1
- Width: 35.5 cm
- Gross weight: 11.2 kg
- Height: 35.2 cm
- Net weight: 8.943 kg
- Tare weight: 2.257 kg

### Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC), Content Type

### Power

- Power supply: 110-240V
- Standby power consumption: <0.5 W

### Product dimensions

- Height: 4.9 cm
- Width: 104.5 cm
- Depth: 7.2 cm
- Weight: 8.67 kg

### Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

### Design

- Wall mountable

### Dimensions

- Main Unit (W x H x D): 1045.2 X 48.9 X 66.5 mm
- Subwoofer (W x H x D): 208 x 301 x 403 mm



Issue date 2024-05-02

Version: 7.2.6

EAN: 87 12581 70694 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)