

Philips  
Digital AV receiver system



HTR3465



## Amplify and simplify your home entertainment

Thinking of transforming your DVD player or recorder into a complete home entertainment system? Just match them with this stylish digital receiver system to get a theater-like audio/video experience and accurate music reproduction.

### Connect and enjoy multiple sources

- Multiple digital inputs for quality sound from other sources
- Built-in FM tuner
- MP3 Link plays music from portable media players

### Brings audio to life

- Advanced Class D Amplifier for compact, powerful sound
- DTS, Dolby Digital and Pro Logic II surround sound


### Easy to set up and use

- Quick and easy set-up for no-fuss installation
- Easy-fit™ connectors with color-coding for a simple set-up

**PHILIPS**  
sense and simplicity

# Highlights

## Multiple digital inputs

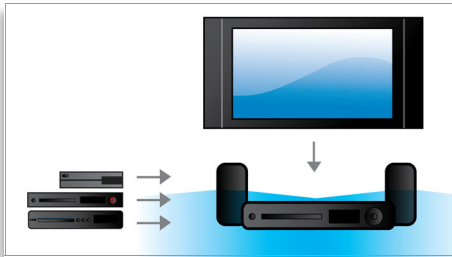


Multiple digital inputs for quality sound from other sources

## Advanced Class D Amplifier



Advanced Class D Amplifier for compact, powerful sound


## DTS, DolbyDigital, ProLogic II

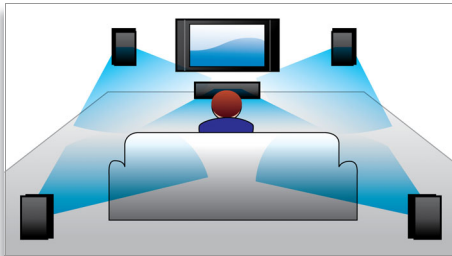

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by

processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## Built-in FM tuner

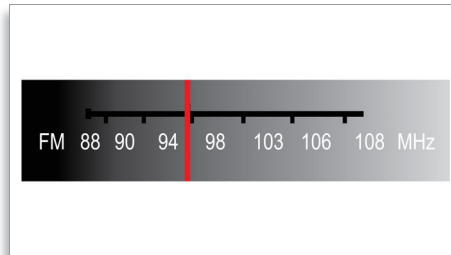


Built-in FM tuner

## MP3 Link




MP3 Link allows playback of MP3 files, directly from your portable media player, on your home theater system. Simply connect your portable MP3 player to the built-in MP3 Link jack and enjoy your MP3 music in the superior sound quality delivered by the Philips home theatre system. MP3 Link brings your portable music into the comfort of your living room.

## Quick and easy set-up

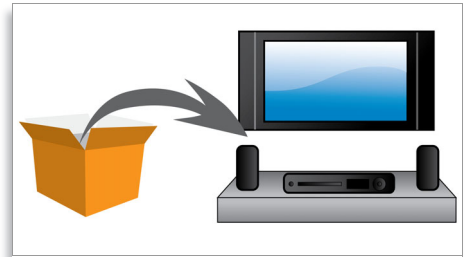

Quick and easy set-up for no-fuss installation

## Easy-fit™ connectors

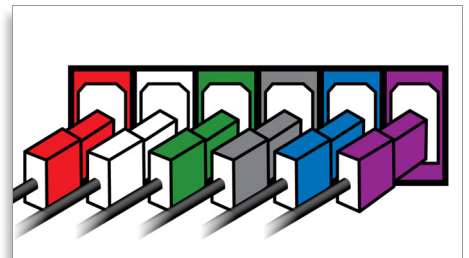

Color-coded connectors provide a simple and user-friendly solution to connect the speakers and subwoofer to the center unit of the home entertainment system simply by plugging the connectors in the matching colored interface at the rear of the center unit.



# Specifications

## Sound

- Total Power (RMS): 600 W
- Output power (RMS): 6 x 115W
- D/A converter: 24 bit, 192 kHz
- Frequency response: 150 - 18000 Hz
- Signal to noise ratio: >60 dB
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Sound Enhancement: Treble and Bass Control, Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Concert, Drama, Action, Classic, Rock, Gaming, Lounge, Sports

## Tuner/Reception/Transmission

- Tuner Bands: FM
- No. of preset Audio Channels: 40

## Connectivity

- Front / Side connections: Headphone out, MP3 Line-in
- Rear Connections: AUX in, Easy-Fit speaker connectors, FM Antenna, Digital coaxial in, Digital optical in

## Power

- Power supply: 120/230VAC, 50/60Hz
- Standby power consumption: < 1 W
- Power consumption: 100 W

## Loudspeakers

- Satellite speaker freq range: 150-20000 Hz
- Satellite speaker impedance: 4 ohm
- Satellite speaker drivers: 3" full range woofer
- Center Speaker: 3 way, Magnetically shielded
- Center speaker drivers: 1 x 2" tweeter, 2 x 2.5" woofers
- Center speaker impedance: 8 ohm
- Center freq range: 150-20000 Hz
- Subwoofer type: Passive
- Subwoofer driver: 6.5" high efficiency woofer
- Subwoofer impedance: 8 ohm
- Subwoofer freq range: 40-150 Hz

## Accessories

- Included Accessories: Audio Cable, Coax digital audio cable, User Manual, 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, World Wide Warranty leaflet, MP3 Line-in cable

## Dimensions

- Set dimensions (W x H x D): 435 x 58 x 360 mm
- Set weight: 2.8 kg
- Surround Speaker dimensions (W x H x D): 103 x 203 x 71 mm
- Surround speaker Weight: 0.45 kg
- Center speaker dimensions (W x H x D): 440 x 105 x 75 mm
- Center Speaker Weight: 1.29 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 5.08 kg
- Packaging dimensions (W x H x D): 555 x 515 x 310 mm
- Weight incl. Packaging: 14.5 kg

## Outer Carton

- EAN: 87 12581 38949 9
- Gross weight: 14.6345 kg
- Outer carton (L x W x H): 55.5 x 51.5 x 31 cm
- Nett weight: 12.3765 kg
- Number of consumer packagings: 1
- Tare weight: 2.258 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 55.5 x 31 x 51.5 cm
- EAN: 87 12581 38949 9
- Gross weight: 14.6345 kg
- Nett weight: 12.3765 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.258 kg

## Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 kg



Issue date 2009-11-06

Version: 3.0.9

12 NC: 8670 000 36345  
EAN: 87 12581 38949 9

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)